 





15 – Retail Cables





Note: For cable block diagrams, refer to MDE-4334 Commercial and Retail Series Atlas Start-up/Service Manual.





Standard Cables




Part Description	Current Part	Previous Part
Main AC Power Cable and Conduit Assembly	M04850A006	-
Main AC Cable	T19983-G1	-
Main DC Interface Cable (obsolete, see note)	M04658A001	-
LCD Main Display Cable	T17768-G1	-
Backlight Cable	T19872-G1	-
Manager Keypad Cable and Controller to Interface Cable	R19951-G1	-
Cable Two-wire Assembly	R20412-G3	-
Controller to Interface Cable	R19939-G1	-
Pulser Cable	R19072-G1	-
Motor Relay Cable 115 V	M04659A001	-
Motor Relay Cable 230 V	M04659A002	-
Motor Relay Cable 380 V	M04659A003	-
Power Select Plug for 115 V Power Supply	N21120-G6	-
Power Select Plug for 220 V Power Supply	N21120-G8	-
Power Select Plug for 230 V Power Supply	N21120-G9	-
Power Select Plug for 240 V Power Supply	N21120-G10	-
Varistor Assembly 115 V	T17448-G1	-
Varistor Assembly 230 V	T17448-G3	-
Electro-mechanical Totalizer	M00455A003	-
Totalizer Retail Atlas Cable	M04889A001	-
Display Panel Ground Cable Assembly (standard)	C06454	-
Front-load Conduit and Cable Assembly	M05969A002	-
Not Shown		
Audio Transducer	Q11763-01	-
Magnet, Actuator	Q12514-02	-
<i>Note: No replacement.</i>		



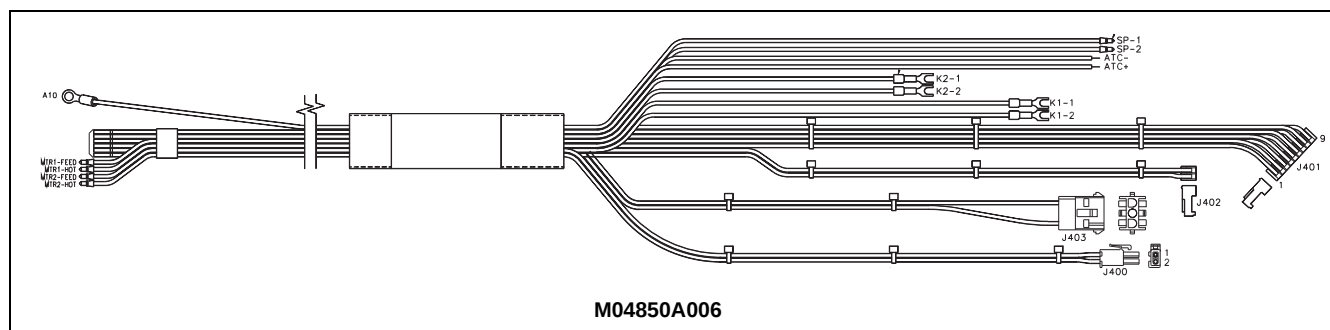


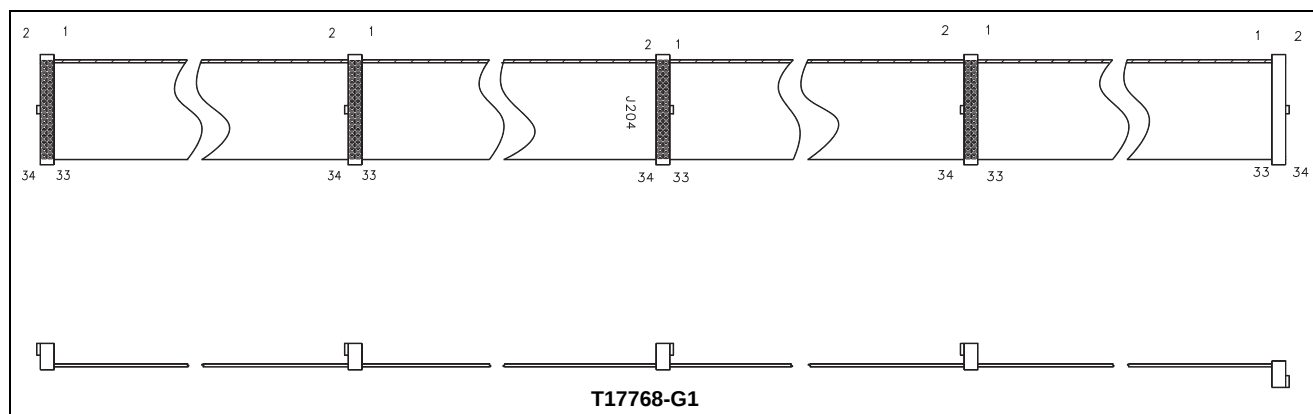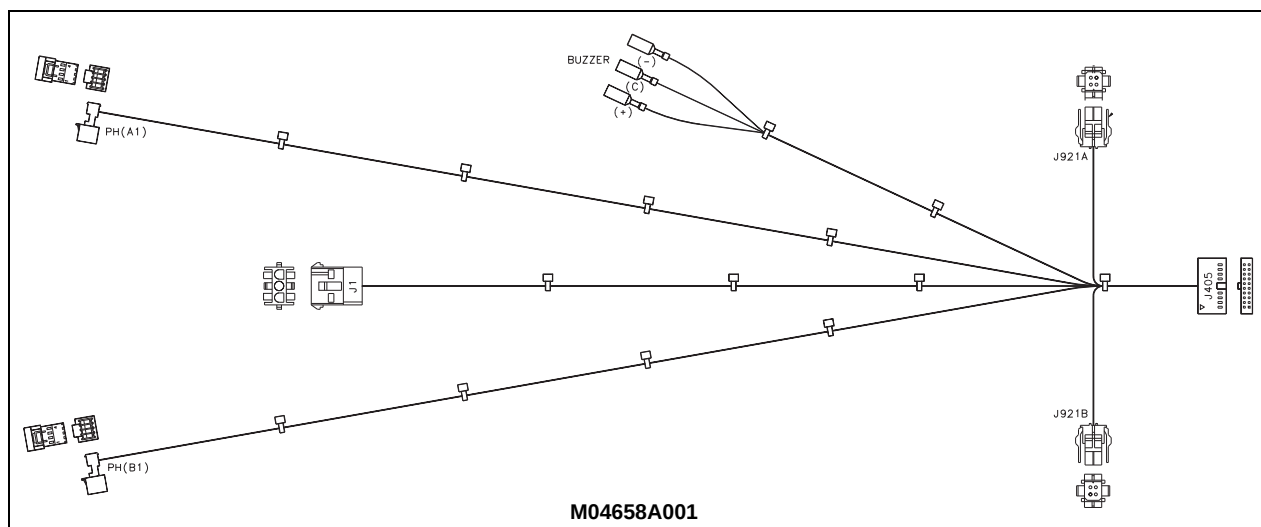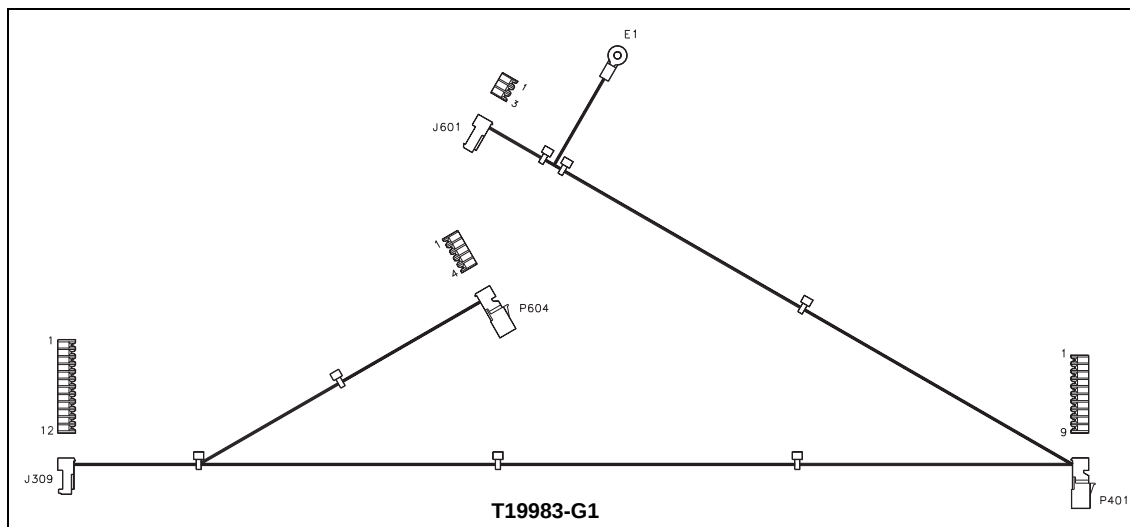   

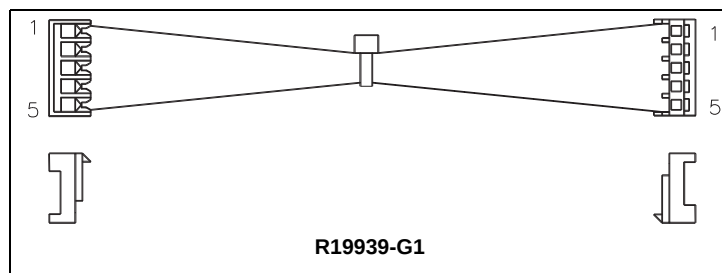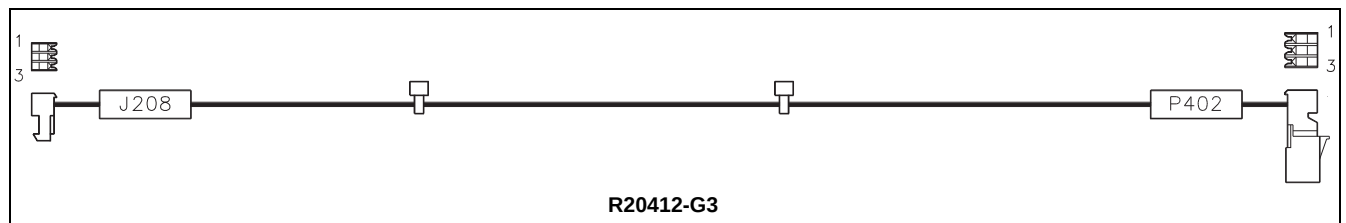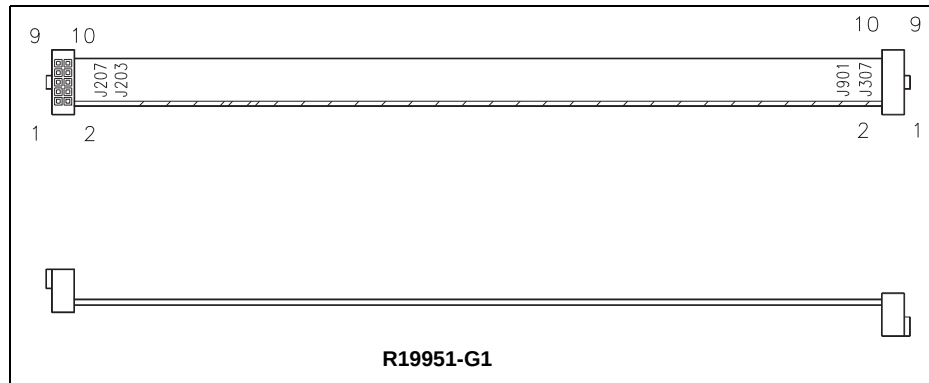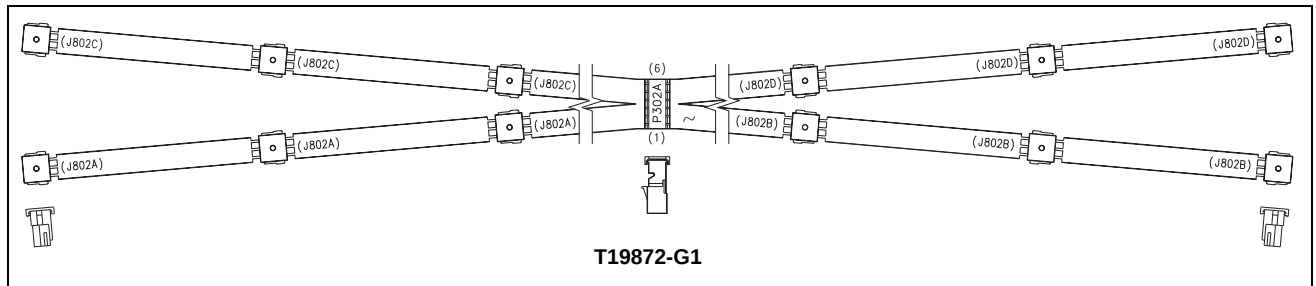    

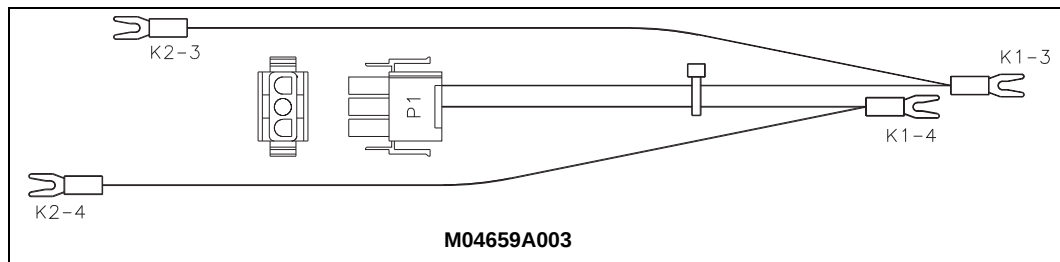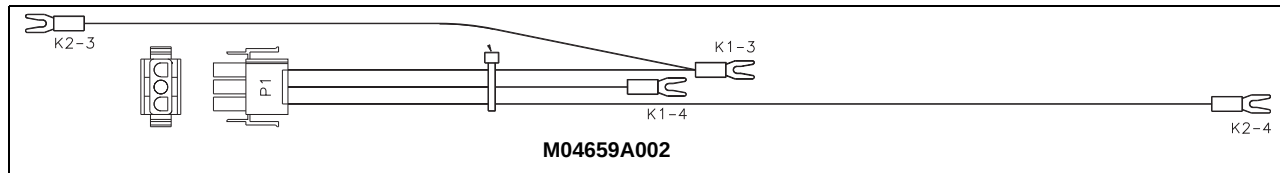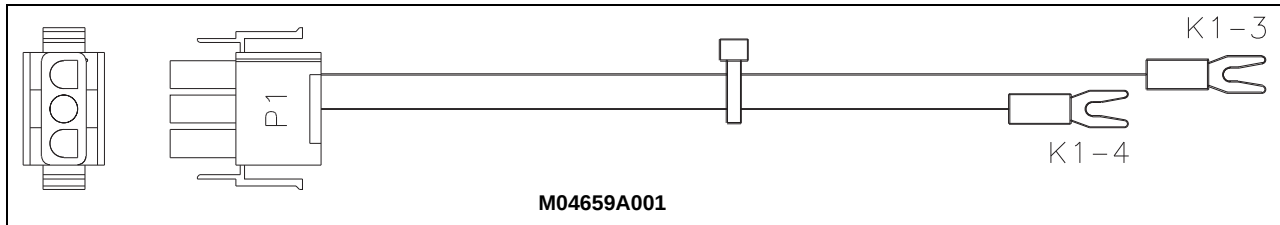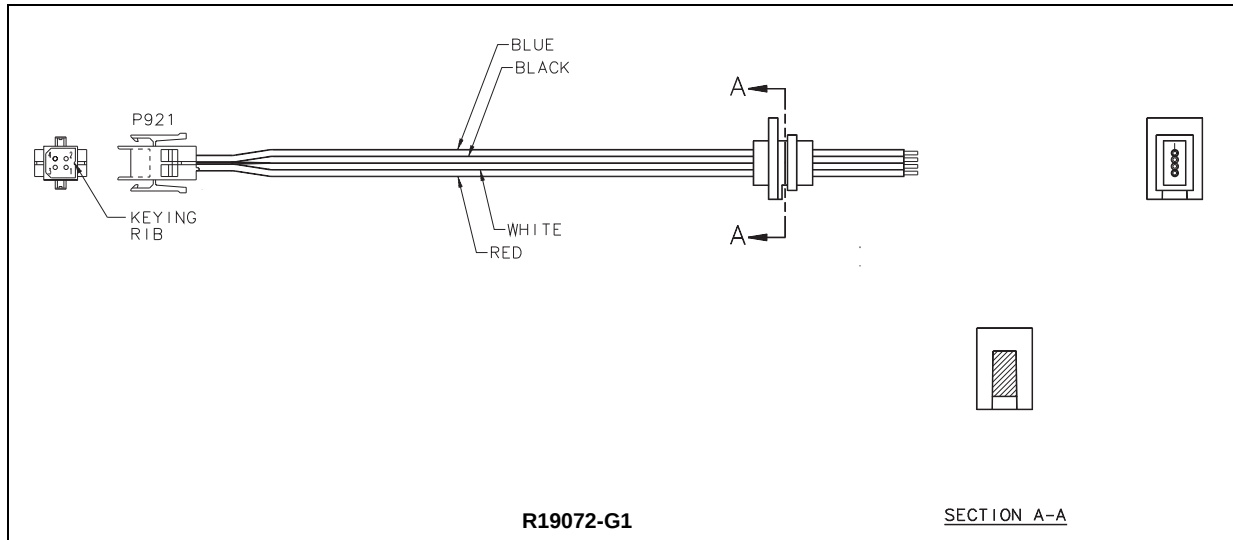    

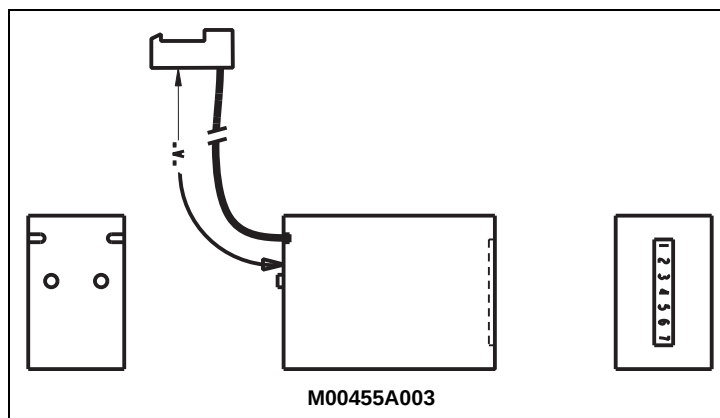    
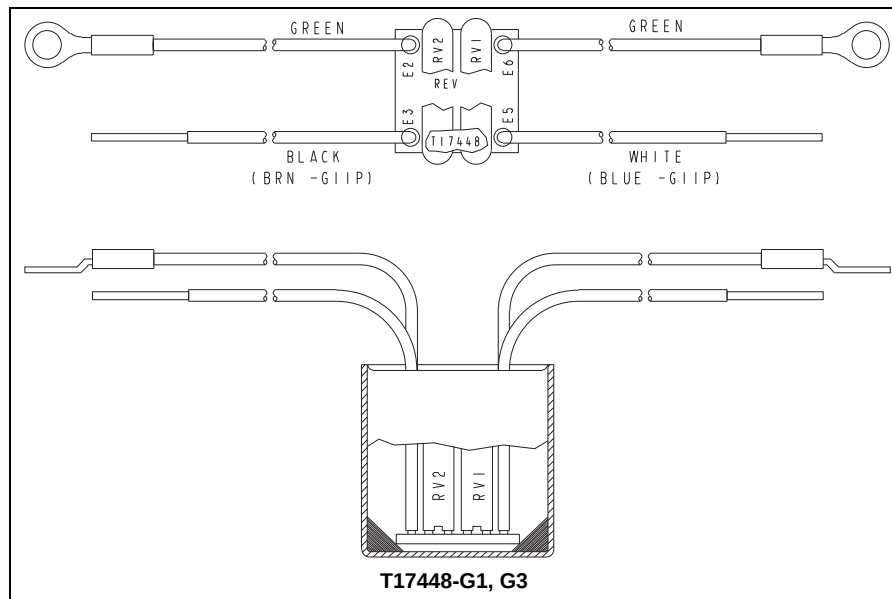 
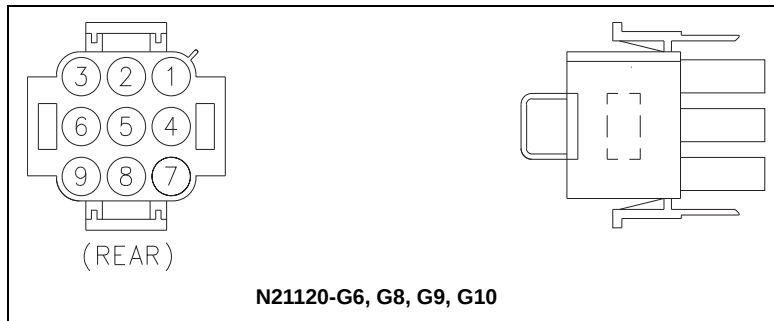 


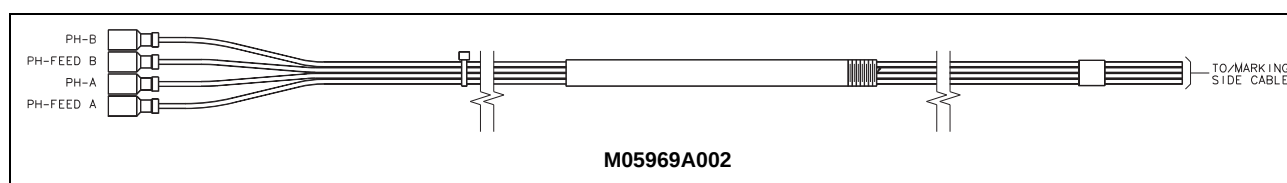
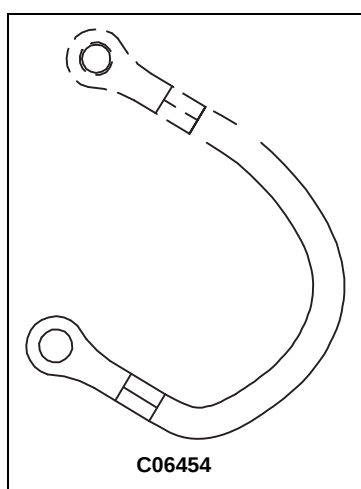
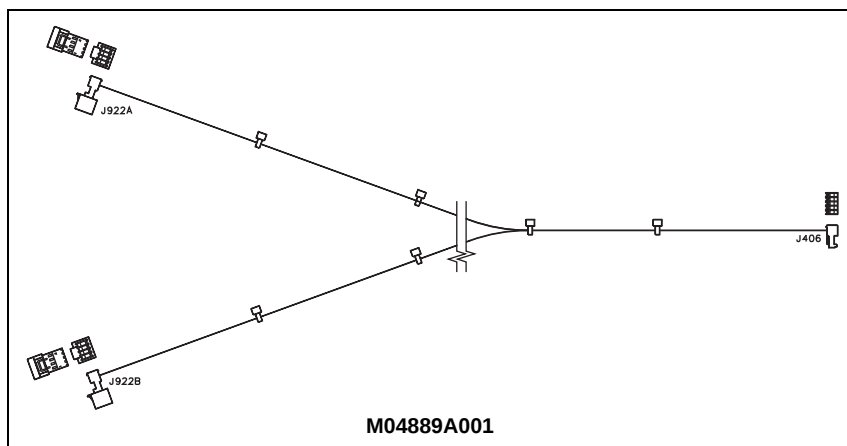


Pulse-out Option

Note: For cable block diagrams, refer to MDE-4334 Commercial and Retail Series Atlas Start-up/Service Manual.

Part Description	Current Part	Previous Part
DC Power Cable and Conduit Assembly, Pulse-out	M05189A004	-
Valve Feed Cable, Pulse-out	M03624A002	-
Relay Adapter Cable, Pulse-out	M05963A001	-
Reg/Logic Cable Assembly (see note 1)	R17995-G7	-
Reg/Logic Cable Assembly (see note 2)	R17995-G8	-
Pump Handle Cable	M05719A001	-
Notes: 1. Used with Pulse-out, Pulse-out and PPP, or Pulse-out and ATC. 2. Used with Pulse-out, PPP and ATC.		

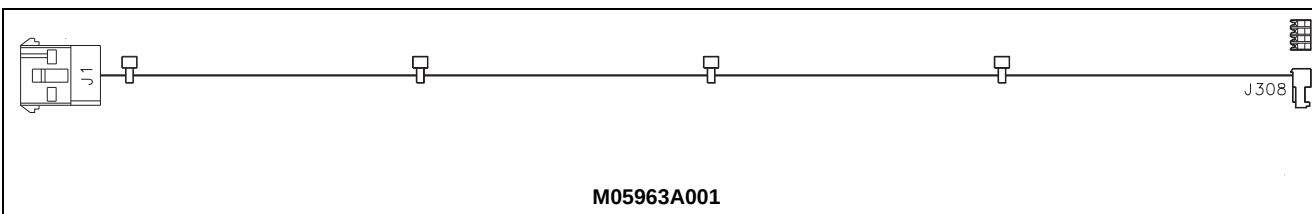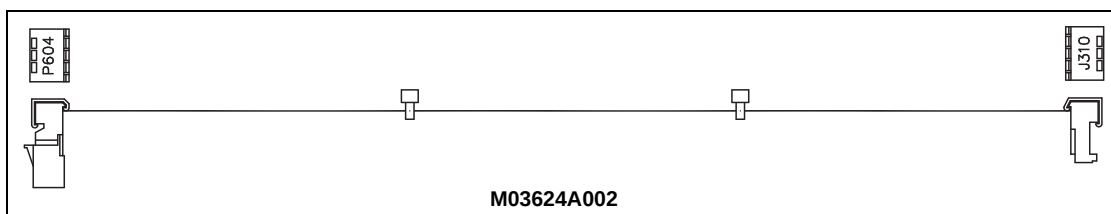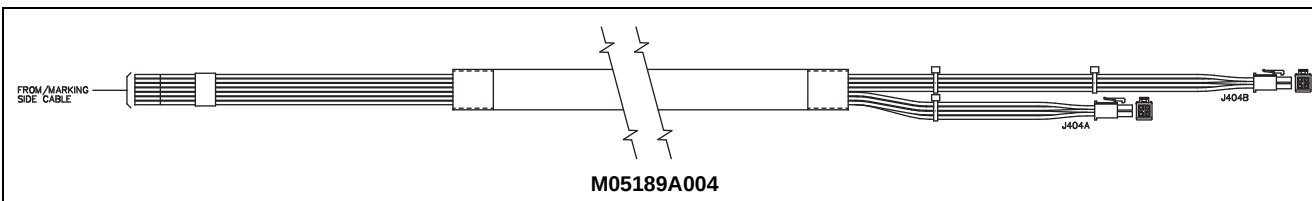   


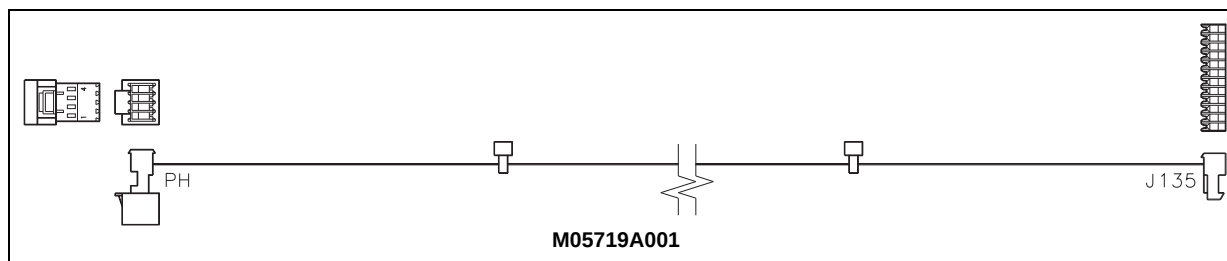 
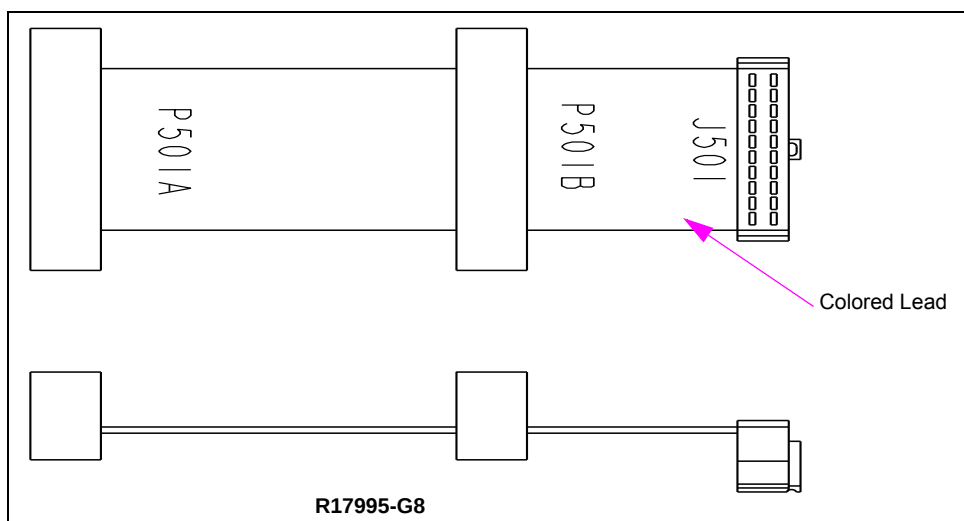 
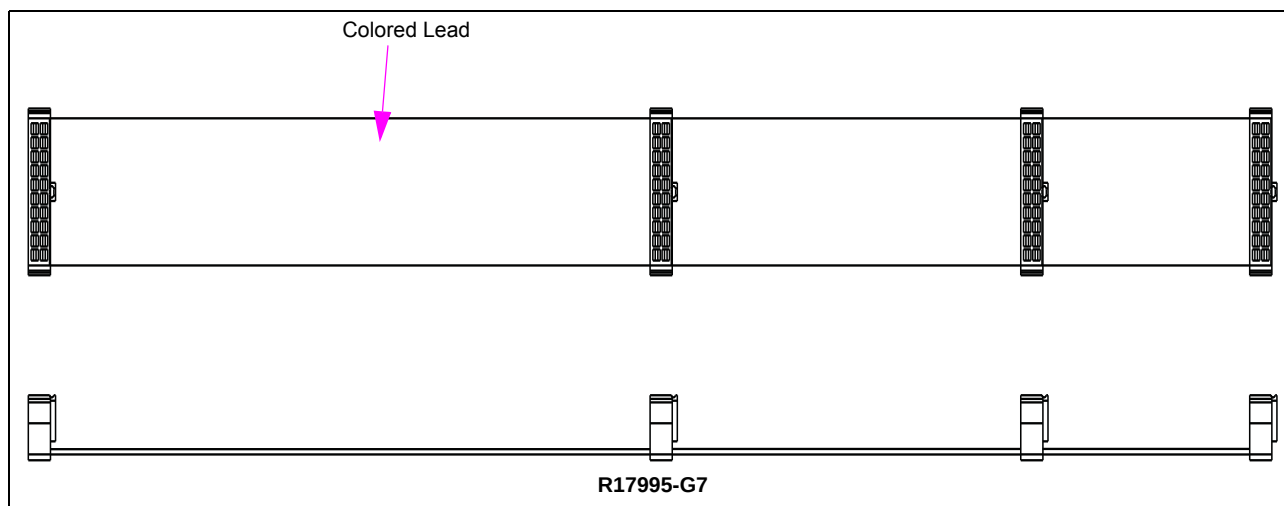 






ATC Option

Note: For cable block diagrams, refer to MDE-4334 Commercial and Retail Series Atlas Start-up/Service Manual.

Part Description	Current Part	Previous Part
Calibration Switch Cable (also used in PPP Location)	R19527-G1	-
Main Interface ATC Cable	M02739A001	-
Pump Controller to ATC Control Cable	R19667-G1	-
Power Data Cable	R20128-G1	-
Keypad Interface Cable	R20146-G2	-
T-Meter Cable Assembly (I.S. Barrier)	R20147-G1	-
T-Meter Cable (Meter Probe)	R20148-G3	-
I.S. Barrier - ATC Retail	T19428-G1	-
RTD Probe and Thermowell	Refer to "Upper Hydraulics - Meter, Manifold, and Valve" on page 6-1.	-

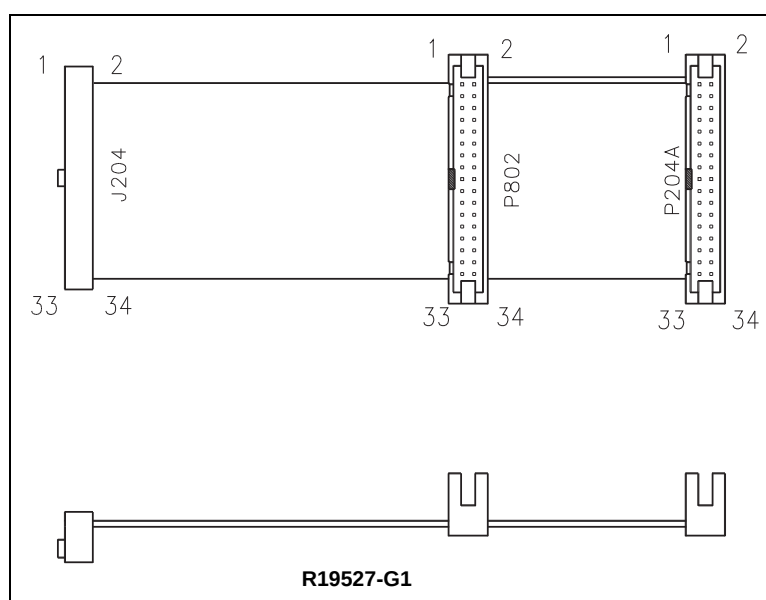 

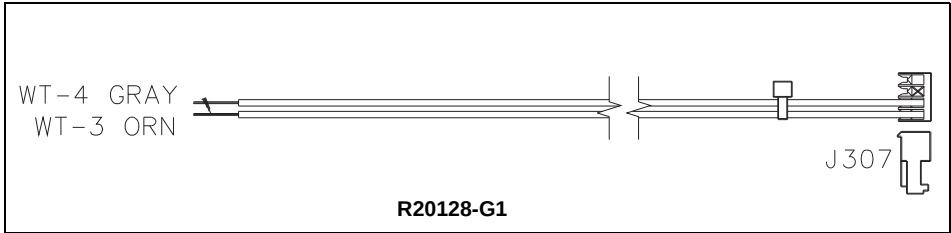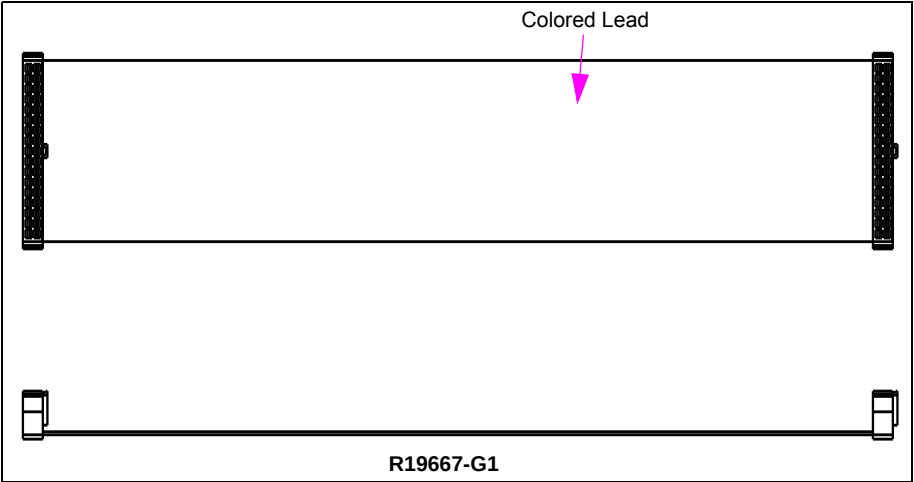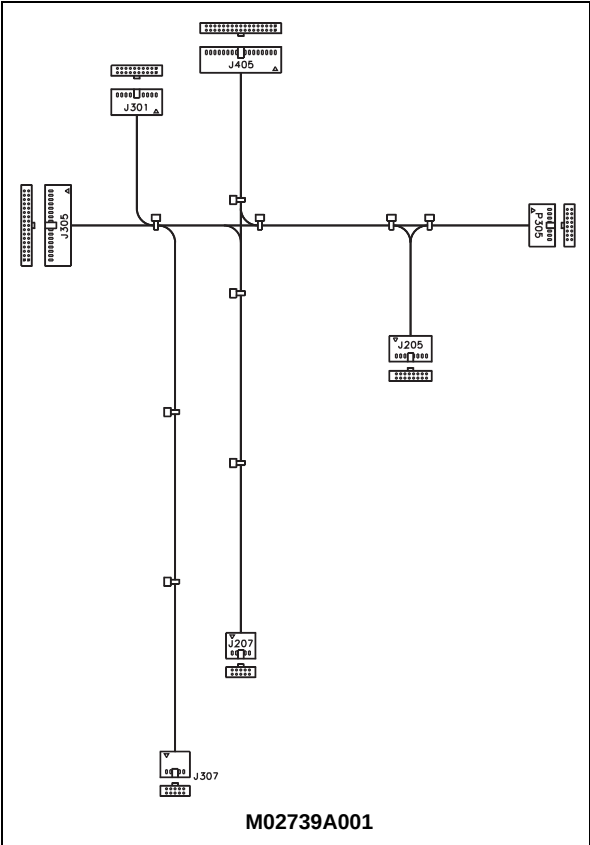   

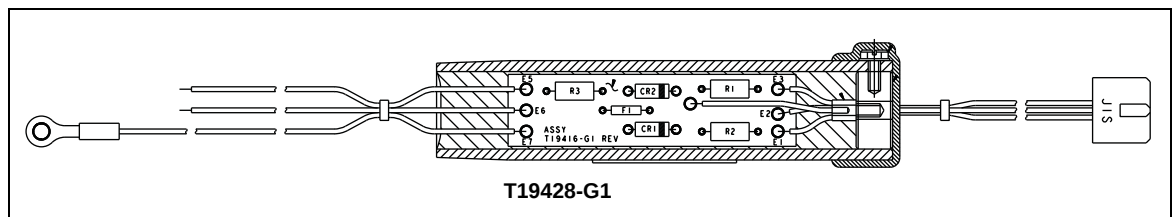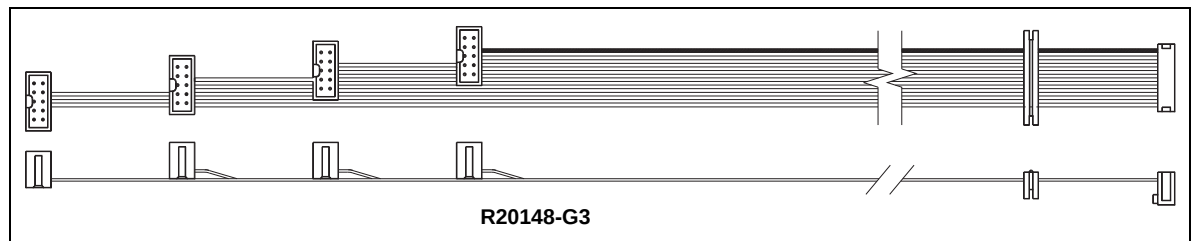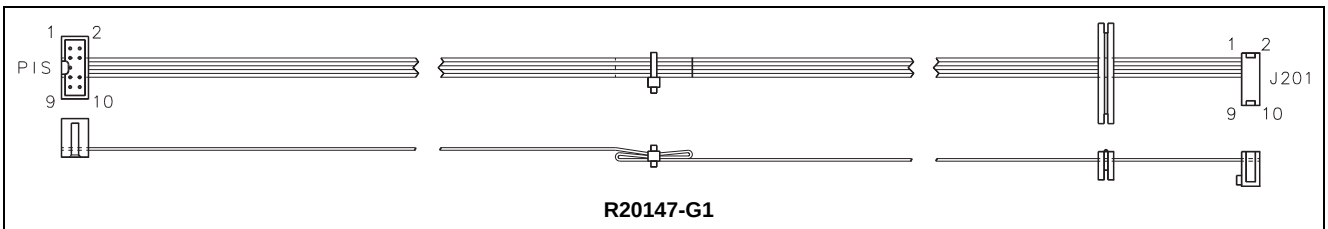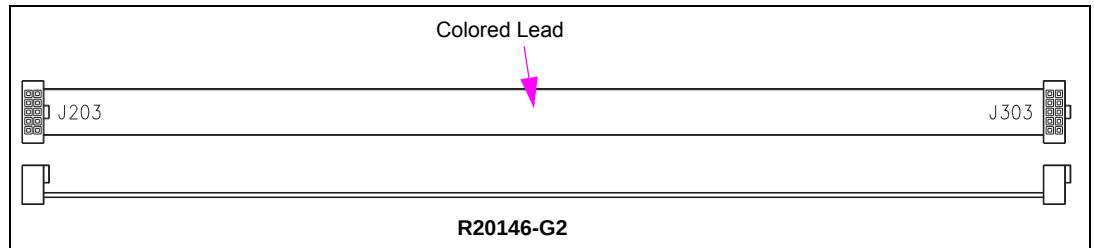    

PPP Option

Note: For cable block diagrams, refer to MDE-4334 Commercial and Retail Series Atlas Start-up/Service Manual.

Part Description	Current Part	Previous Part
Controller to PPP Cable	R19936-G1	-
PPP Cable	M01800A001	-
Display Cable	R18944-G1	-

