

Centurion

Electronics & Dials

Electronics Enclosure Assembly

Narrow Frame

Wide Frame

Door Assembly

Lefty Video

Left Access (Wide Frame Only)

Right Door (Axiohm Printer)

Axiohm Printer Assembly

Right Door Assembly (Panasonic Printer)

Light Box Assembly (Standard Credit/Debit)

Center Door Assembly

Standard Credit

Standard Debit

Light Box Assembly (Mono Credit/Debit)


Center Door Assembly

Mono Credit Graphics

Mono Debit Graphics

Touch Pad Door Panels

ELECTRONICS ENCLOSURE ASSEMBLY NARROW FRAME

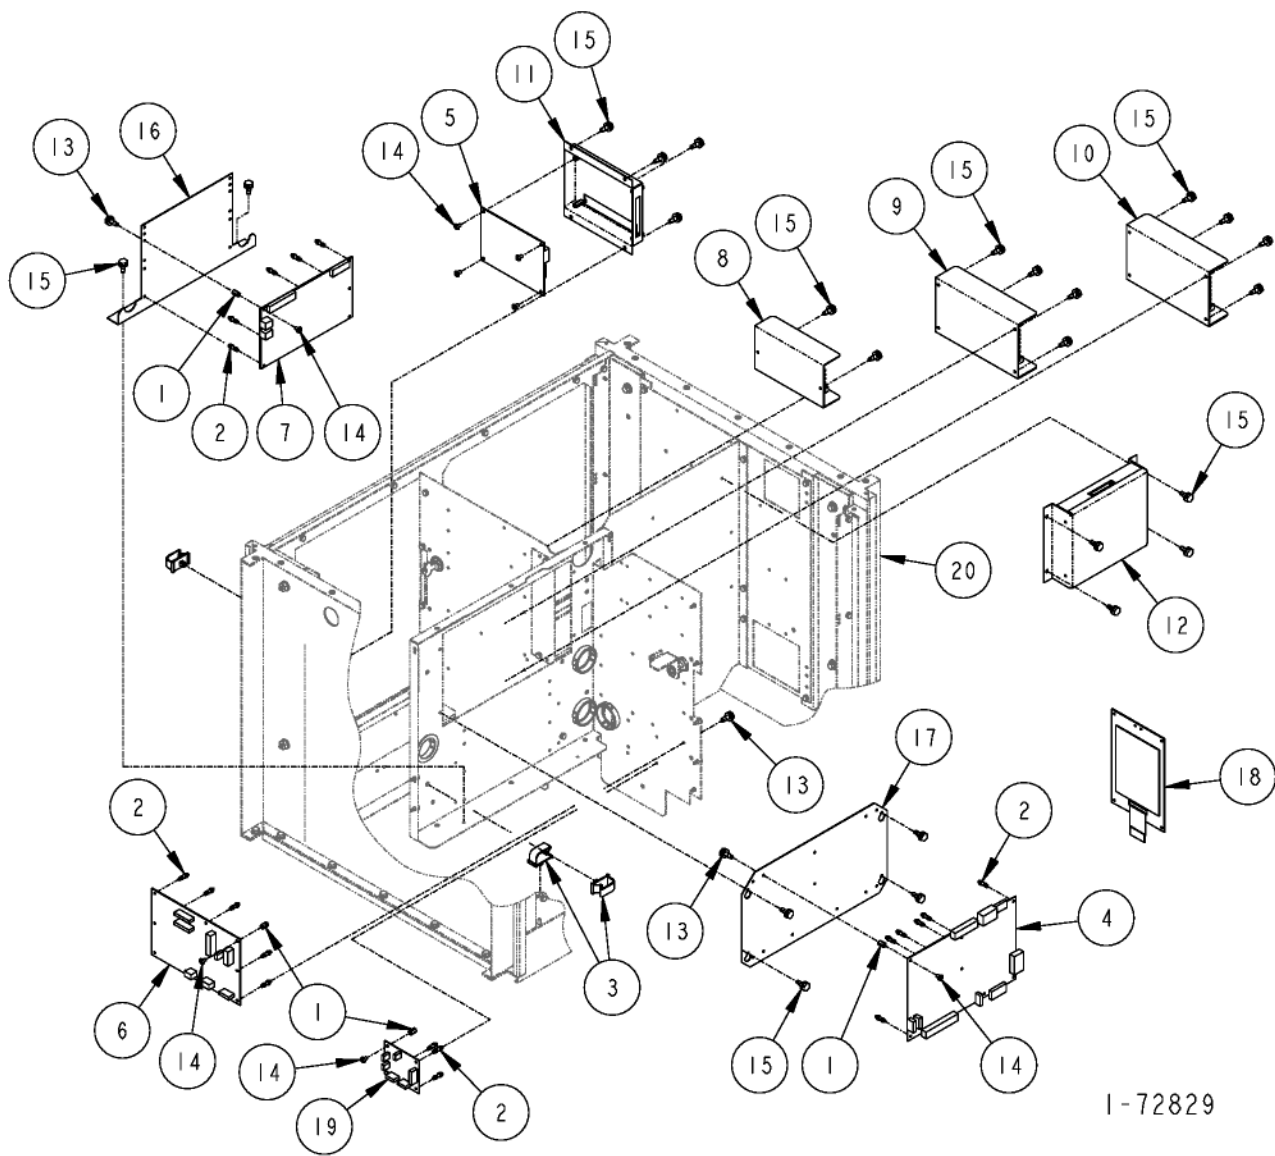


1-72829

ELECTRONICS ENCLOSURE ASSEMBLY

NARROW FRAME

ITEM PART			ITEM PART		
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
1	0120203	Aluminum Standoff	12	Intrinsically Safe Barrier	
2	0120242	Plastic Standoff	2600198-1	1	Hose per side
3	0120260	Wire Strain Relief	2600198-2	2	Hoses per side
4	1400297	CPU Main Board	2600198-3	3	Hoses per side
5	1400302	Product Blend Circuit Board	2600198-4	4	Hoses per side
6	Power Distribution Board		13	4003024	#6-32 x 1/4" Long Screw
	1400320-1	Standard "used on noncardsmart preset, card smart, standard debit"	14	4003025	#6-32 x 1/4" Long Screw
	1400320-2	Expanded	15	4003582	#8-32 x 3/8" Long Screw
7	Relay Circuit Board		16	8801030	Relay Board Mounting Bracket
	1400324-1	1 Product	17	8801199	Main Board Mounting Bracket
	1400324-2	2 Product	18	0080074-002	Programmers Touch Pad Assembly
	1400324-3	3 Product	19	1400317	Vapor Recovery Board
	1400324-4	4 Product	20	For parts callout of Center Enclosure Assembly see	
8	2010090	Blender Power Supply			
9	2010082	Logic Power Supply			
10	2010083	Printer Power Supply			
11	2400221	Product Blend Board Assembly (Includes item #5)			

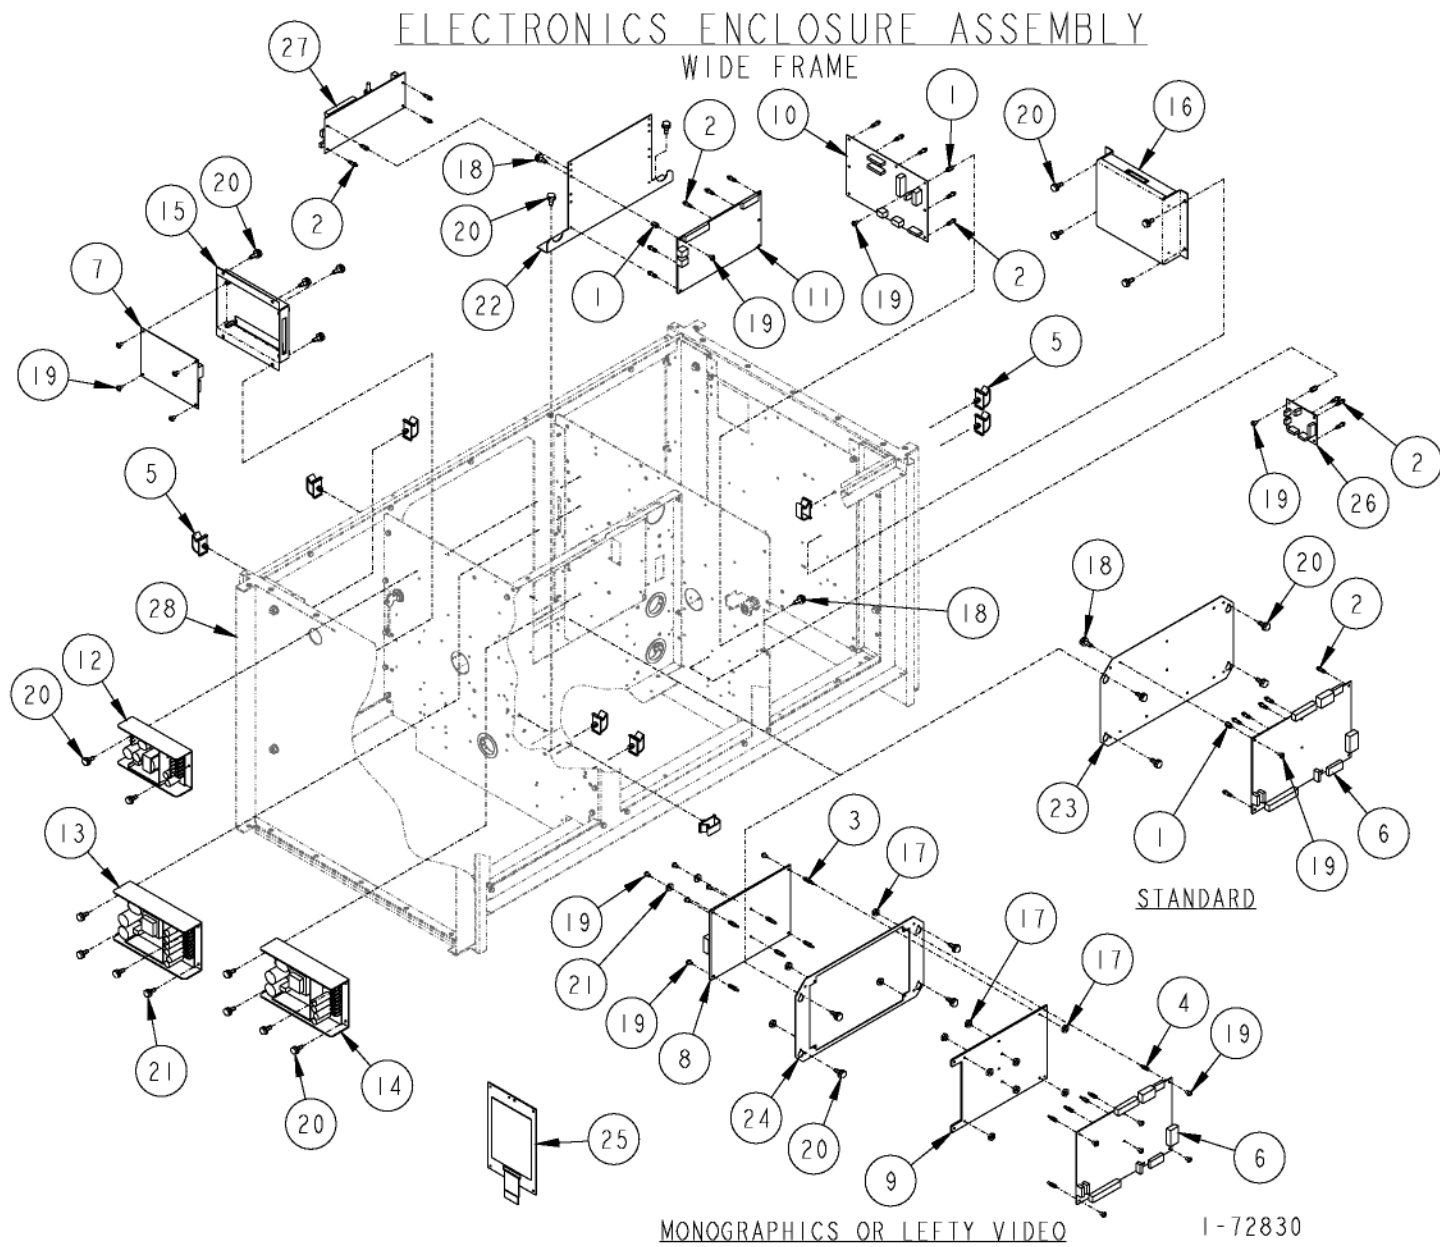


1-72830

ELECTRONICS ENCLOSURE ASSEMBLY

WIDE FRAME

ITEM PART NO. NO.	DESCRIPTION	NO. NO.	DESCRIPTION
		15	2400221 Product Blend Board Assembly (Includes Item #7)
1	0120203 Aluminum Standoff		
2	0120242 Plastic Standoff		
3	0120257 Aluminum Standoff	16	Intrinsically Safe Barrier
4	0120258 Aluminum Standoff	2600198-1	1 Hose per side
5	0120260 Wire Strainer	2600198-2	2 Hoses per side
6	1400297 CPU Main Board	2600198-3	3 Hoses per side
7	1400302 Product Blend Board	2600198-4	4 Hoses per side
8	1400304 Video Circuit Board		
9	1400311 Adapter Circuit Board	17	30220062 #6-32 Kep Nut
10	<u>Power Distribution Board</u>	18	4003024 #6-32 x 1/4" Long Screw
1400320-1	Standard "used on noncardsmart preset, card	19	4003025 #6-32 x 1/4" Long Screw
	smart, standard debit"	20	4003582 #8-32 x 3/8" Long Screw
1400320-2	Expanded "used on monographics and lefty	21	4033040 Insulator Washer
	video"	22	8801030 Relay Board Mounting Bracket
11	<u>Relay Circuit Board</u>	23	8801199 Main Board Mounting Bracket (Standard, used on noncardsmart preset, card
1400324-1	1 Product	24	8801211 Main Board/Video Mounting Bracket (Monographics or Lefty Video)
1400324-2	2 Product	25	0080074-002 Programmers Touch Pad Assembly
1400324-3	3 Product	26	1400317 Vapor Recovery Board
1400324-4	4 Product	27	1400319 Audio Board (Lefty Video)
12	2010090 Blender Power Supply	28	For parts call out of Center Enclosure Assembly see 72824
13	2010082 Logic Power Supply		
14	2010083 Printer Power Supply		
ITEM PART			

LEFTY VIDEO DOOR ASSEMBLY

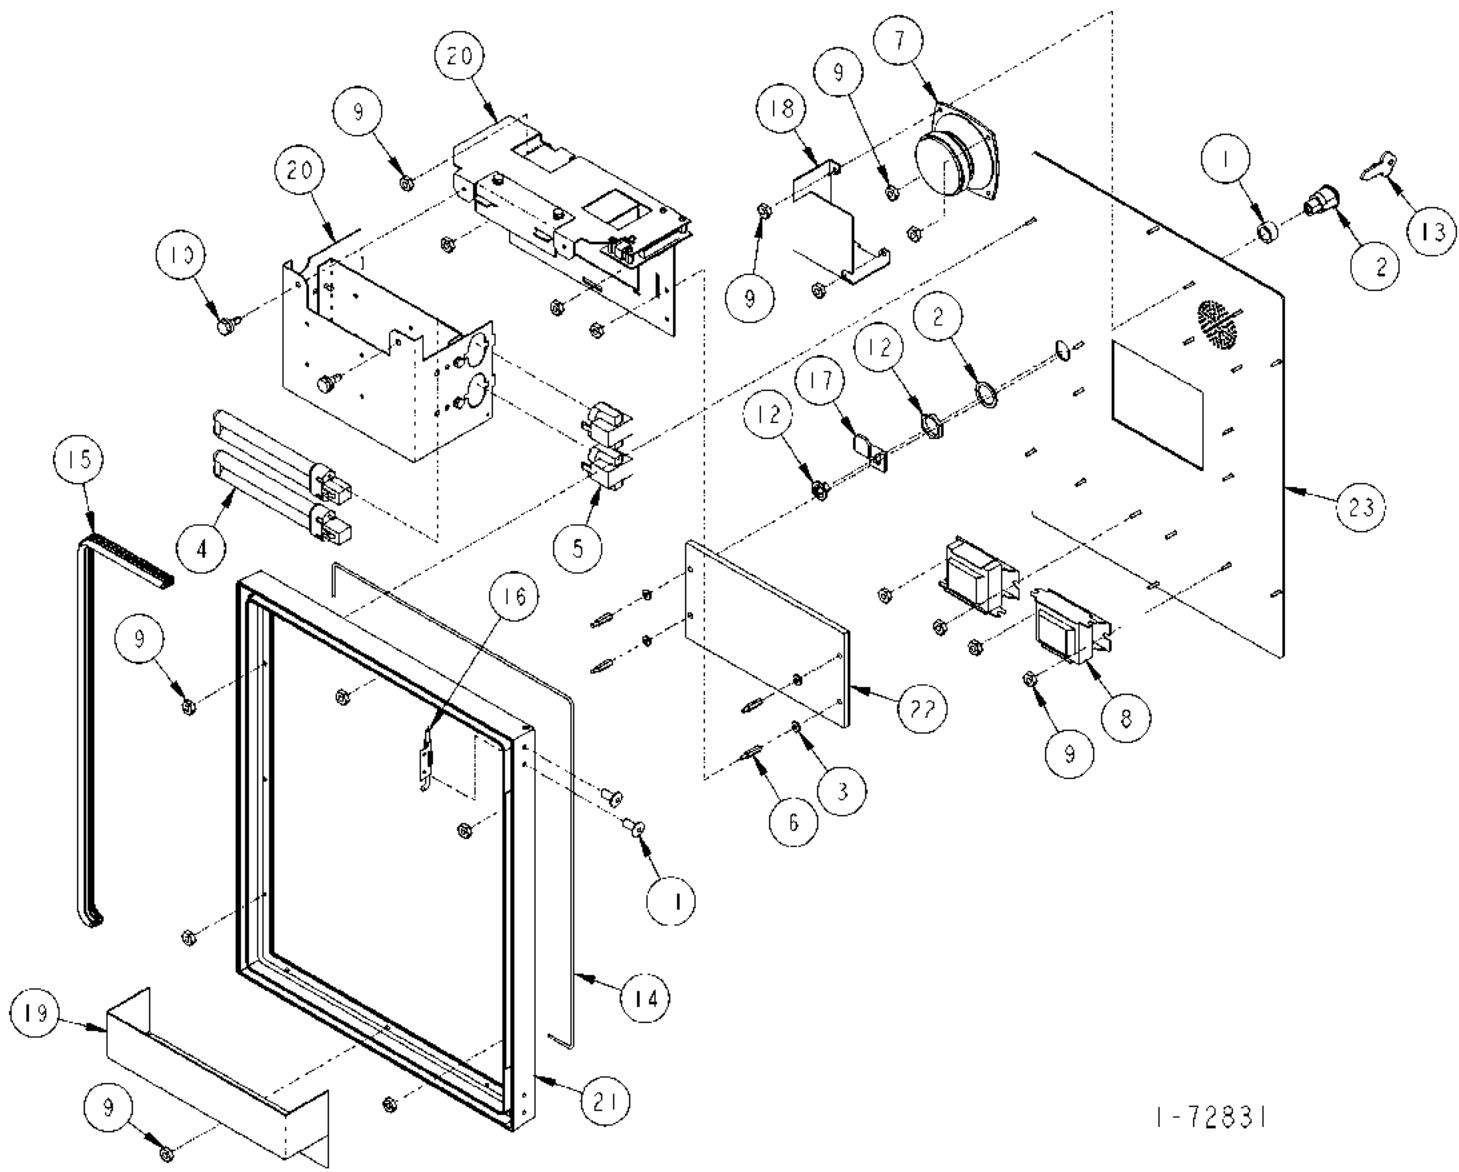


1-72831

LEFTY VIDEO DOOR ASSEMBLY

ITEM PART		DESCRIPTION
NO.	NO.	
1	S-912-2	Nylon Spacer
2	S-912-3	Nylon Washer
3	53-00600	Plastic Washer
4	0070473	Light
5	0070474	Lamp Holder
6	0120258	Standoff
7	1411084	Speaker
8	1411085	Transformer
9	30220062	#6-32 Kep Nut
10	4003518	#8-32 x 1/4" Long
11	1-128281	Pop Rivet
12	4110175	Lock (Includes item
13		Key
14	1-233680	Gasket
15	1-233681	Gasket
16	4180003	Door Hinge
17	8801175	Lock Lever
18	8801246	Speaker Cover
19	8801325	Transformer Cover
20	2400245	Video Board Assembly
21	8900864	Door Frame
22	8900939	Lens
23	8900973	Video Door Insert

LEFT ACCESS DOOR ASSEMBLY (WIDE FRAME ONLY)

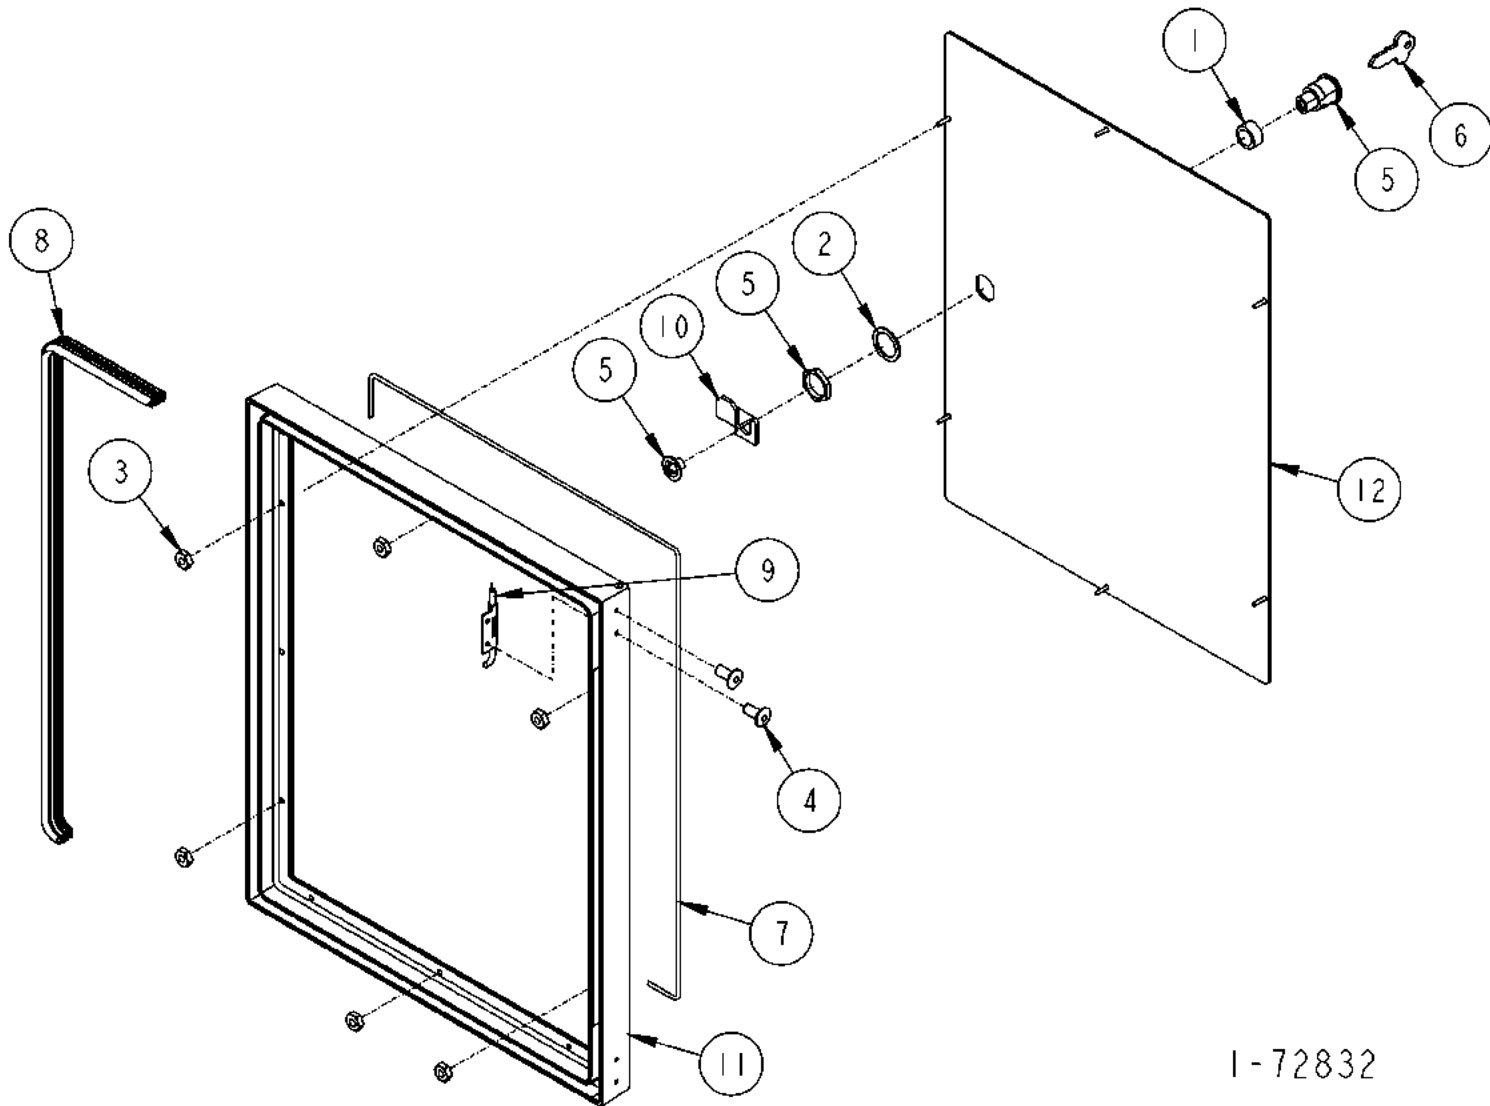


1-72832

LEFT ACCESS DOOR ASSEMBLY (WIDE FRAME ONLY)

ITEM NO.	PART NO.	DESCRIPTION
1	S-912-2	Nylon Spacer
2	S-912-3	Nylon Washer
3	30220062	#6-32 Kep Nut
4	1-128281	Pop Rivet
5	4110175	Lock (Includes item
6		Key
7	1-233680	Gasket
8	1-233681	Gasket
9	4180003	Door Hinge
10	8801175	Lock Lever
11	8900864	Door Frame
12	8900969	Door Plate

For complete Access Door Assembly order 8900978

RIGHT DOOR ASSEMBLY (AXIOHM PRINTER)

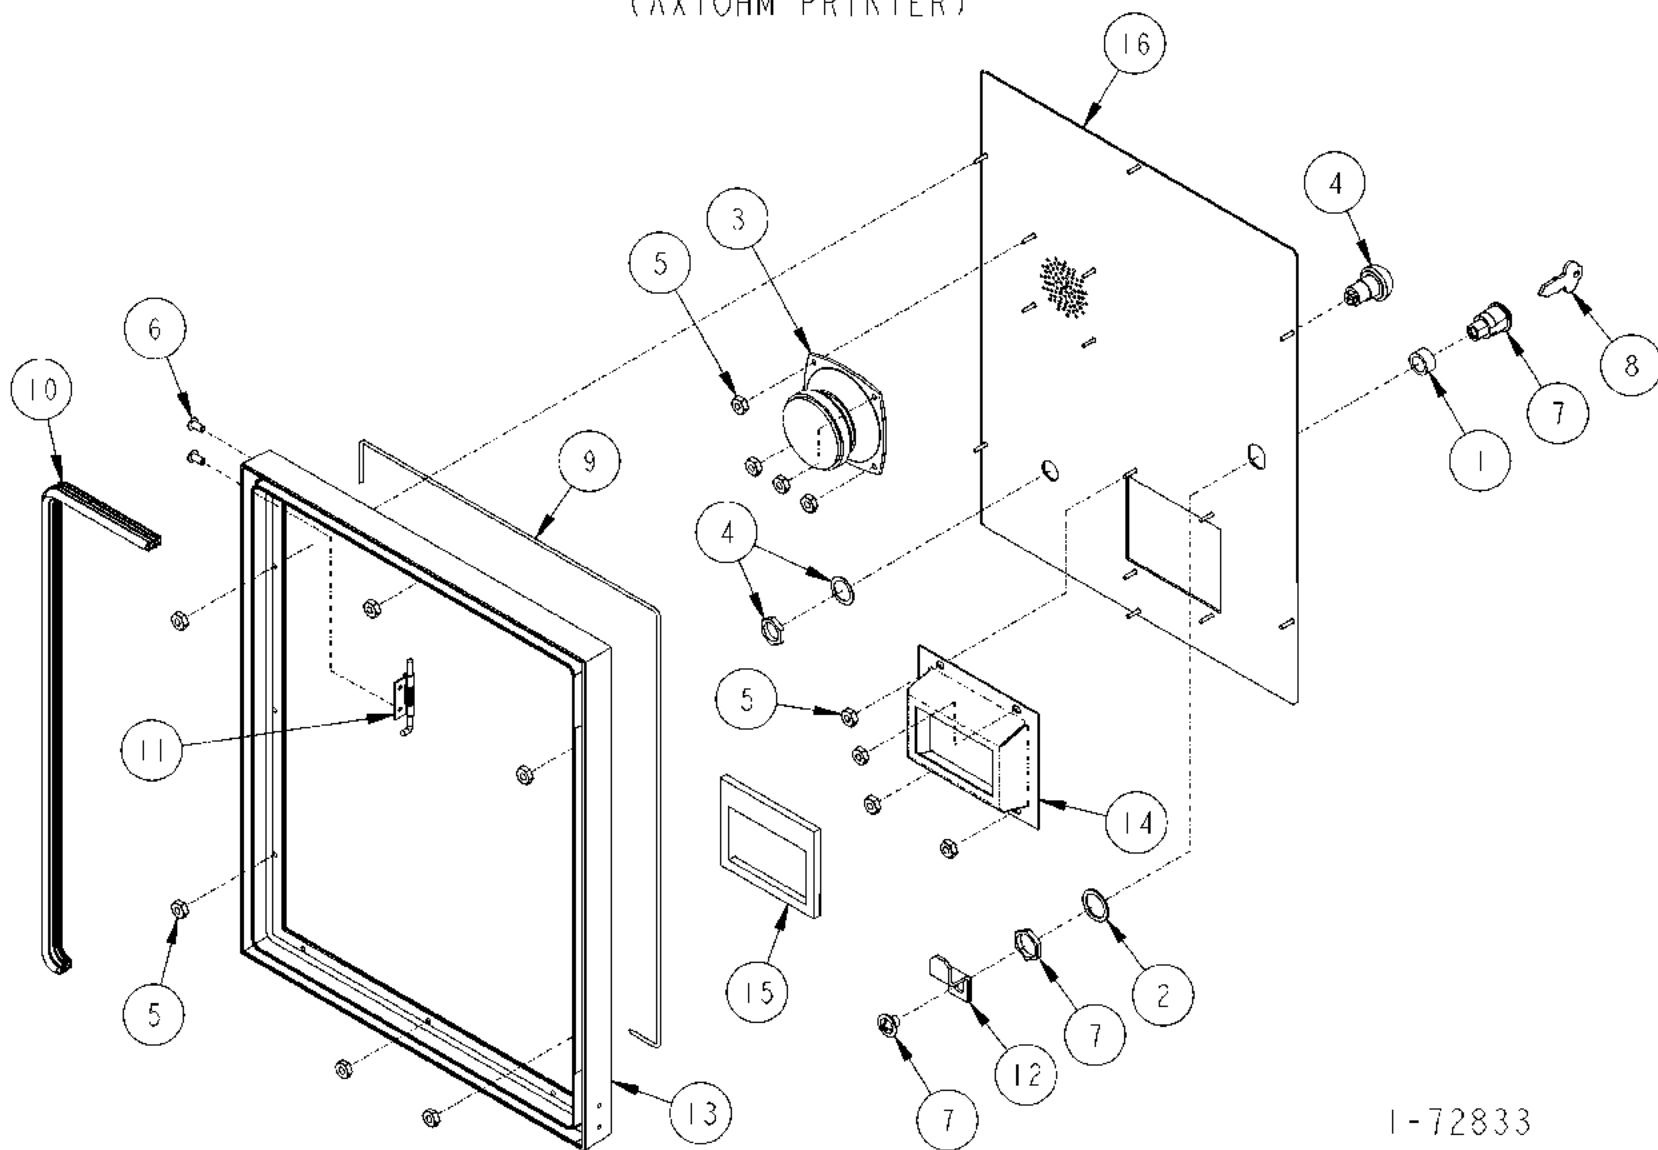


1-72833

RIGHT DOOR ASSEMBLY (AXIOHM PRINTER)

ITEM PART			ITEM PART		
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
1	S-912-2	Nylon Spacer	16	<u>Door Panel</u>	
2	S-912-3	Nylon Washer		8900969	Blank
3	1411084	Speaker		8900971	Printer/speaker
4	1411152	Call Button		8900972	Printer
5	30220062	#6-32 Kep Nut		8900974	Speaker
6	1-128281	Pop Rivet		8901028	Speaker/call
7	4110175	Lock (Includes item #8)		8901030	Printer/speaker/call
8		Key		8901032	Call
9	1-233680	Gasket		8901034	Printer/call
10	1-233681	Gasket			
11	4180002	Door Hinge			
12	8801175	Lock Lever			
13	8900864	Door Frame			
14	8801176	Printer Bezel			
15	4160026	Printer Cushion			

AXIOHM PRINTER ASSEMB

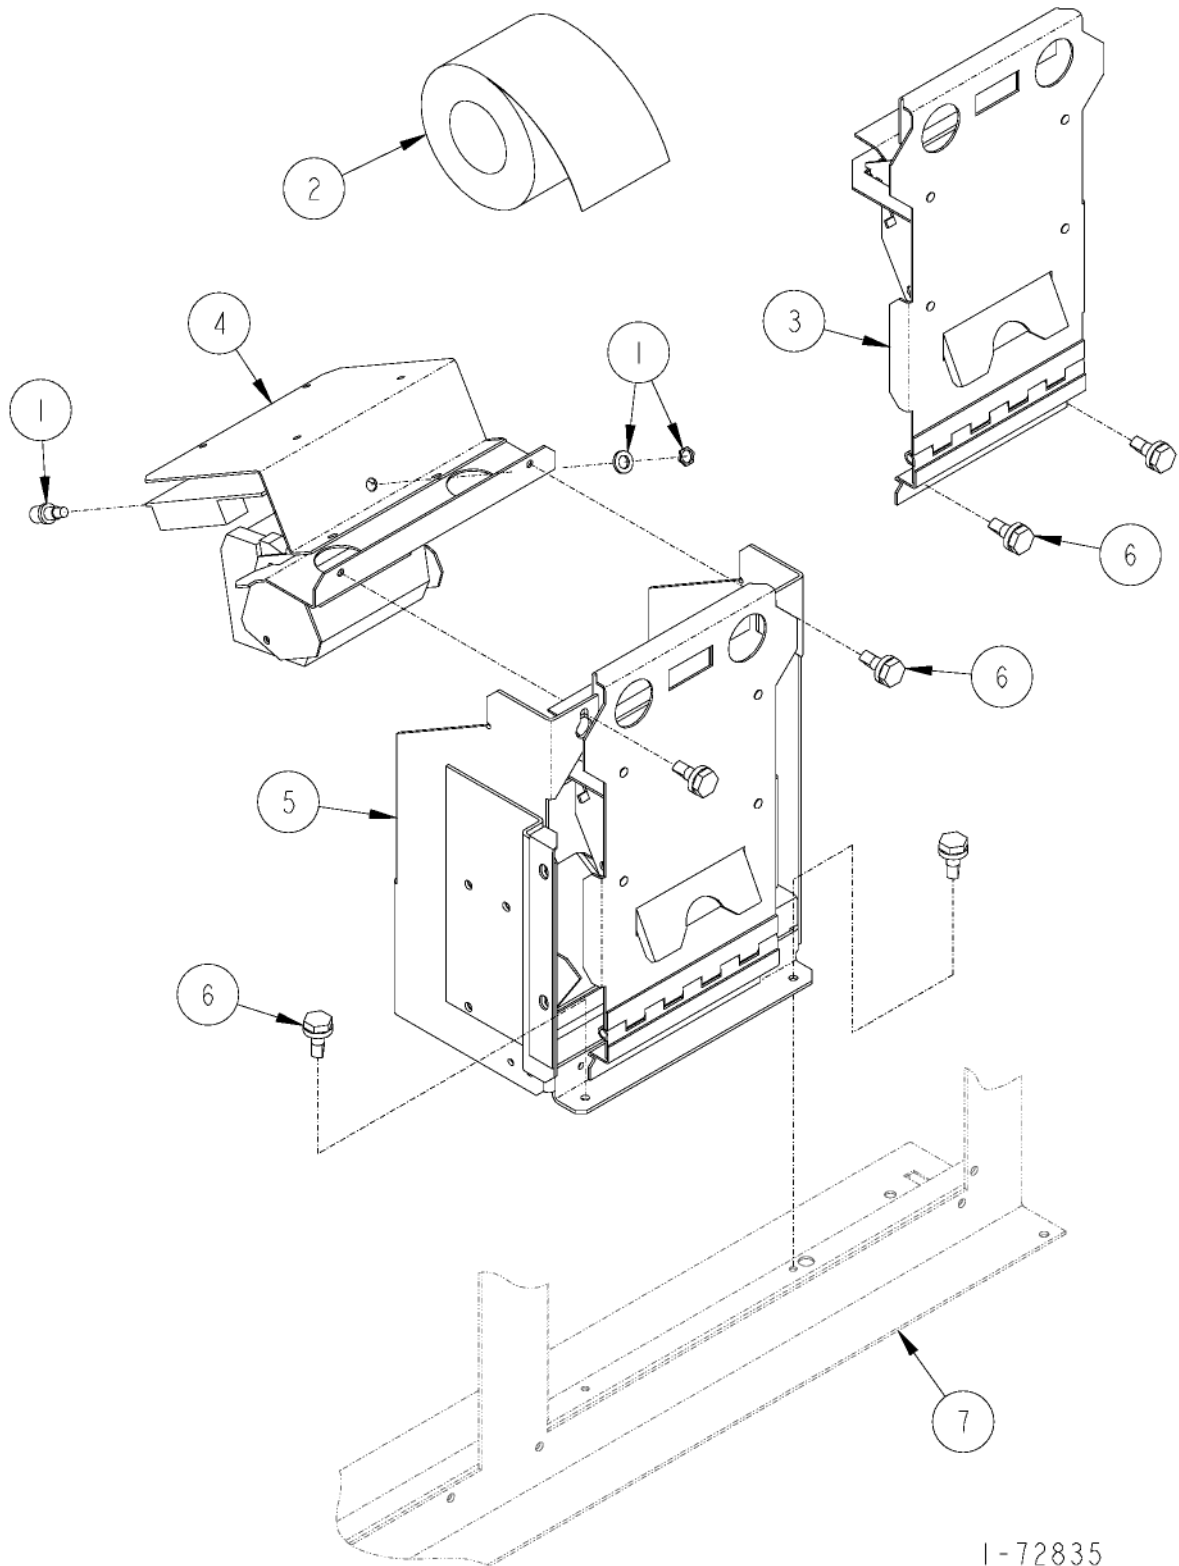


1-72835

AXIOHM PRINTER ASSEMBLY

ITEM PART		DESCRIPTION
NO.	NO.	
1	22-00695-00	Switch
2	5-230492	Paper Roll (case)
3	2400215	Printer Door Assembly
4	2400230	Printer Head Assembly
5	2400241	Printer Door & Housing Assembly (Includes item #3)
6	4003582	#8-32 x 3/8" Long Screw
7	For parts callout of Center Enclosure Assembly see	

RIGHT DOOR ASSEMBLY (PANASONIC PRINTER)

ITEM PART			ITEM PART			ITEM PART		
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
1	S-912-2	Nylon Spacer	16 Door Panel (Continued)			Panasonic Printer Kit for		
2	S-912-3	Nylon Washer	16 Stud Mounting (1st Design)			replacement of Axiohm Printer		
3	1411084	Speaker	8901401-5		Printer	"16 Stud mounting" (1st Design)		
4	1411152	Call Button	8901401-6		Printer/speaker	Standard Textured Black.		
5	2010119	Panasonic Printer	8901401-7		Printer/call	2990142-9 Printer		
6	1-233712	Paper	8901401-8		Printer/speaker/call	2990142-10 Printer/speaker		
7	30220062	#6-32 Kep Nut	12 Stud Mounting (3rd Design)			2990142-11 Printer/call		
8	1-128281	Pop Rivet	8901401-9		Printer	2990142-12 Printer/speaker/call		
9	4110175	Lock (Includes key)	8901401-10		Printer/speaker	Painted or Graphic Decal		
10		Key	8901401-11		Printer/call	2990142-13 Printer		
11	1-233680	Gasket	8901401-12		Printer/speaker/call	2990142-14 Printer/speaker		
12	1-233681	Gasket	Panasonic Printer Kit for			2990142-15 Printer/call		
13	4180002	Door Hinge	replacement of Axiohm Printer			2990142-16 Printer/speaker/call		
14	8801175	Lock Lever	"6 Stud mounting" (2nd Design)			For complete Right Door Assy		
15	8900864	Door Frame	Standard Textured Black.			2400272		Printer/speaker
16	Door Panel		2990142-1		Printer	2400273		Printer
	8900969	Blank	2990142-2		Printer/speaker	2400274		Printer/speaker/call
	8900974	Speaker	2990142-3		Printer/call	2400275		Printer/call
	8901028	Speaker/call	2990142-4		Printer/speaker/call	8900983		Speaker
	6 Stud Mounting (2nd Design)		Painted or Graphic Decal			8900984		Blank
	8901401-1	Printer	2990142-5		Printer	8901029		Speaker/call
	8901401-2	Printer/speaker	2990142-6		Printer/speaker	8901033		Call
	8901401-3	Printer/call	2990142-7		Printer/call			
	8901401-4	Printer/speaker/call	2990142-8		Printer/speaker/call			

Tokheim Corporation
5-16

1-72865


LIGHT BOX ASSEMBLY

STANDARD CREDIT SHOWN

ITEM PART			ITEM PART		
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
1	0070473	Light Bulb	11 For parts call out of Center Door Assembly see:		
2	0070503	Light Socket	72863	Standard Credit	
3	0120266	Standoff	72864	Standard Debit	
4	1411100	Transformer			
5	Light Box Assembly (Includes all items except item #				
	<u>3, 10 & 11)</u>				
	2400260	120 Volt/60Hz			
	2400262	220 Volt/50Hz			
6	30220062	#6-32 Kep Nut			
7	4003100	#6-32 x 3/8" Long Screw			
8	4003582	#8-32 x 3/8" Long Screw			
9	8801170	Box Cover			
10	Customer Display Board				
1400313-1 1 Product 1400313-2 2 Product 1400313-3 3 Product 1400313-4 4 Product 1400313-5					
5 Product					

1-72865

CENTER DOOR ASSEMBLY STANDARD CREDIT

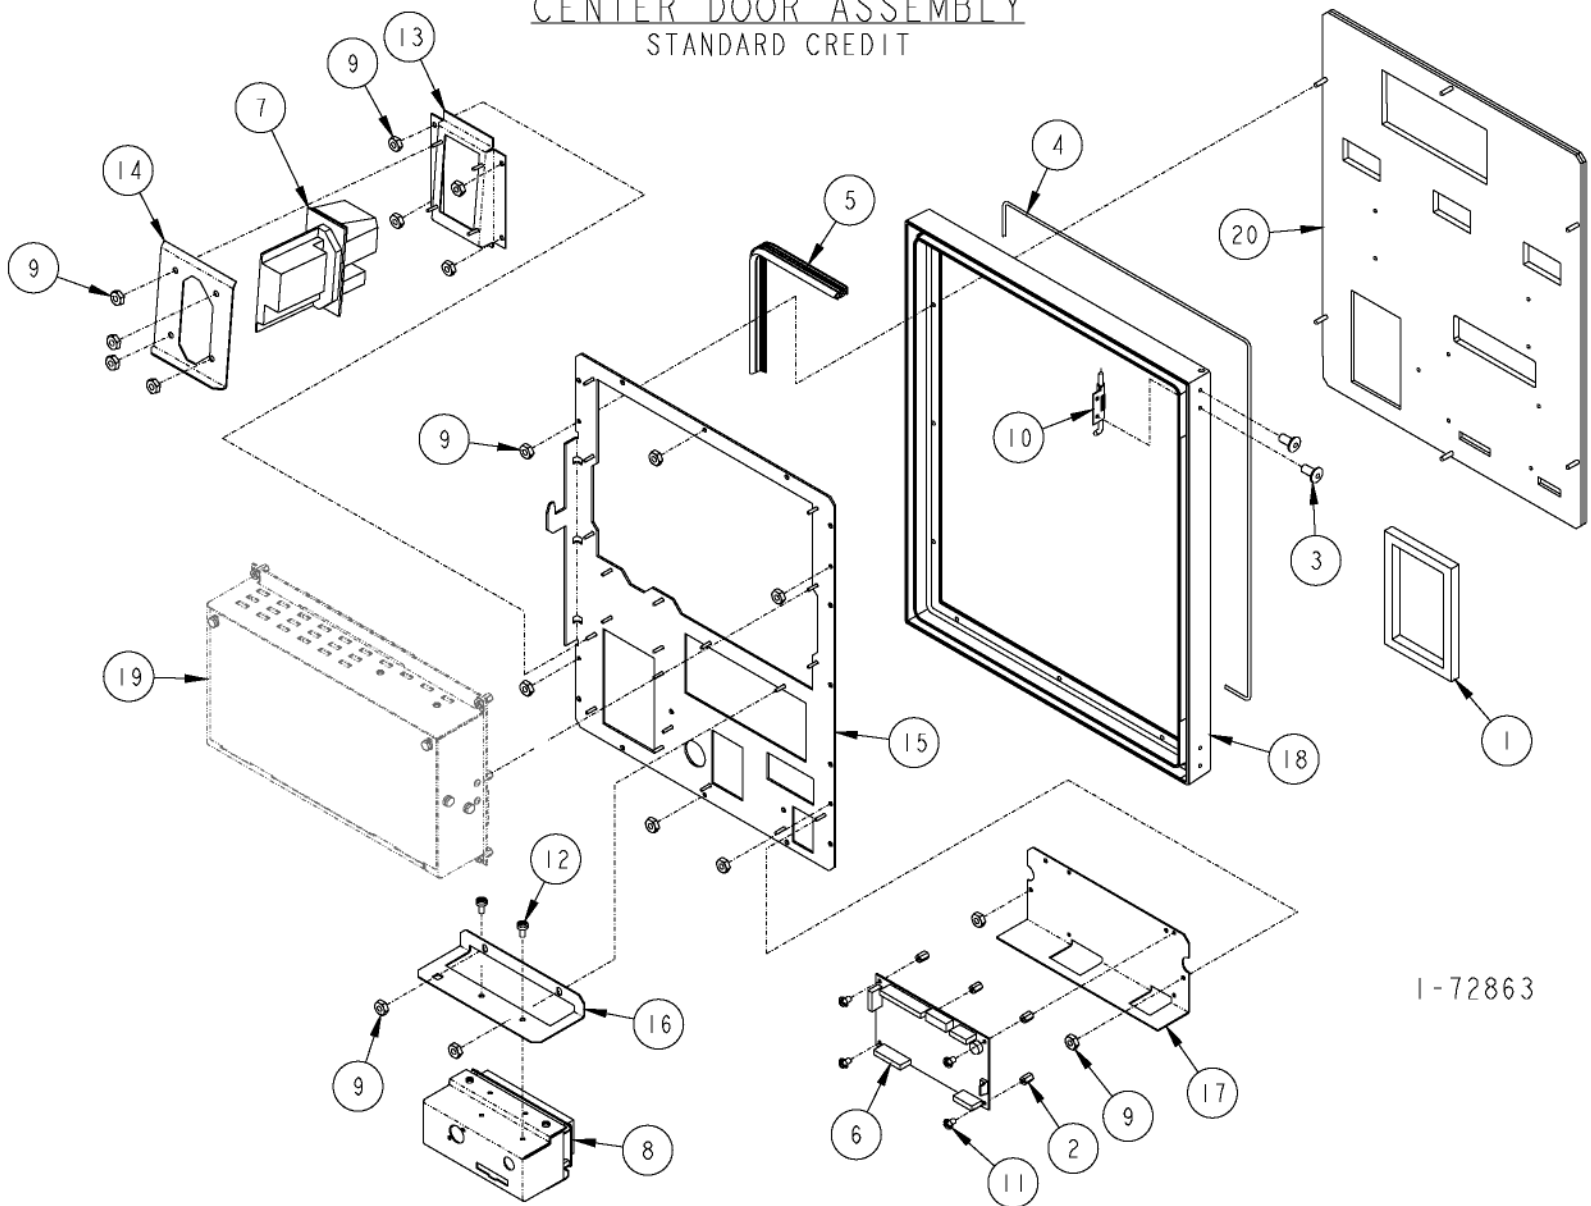


1-72863

CENTER DOOR ASSEMBLY

STANDARD CREDIT

ITEM PART			ITEM PART		
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
1	50-00649	Gasket	17	8801342	EZ Bus Keypad Bracket
2	0120203	Standoff	18	8900864	Door Frame
3	1-128281	Pop Rivet	19	For parts call out of Light Box Assembly see 72865.	
4	1-233680	Gasket	20	For Touch Pad Door Panels see 72866. (Page 5-28)	
5	1-233681	Gasket			
6	1400314	Board			
7	2010089	Card Reader			
8	Customer Display Assembly				
	2400218	Without Heater			
	2400219	With Heater			
9	30220062	#6-32 Kep Nut			
10	4180003	Door Hinge			
11	4003025	#6-32 x 1/4" Long Screw			
12	4003132	#6-32 x 5/8" Long Screw			
13	8801077	Card Reader Angle Bracket			
14	8801078	Card Reader Backing Bracket			
15	8801258	Card Reader Mounting Bracket			
16	8801269	Customer Display Bracket			

CENTER DOOR ASSEMBLY STANDARD DEBIT

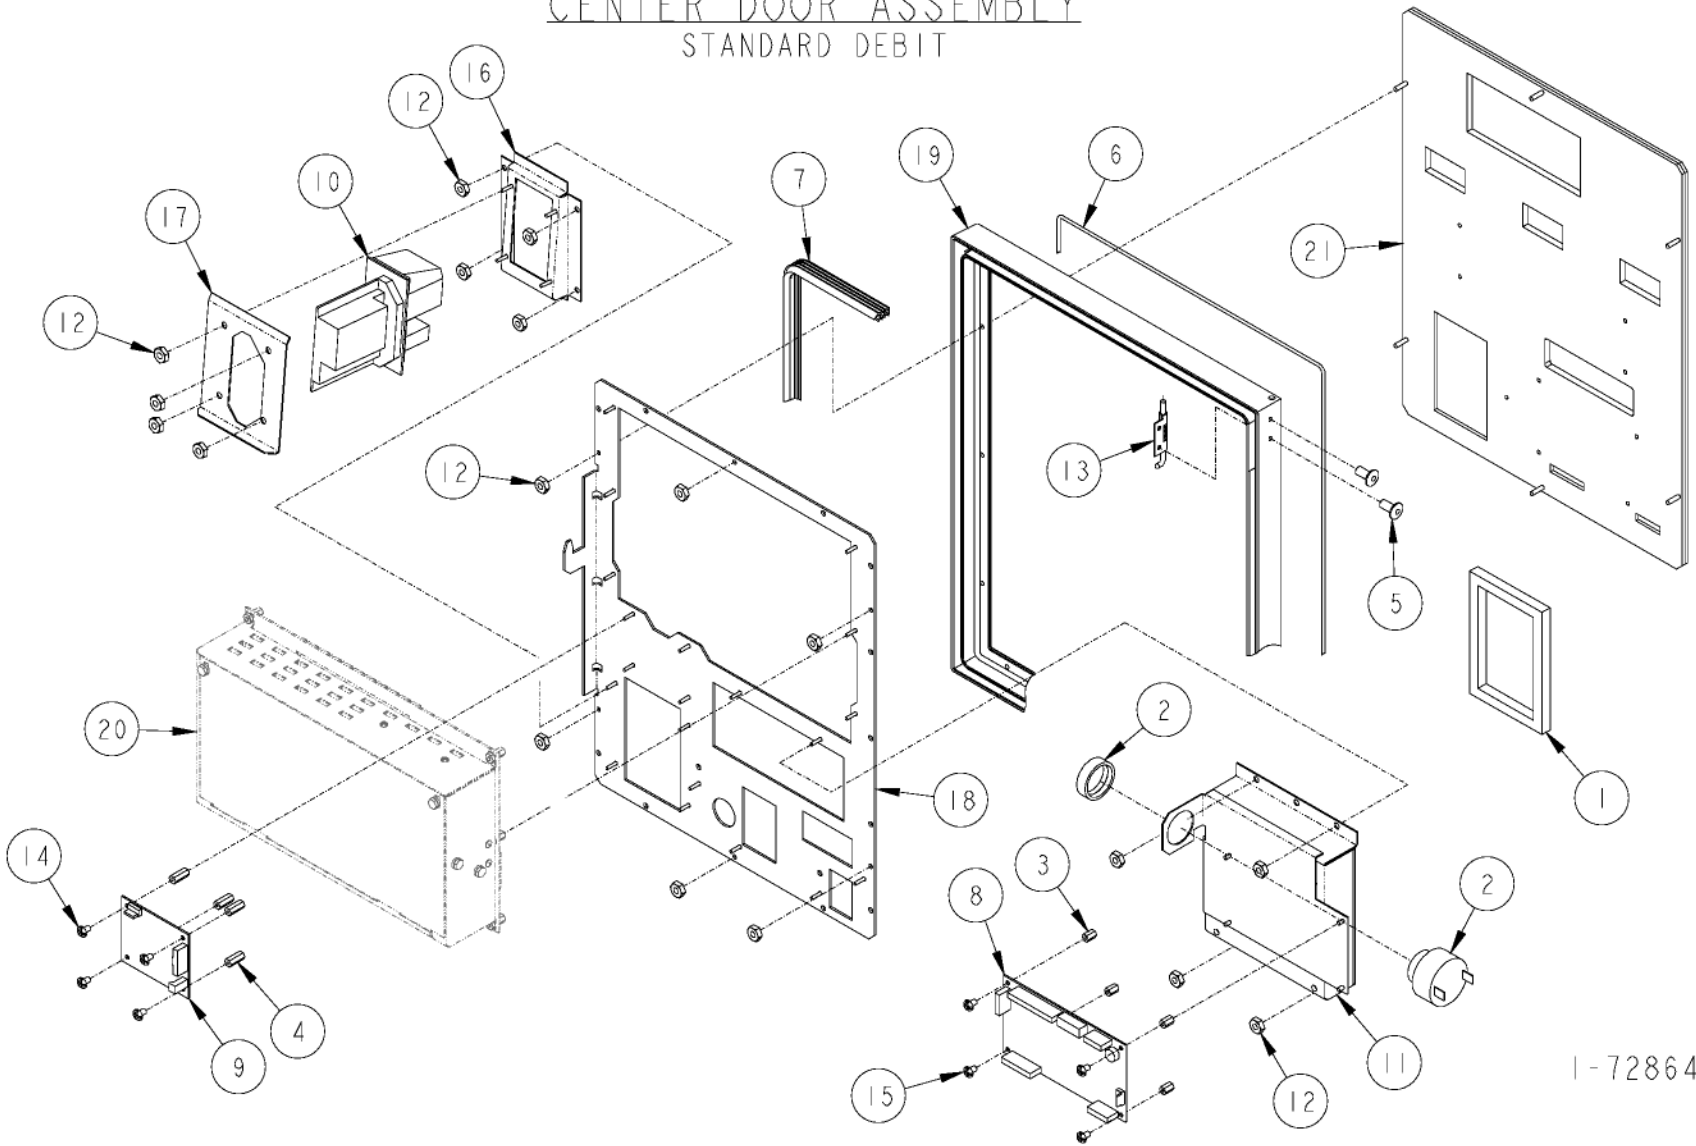


1-72864

CENTER DOOR ASSEMBLY

STANDARD DEBIT

ITEM PART			ITEM PART		
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
1	50-00649	Gasket	11	Debit Module (Continued)	
2	0070158	Buzzer (Annunciator)	2400217-24	Quiktrip	
3	0120203	Standoff	2400217-26	Chevron	
4	0120246	Standoff	2400217-27	Phillips 66	
5	1-128281	Pop Rivet	2400217-28	Unocal	
6	1-233680	Gasket			
7	1-233681	Gasket	12	30220062	#6-32 Kep Nut
8	1400314	Board	13	4180003	Door Hinge
9	1400316	DPT Board	14	4003017	#6-32 x 3/16" Long Phillips Pan Head Screw
10	2010089	Card Reader	15	4003025	#6-32 x 1/4" Long Screw
11	Debit Module		16	8801077	Card Reader Angle Bracket
	2400217-12	Coastal	17	8801078	Card Reader Backing Bracket
	2400217-13	Texaco	18	8801258	Card Reader Mounting Bracket
	2400217-14	Shell	19	8900864	Door Frame
	2400217-15	Mobil	20	For parts call out of Light Box Assembly see 72865.	
	2400217-16	Diamond Shamrock	21	For Touch Pad Door Panels see 72866.	
	2400217-17	Citgo			
	2400217-18	Standard			
	2400217-19	Arco			
	2400217-20	Fina			
	2400217-21	Exxon			
	2400217-23	Gulf Coast			

LIGHT BOX ASSEMBLY

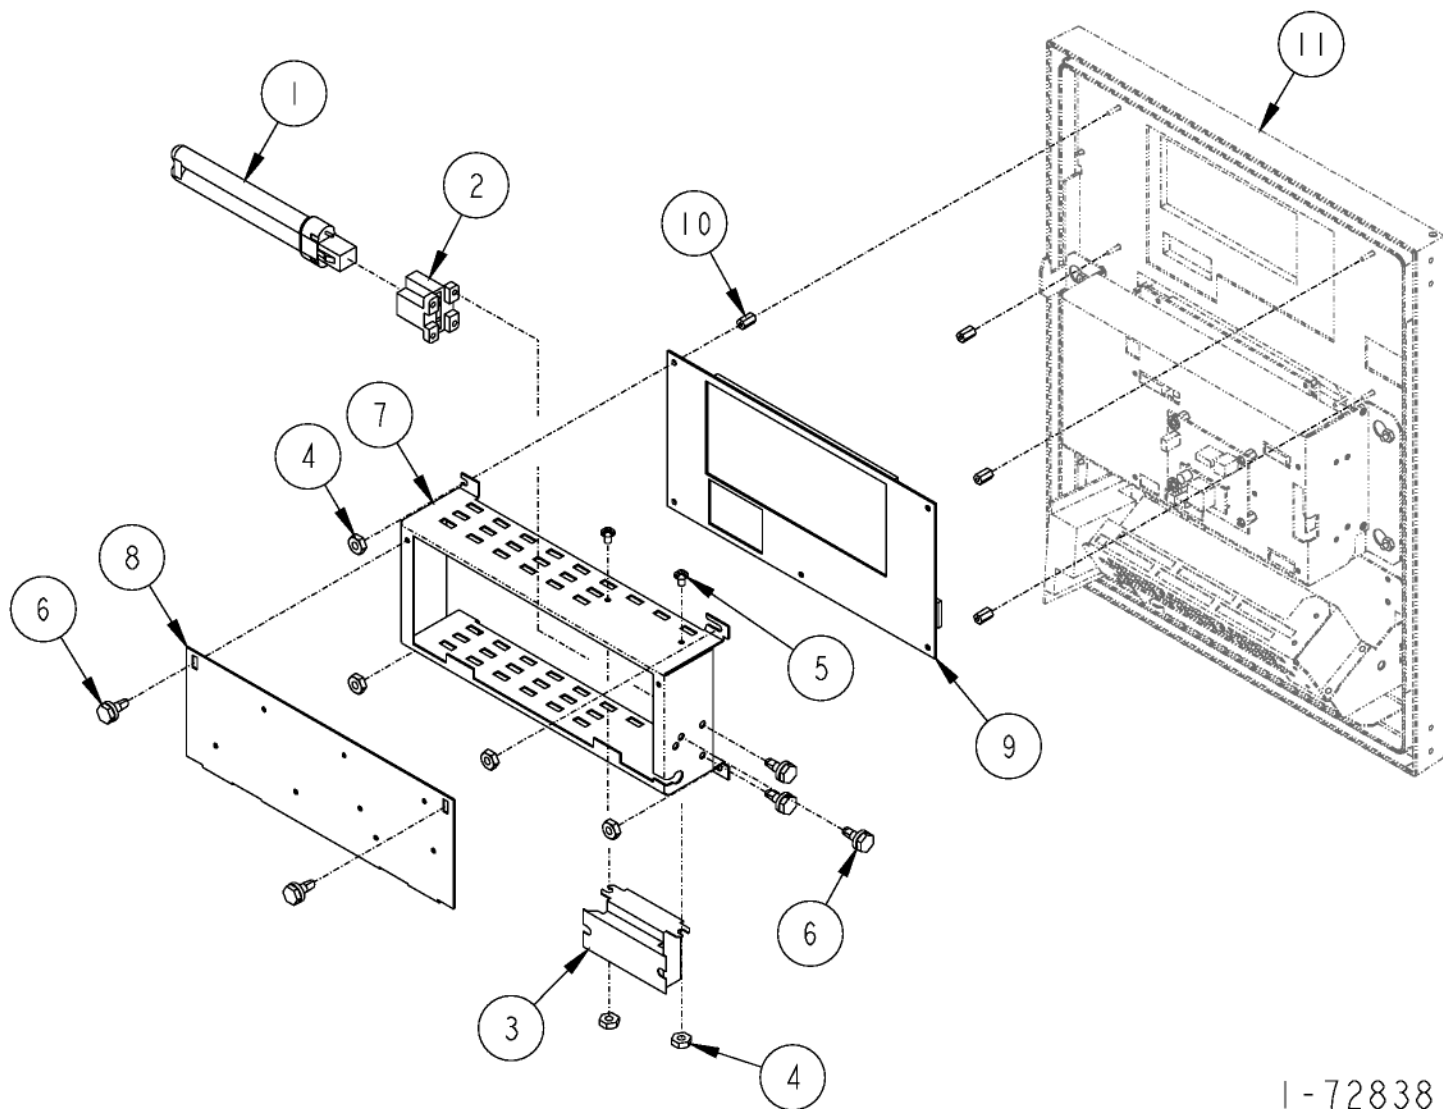


1-72838

LIGHT BOX ASSEMBLY

ITEM PART		
NO.	NO.	DESCRIPTION
1	0070473	Light Bulb
2	0070503	Light Socket
3	1411100	Transformer
4	30220062	#6-32 Kep Nut
5	4003100	#6-32 x 3/8" Long Screw
6	4003582	#8-32 x 3/8" Long Screw
7	8801290	Light Box
8	8801291	Box Cover
9	1400331-2	Customer Display Board
10	0120266	Standoff
11	For parts call out of Mono Graphics Door	
	72836	Credit
	72837	Debit

CENTER DOOR ASSEMBLY MONO CREDIT GRAPHICS

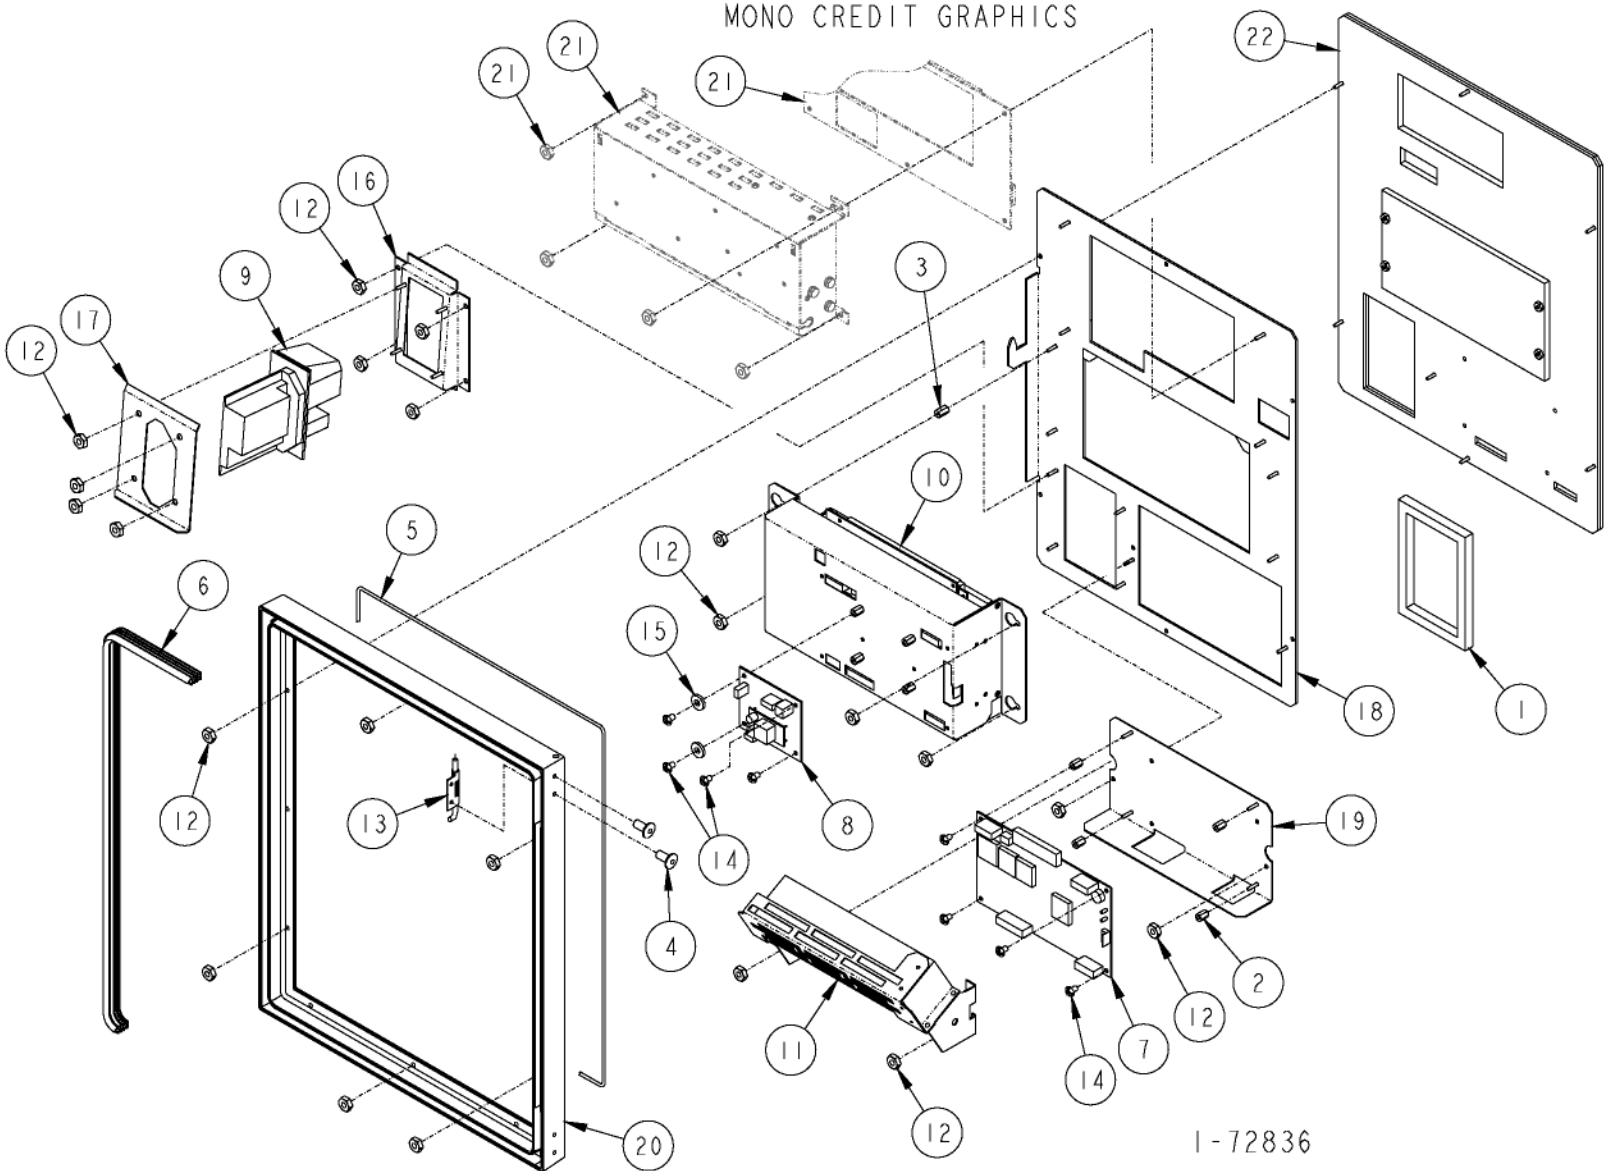


1-72836

CENTER DOOR ASSEMBLY

MONO CREDIT GRAPHICS

ITEM PART			ITEM PART		
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
1	50-00649	Gasket	21	<u>For parts call out of Light Box Assembly see 72838.</u>	
2	0120203	Standoff	22	<u>Touch Pad</u>	
3	0120266	Standoff		<u>0080130-XXX</u>	
4	1-128281	Pop Rivet		<u>For Tokheim internal use only Complete Mono 2400247.</u>	
5	1-233680	Gasket			
6	1-233681	Gasket			
7	1400325	Board			
8	1408006	Backlight Control Board			
9	2010089	Card Reader			
10	2400244	Mono Credit Display Assembly			
11	2400267	Fan Assembly (Includes Thermostat)			
	0070539	Thermostat			
12	30220062	#6-32 Kep Nut			
13	4180003	Door Hinge			
14	4003017	#6-32 x 3/16" Long Screw			
15	4003025	#6-32 x 1/4" Screw			
16	8801077	Card Reader Angle Bracket			
17	8801078	Card Reader Backing Bracket			
18	8801284	Back Plate			
19	8801299	Credit Board Bracket			
20	8900864	Door Frame			

CENTER DOOR ASSEMBLY MONO DEBIT GRAPHICS

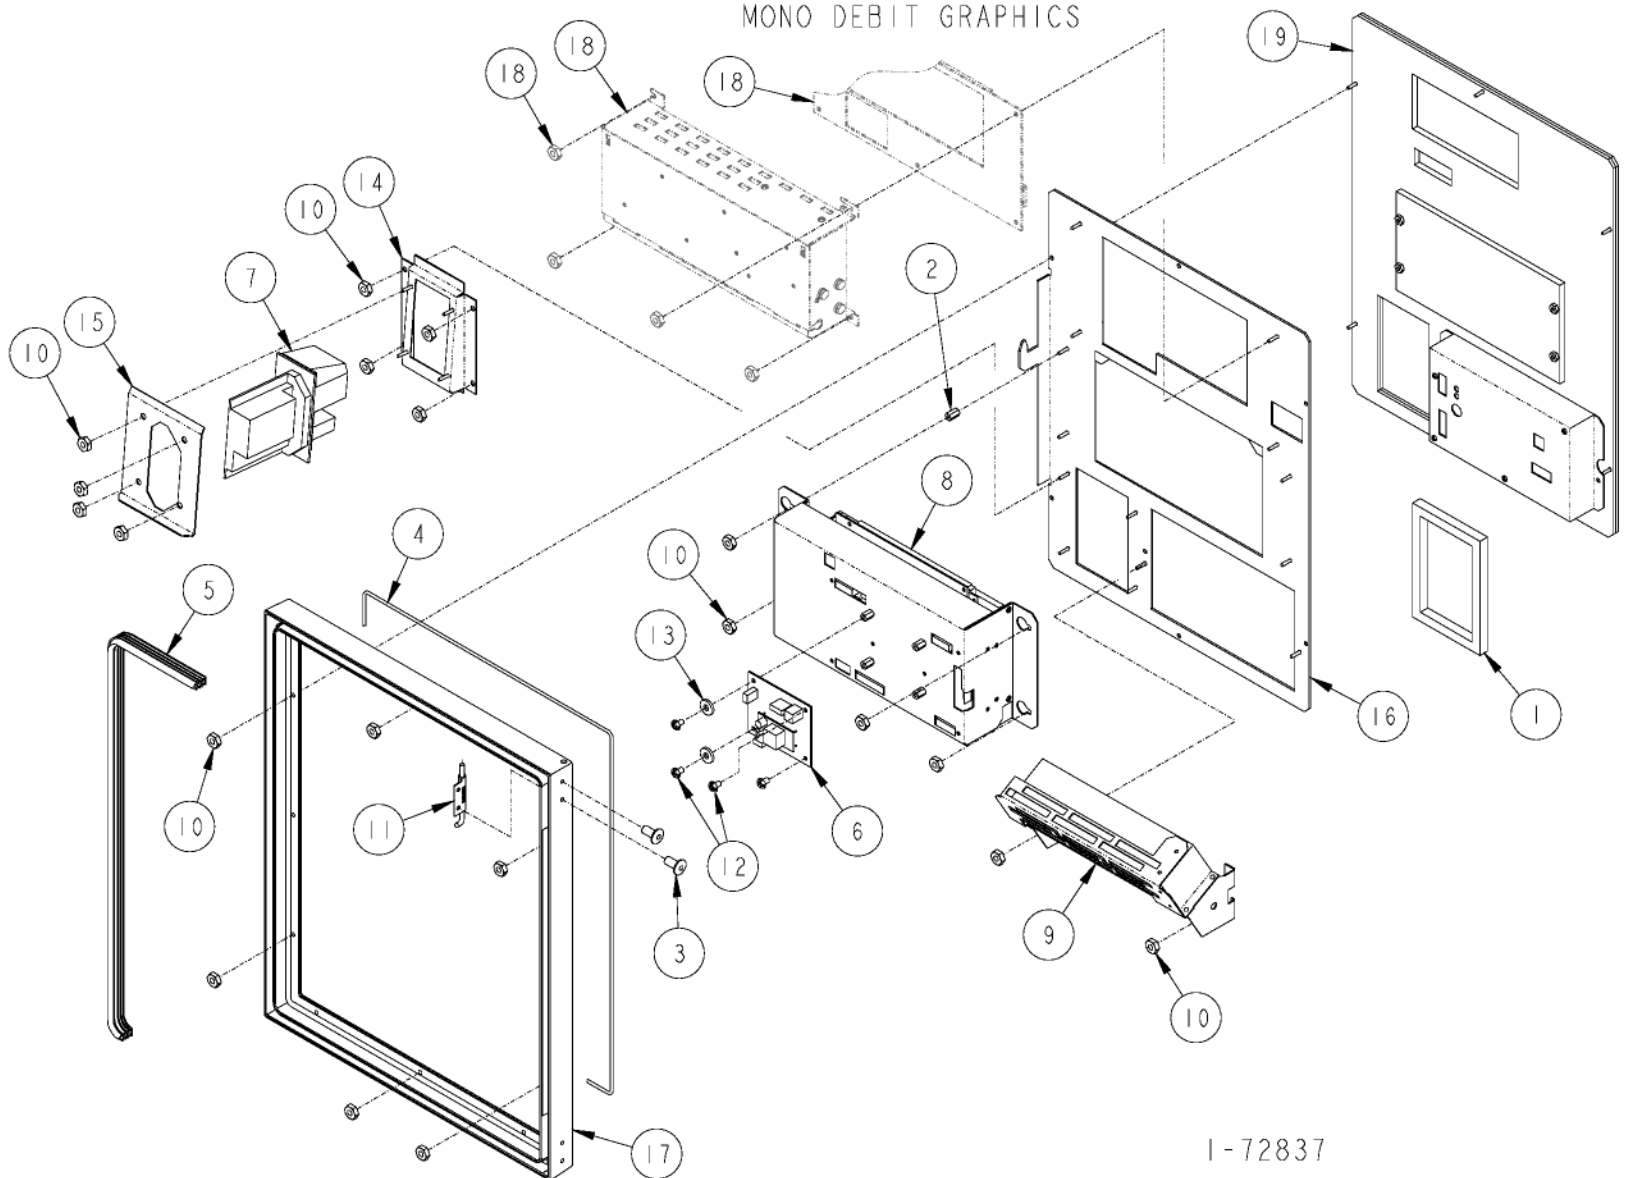

1-72837

CENTER DOOR ASSEMBLY

MONO DEBIT GRAPHICS

ITEM PART			ITEM PART		ITEM PART	
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION	DESCRIPTION
1	50-00649	Gasket	9	2400267	Fan Assembly (Includes Thermostat)	19 Touch Pad/Debit Module Assembly
2	0120266	Standoff				2400254-002 Arco
3	1-128281	Pop Rivet		0070539	Thermostat	2400254-004 Chevron
4	1-233680	Gasket				2400254-005 Citgo
5	1-233681	Gasket	10	30220062	#6-32 Kep Nut	2400254-006 Coastal
6	1408006	Backlight Control Board	11	4180003	Door Hinge	2400254-008 Diamond Shamrock
7	2010089	Card Reader	12	4003017	#6-32 x 3/16" Long Screw	2400254-009 Exxon
8	2400255	Mono Debit Display Assembly	13	4003025	Plastic Washer	2400254-010 Fina
	2400255-002 Arco		14	8801077	Card Reader Angle Bracket	2400254-011 Standard
	2400255-004 Chevron		15	8801078	Card Reader Backing Bracket	2400254-014 Mobil
	2400255-005 Citgo		16	8801284	Back Plate	2400254-016 Quiktrip
	2400255-006 Coastal		17	8900864	Door Frame	2400254-019 Shell
	2400255-008 Diamond Shamrock		18	For parts call out of Light Box		2400254-021 Texaco
	2400255-009 Exxon			Assembly see 72838		2400254-043 Gulf Coast
	2400255-010 Fina					For Tokheim internal use only:
	2400255-011 Standard					2400248 Complete Mono Debit
	2400255-014 Mobil					
	2400255-016 Quiktrip					
	2400255-019 Shell					
	2400255-021 Texaco					
	2400255-043 Gulf Coast					

TOUCH PAD DOOR PANELS

Centurion Dispensers

(Refer to description to determine part number for appropriate touch pad configuration.)

PART

NO.

DESCRIPTION

Centurion Dispensers before April 1, 1997 (16 Stud to 6 Stud Conversion Kit)

2990137-NCS	Non-Cardsmart
2990137-CDT	Credit
2990137-DBT	Debit

Centurion Dispensers built on or after April 1, 1997

0080124-001	Multi Hose 1 Product, 1 Price, Non-Cardsmart
0080124-002	Multi Hose 2 Product, 1 Price, Non-Cardsmart
0080124-003	Multi Hose 3 Product, 1 Price, Non-Cardsmart
0080124-004	Multi Hose 4 Product, 1 Price, Non-Cardsmart
0080125-002	Single Hose 2 Product, 1 Price, Non-Cardsmart
0080125-003	Single Hose 3 Product, 1 Price, Non-Cardsmart
0080125-004	Single Hose 4 Product, 1 Price, Non-Cardsmart
0080125-005	Single Hose 5 Product, 1 Price, Non-Cardsmart
0080126-001	Multi Hose 1 Product, 1 Price, Preset Option
0080126-002	Multi Hose 2 Product, 1 Price, Preset Option
0080126-003	Multi Hose 3 Product, 1 Price, Preset Option
0080126-004	Multi Hose 4 Product, 1 Price, Preset Option
0080127-002	Single Hose 2 Product, 1 Price, Preset Option
0080127-003	Single Hose 3 Product, 1 Price, Preset Option
0080127-004	Single Hose 4 Product, 1 Price, Preset Option
0080127-005	Single Hose 5 Product, 1 Price, Preset Option
0080128-001	Multi Hose 1 Product, 1 Price, Cardsmart & Debit Multi
0080128-002	Hose 2 Product, 1 Price, Cardsmart & Debit Multi
0080128-003	Hose 3 Product, 1 Price, Cardsmart & Debit Multi
0080128-004	Hose 4 Product, 1 Price, Cardsmart & Debit Single
0080129-002	Hose 2 Product, 1 Price, Cardsmart & Debit Single
0080129-003	Hose 3 Product, 1 Price, Cardsmart & Debit Single
0080129-004	Hose 4 Product, 1 Price, Cardsmart & Debit Single
0080129-005	Hose 5 Product, 1 Price, Cardsmart & Debit

