


Section Two

Exterior Trim/Framework

	Page Number	2 6 2 A D I S P E N S E R
Trim Assembly	2-2 – 2-4	
A page for notes	2-5	
Post Trim Assembly		
262A	2-6, 2-7	
262A-VC/IVC	2-8, 2-9	
262A-FL	2-10, 2-11	
262A-FL-VC/IVC	2-12, 2-13	
Chassis Assembly	2-14, 2-15	
Switch Box Assembly		
262A	2-16, 2-17	
262A-FL	2-18, 2-19	
Hose Clamp Assembly		
1" Clamp	2-20	
5/8" and 3/4" Clamp	2-21	
Cable Reel Assembly	2-22	
Decalcomania	2-23	

262A TRIM ASSEMBLY

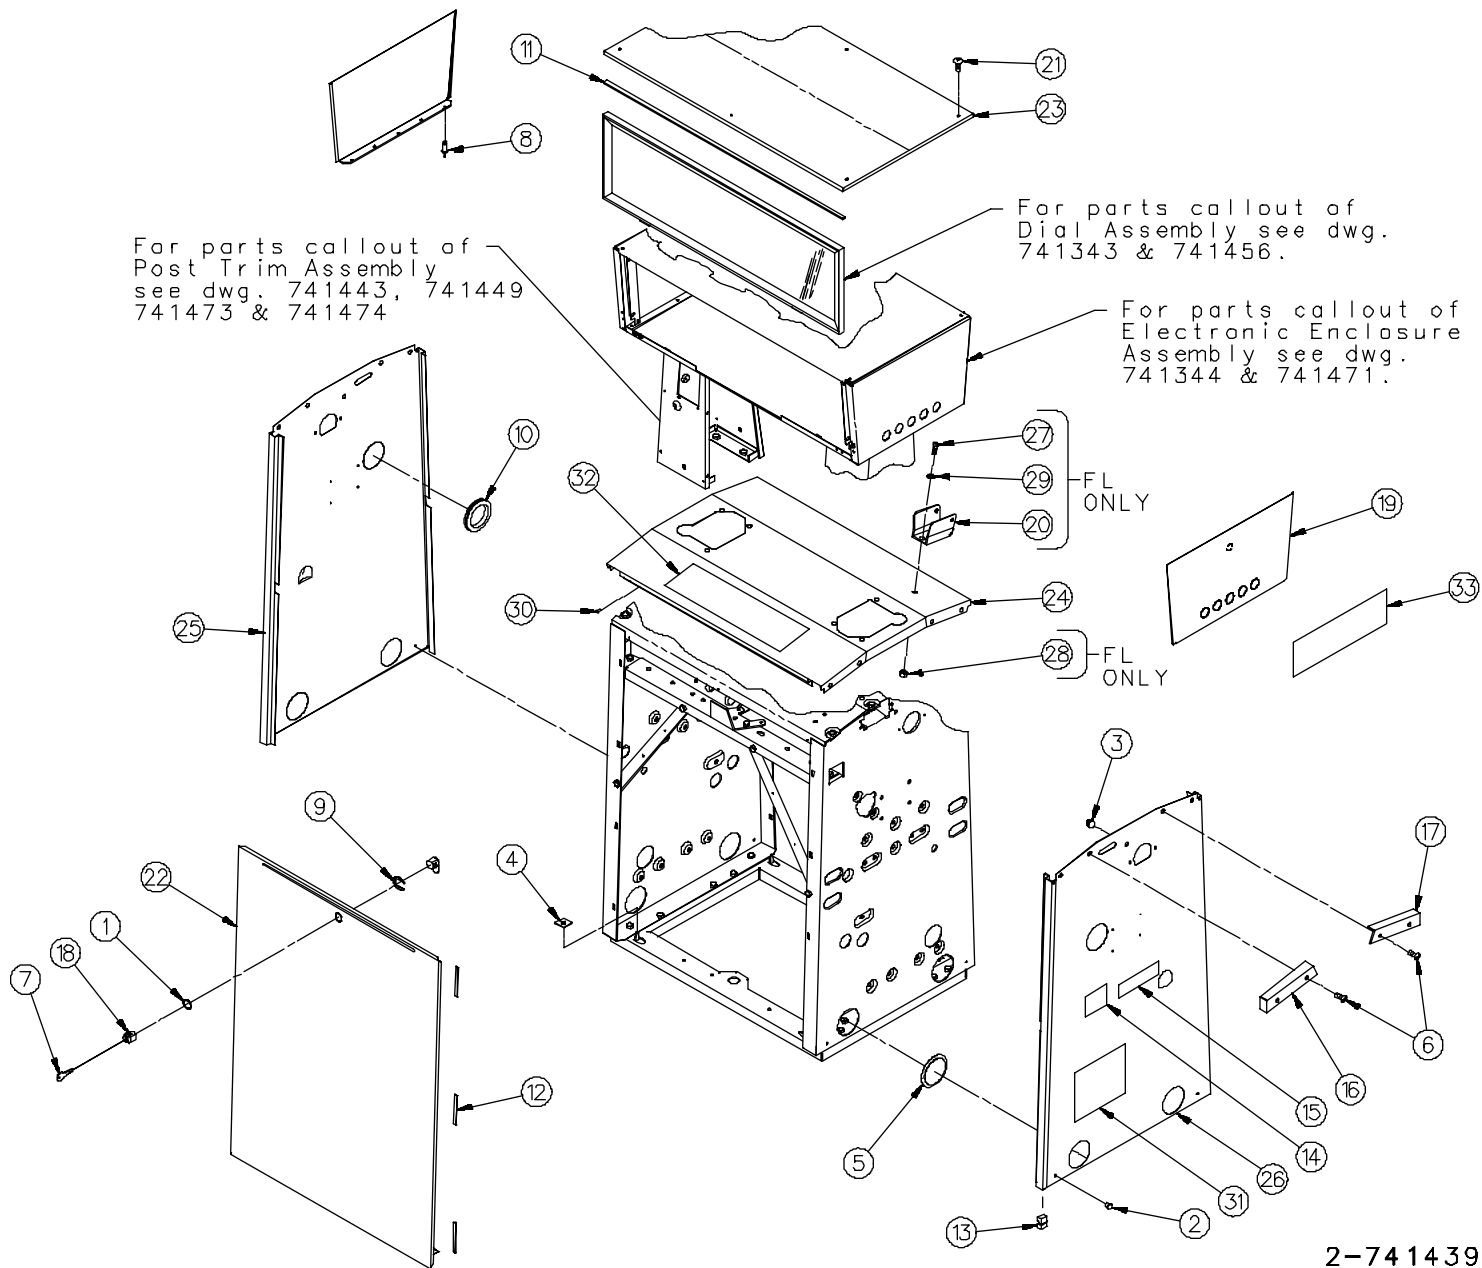

262A Dispenser Parts Manual Form 4660 Version 2.0
Tokheim Corporation October 1991 Rev. 07/29/94


Page 2-3

MODEL 262A TRIM ASSEMBLY

Item	Part No.	Description	Item	Part No.	Description
26	Side Housing (Stainless Steel) cont...		27	397-50041	1/4-20 x 5/8" Long Oval Head Machine Screw
	13-417011	262AFL-MS-HV-LC/LCS-RC, 262AFL-S/SS-HV-LCS-RC	28	01-50301	1/4-20 Hex Nut
	14-417011	262A-V1-RC	29	13-50641	1/4" Lockwasher
	15-417011	262A-IVC-2-TW (Canada)	30	1-128281	Pop Rivet
	16-417011	262A-VC-2-TW (Canada)	31	1-225094	Decal (Unleaded)
	17-417011	262AFL-MS/MM/M-HV-LCS-RC	32	<u>Decalcomania (see drawing number 71143)</u>	
	21-417011	262A-M-HV-LCS-RC	33	<u>Decalcomania (see drawing number 71143)</u>	
	22-417011	262A-RC-VC, 262A-RC-VC-1 & 2-TW			
	23-417011	262A-RC-IVC (Canada)			
	<u>Side Housing (Painted)</u>				
	19-417011	262AFL-1 & 2-RC-TW, 262A			
	20-417011	262A, 262A-RC,			
	<u>Side Housing Assembly (Includes Item # 5)</u>				
	415318-8	262A/AFL-M-HV-LC-RC			
	415318-9	262A/AFL, 262A/AFL-RC, 262A-HS, 262A/AFL-1 & 2-TW, 262A/AFL-1 & 2-RC-TW, 262AFL-M/MS-RC, 262AFL-M-1-RC-TW			
	415318-11	262A, 262A-RC, 262A-HD, 262A-1& 2-TW (Canada), 262A-1 & 2-RC-TW(Canada), 262AFL-MS/S-RC, 262A-HC			
	415318-14	262A-SG, 262A-2-TW-SG			
	<u>Side Housing (L.S.-Serial Plate Side)</u>				
	2-417011	262AFL-S-RC			
	4-417011	262A/AFL-M-HV-LC-RC			
	5-417011	262A/AFL, 262A/AFL-RC, 262A-HS, 262A/AFL-1 & 2-TW, 262A/AFL-1 & 2-RC- TW, 262AFL-M/MS-RC, 262AFL-M-1-RC-TW			
	9-417011	262A/AFL-VC-RC, 262A/AFL-VC-1 & 2-RC-TW			
	11-417011	262A/AFL-IVC			
	12-417011	262A-SG, 262A-2-TW-SG			
	13-417011	262AFL-MS-HV-LC-RC			
	14-417011	262A-V1-RC			
	15-417011	262A-IVC-2-TW (Canada)			
	16-417011	262A-VC-2-TW (Canada)			
	17-417011	262AFL-M/MS/MM-HV-LCS-RC			
	<u>Side Housing (Painted)</u>				
	18-417011	262A/AFL-1 & 2-TW, 262A/AFL-1 & 2-TW, 262AFL-1 & 2-RC-TW			
	19-417011	262AFL-1 & 2-TW, 262AFL-1 & 2-RC-TW			
	22-417011	262A-RC-VC-1 & 2-TW, 262A-VC-1-TW			
				</	

NOTES


262A POST TRIM ASSEMBLY



MODEL 262A POST TRIM ASSEMBLY

Item	Part No.	Description	Item	Part No.	Description
1	1-118761	Washer	18	10-52922	Tru-Arc Retaining Ring
2	1-127967	#12-24 x 1/2" Long Oval Head Thread Cutting Screw	19	174-53620	#8-32 x 1/2" Long Phillip Truss Head Screw
3	1-130451	Shaft	20	35-54742	5/16-18 x 5/8" Long M-F Hex Head Whiz-Lock Screw
4	1-227254	Switch Link	21	02-54752	5/16-18 M-F Flange Whiz Locknut
5	1-227257	Spring			
6	3-314548	Nozzle Guide			
7	1-314549	Operating Lever			
8	<u>Ad Panel (Off Set Panel)</u>		For complete Post Assembly order:		
	1-416880	Painted	420144-1	262A, 262A-RC, 262A-1 & 2-RC-TW (Hose #1)	
	2-416880	Stainless Steel	420144-2	262A-1 & 2-TW, 262A-1 & 2-RC-TW (Hose #2)	
	3-416880	Brushed Stainless Steel	420144-3	262A-1-TW (Hose #1)	
	<u>Ad Panel (Flat Panel)</u>		420144-4	262A-2-TW (Hose #1)	
	1-416882	Painted	420144-5	262A-M-HV-LC-RC	
	2-416882	Stainless Steel	420144-6	262A-2-TW (Hose #1) 3/4 H.P. Motor	
	<u>Rear Post Trim (Not used with Ad Panel)</u>		420144-7	262A-HD (3/4 H.P. 380 Volt)	
	1-414795	Stainless Steel	420144-8	262A-HD-2-TW (3/4 H.P. 380 Volt)	
	2-414795	Painted	420144-9	262A-HD-2-TW (Hose #2) 3/4 H.P. 380 Volt	
9	<u>Post Trim (Without Nozzle)</u>		420144-10	262A-HS	
	1-414797	Used with Rear Post Trim	420144-11	262A-HD-1-TW (Hose #1) 3/4 H.P. 380 Volt	
	1-416883	Used with Ad Panel Post Trim (With Nozzle)	420144-12	262A-HD-1-TW (Hose #2) 3/4 H.P. 380 Volt	
	2-414797	Used with Rear Post Trim	420144-13	262A-HS (380 Volt)	
	2-416883	Used with Ad Panel	420144-14	262A-M-HV-LCS-RC	
10	416686-1	Post Welding Assembly	Reference: Final Assembly		
11	287-50001	#10-32 x 3/8" Long Round Head Machine Screw	419755	262A (Canada)	
12	1-131585	1/4" Plainwasher	420038	262A	
13	10-50641	#10 Lockwasher	420548	262A-HD/HS	
14	17-51201	1/16" Dia. x 1/2" Long Cotter Pin	420653	262A-M-HV-LCS-RC	
15	07-51511	Rod End Pin	416897	Advertising Panel	
16	22-51511	Rod End Pin	420243	Spec For 1/2 H.P. & 3/4 H.P. Motor	
17	06-52482	Tru-Arc Retaining Ring Type “E”			

262A-VC/IVC POST TRIM ASSEMBLY

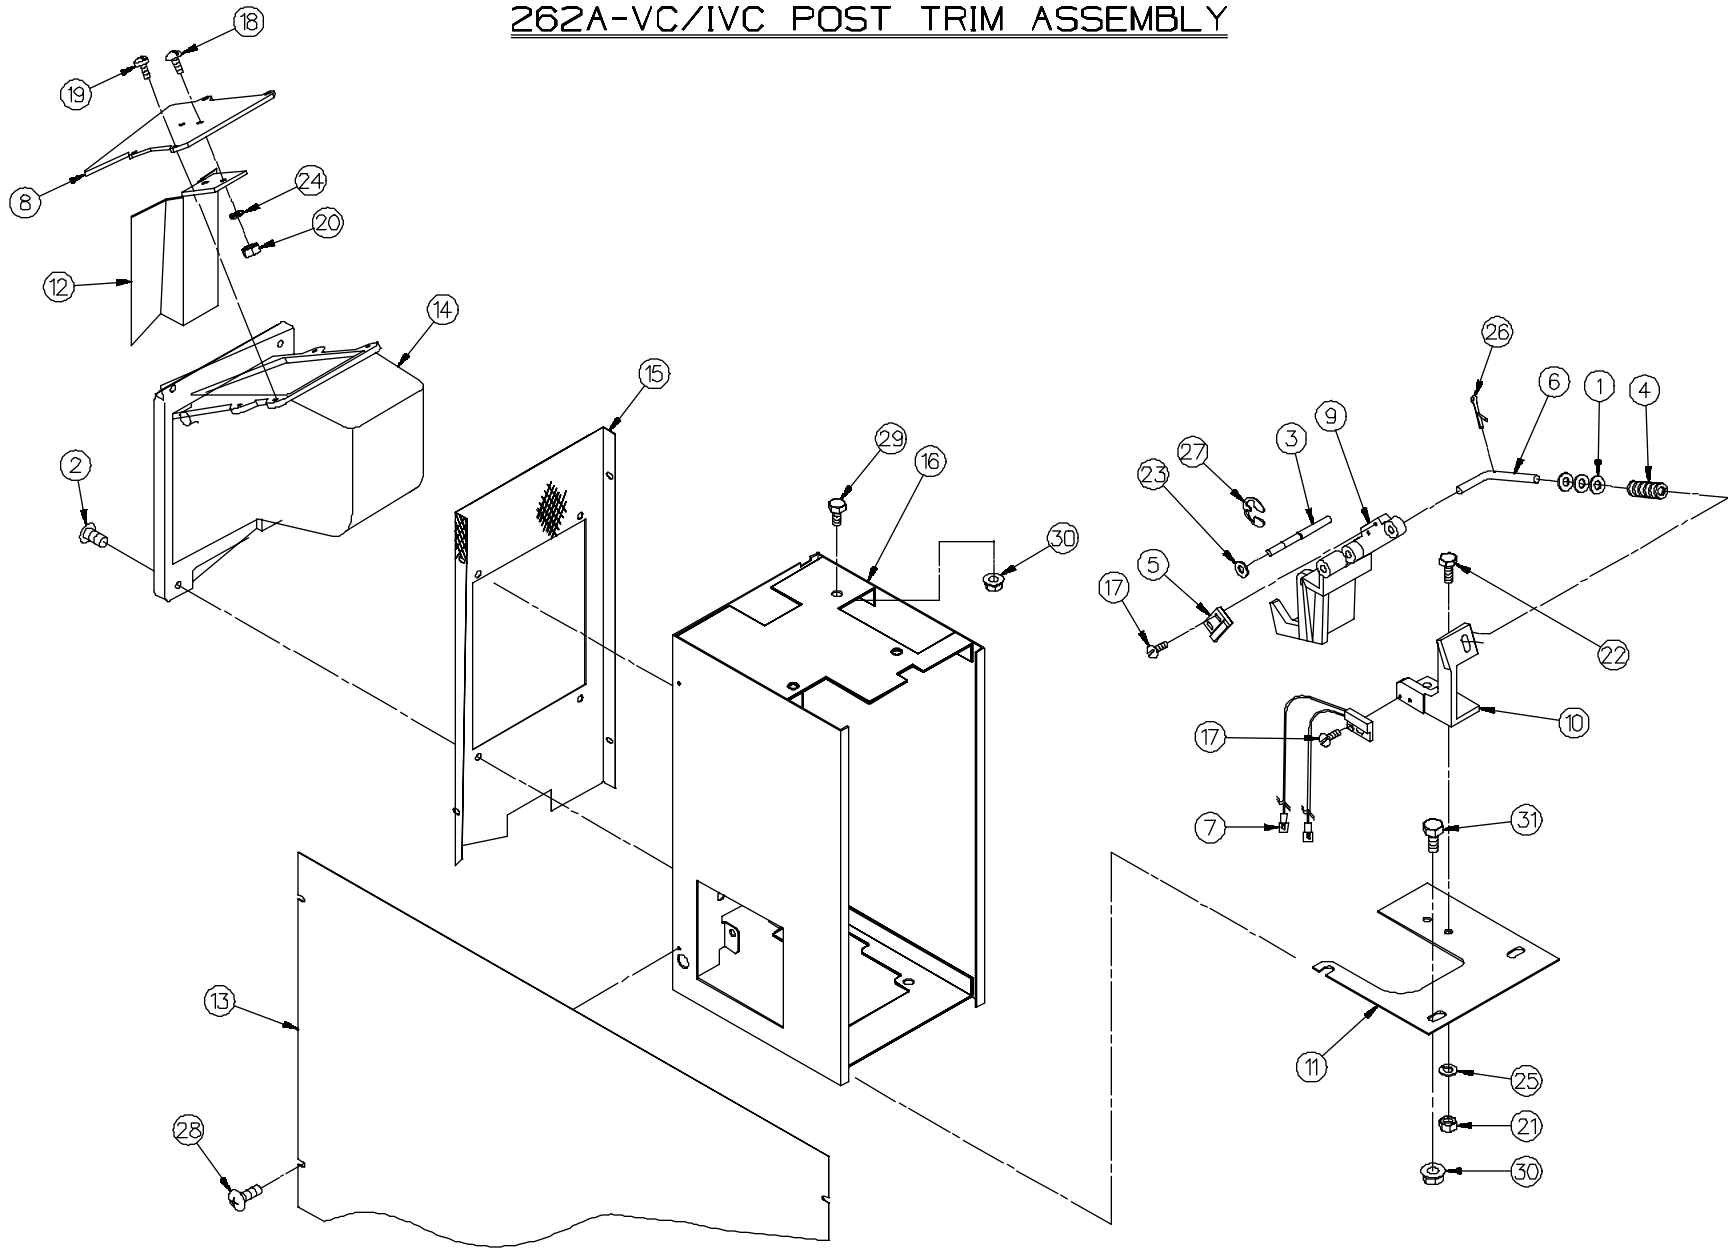

2-741473

2-741473


1 of 1

MODEL 262A -VC/IVC POST TRIM ASSEMBLY

Item	Part No.	Description	Item	Part No.	Description
1	1-126182	Washer	18	291-50001	#10-32 x 1/2" Long Round Head Machine Screw (IVC)
2	2-127967	#12-24 x 3/4" Long Oval Head Thread Cutting Screw	19	106-50181	#10-32 x 1/2" Long Fillister Head Screw (VC)
3	1-130451	Shaft		291-50001	#10-32 x 1/2" Long Round Head Machine Screw (IVC)
4	1-131424	Spring	20	13-50211	#10-32 Hex Machine Nut (IVC)
5	1-131515	Actuator	21	01-50301	1/4-20 Hex Nut
6	1-131574	Link	22	03-50361	1/4-20 x 3/4" Long Hex Head Cap Screw
7	228150-1	Switch Sensor Assembly	23	06-50621	Plain Washer
8	<u>Boot Top</u>		24	10-50641	#10 Lockwasher-Split (IVC)
	2-316683	VC	25	13-50641	1/4" Lockwasher-Split
	2-317444	IVC	26	17-51201	1/16" Dia. x 1/2" Long Cotter Pin
	3-317444	VC (Emco Wheaton #A4015)	27	06-52482	Tru-Arc Retaining Ring Type "E"
9	1-317422	Operating Lever	28	174-53620	#8-32 x 1/2" Long Phillip Truss Head Screw
10	1-317423	Support	29	35-54742	5/16-18 x 5/8" Long M-F Hex Head Whiz-Lock Screw
11	1-317427	Column Top Plate	30	02-54752	5/16-18 M-F Flange Whiz Locknut
12	<u>Nozzle Stop</u>		31	35-55132	5/16-18 x 5/8" Long M-F Flange Whiz-Lock Screw
	1-317487	IVC			
	1-319734	VC (Emco Wheaton #A4015)			
13	2-317838	Ad Panel		Reference: Final Assembly	
	1-418073	Post Trim (Not Used With Ad Panel)		420392	
14	1-417126	Nozzle Boot		420392	(Canada)
15	<u>Post Trim</u>			421536	Specification For Vapor Recovery Nozzle Stop (Used only with Emco Wheaton #A4015)
	1-418075	Post Without Nozzle			
	1-418074	Post With Nozzle			
16	418090-1	Post Weld Assembly			
17	30-50001	#4-40 x 3/8" Long Round Head Machine Screw			

2-741473

262AFL POST TRIM ASSEMBLY (FRONT LOAD)

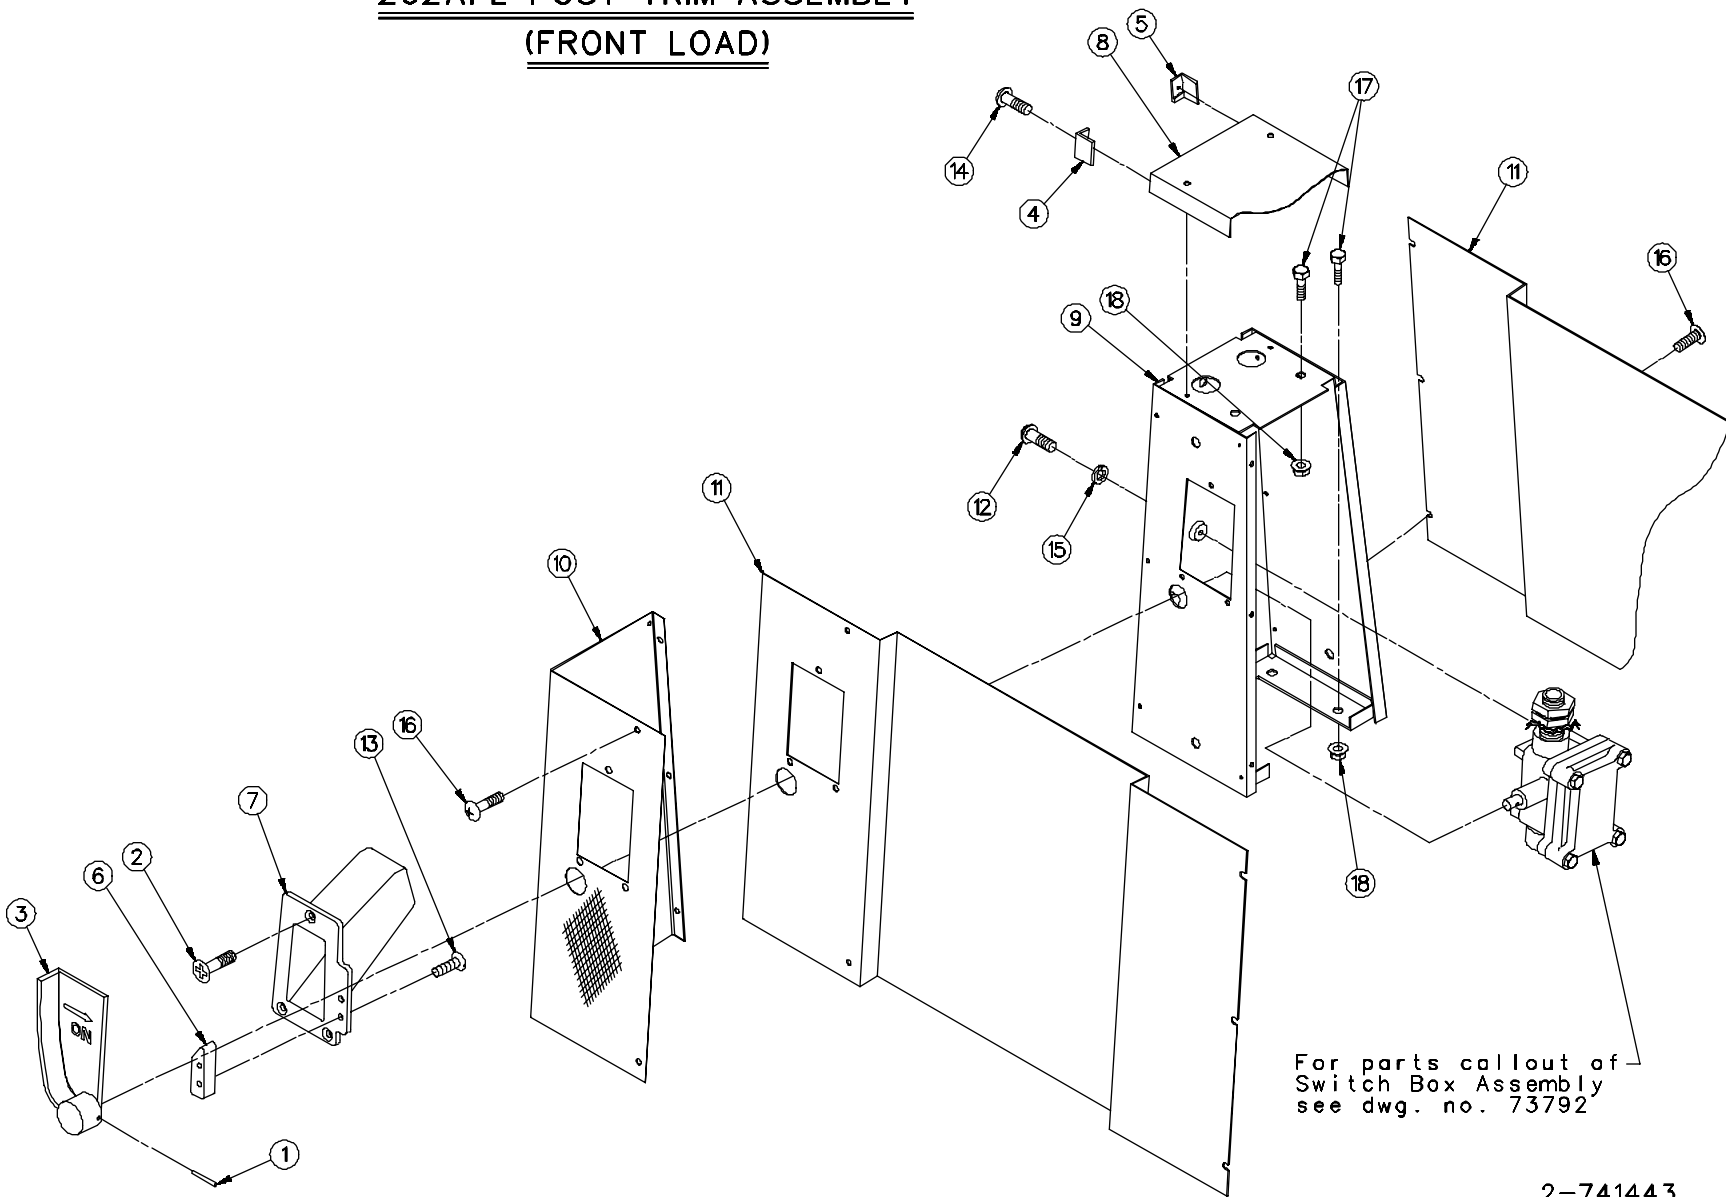

2-741443

MODEL 262A-FL POST TRIM ASSEMBLY

Item	Part No.	Description	Item	Part No.	Description
1	12-123452	1/8" x 1-1/8" Long Groov-Pin	13	326-50011	#12-24 x 1/2" Long Flat Head
2	1-127967	#12-24 x 1/2" Long Oval Head			Machine Screw
		Thread Cutting Screw	14	06-50481	#4-40 x 1/2" Long Pan Head Thread
3	1-226386	Operating Lever			Cutting Screw
4	1-226856	Corner Cap (Left)	15	10-50641	#10 Lockwasher
5	1-226857	Corner Cap (Right)	16	174-53620	#8-32 x 1/2" Long Truss Head Thread
6	1-227991	Stop Block			Cutting Screw
7	1-314548	Nozzle Guide	17	35-54742	5/16-18 x 5/8" Long M-F Hex Head
8	1-316104	Cover			Whiz-Lock Screw
9	415772-2	Post Welding Assembly	18	02-54752	5/16-18 M-F Flange Whiz-Lock Nut
10	<u>Post Trim</u>				
	1-417663	Without Nozzle			
	1-417664	With Nozzle			
11	<u>Advertising Panel With Nozzle</u>				
	3-417666	Off Set Panel (Painted)			
	4-417666	Off Set Panel (Stainless Steel)			
	7-417666	Off Set Panel (Brushed Stainless Steel)			
	3-417785	Flat Panel (Painted)			
	4-417785	Flat Panel (Stainless Steel)			
	<u>Advertising Panel Without Nozzle</u>				
	5-417666	Off Set Panel (Painted)			
	6-417666	Off Set Panel (Stainless Steel)			
	5-417785	Flat Panel (Painted)			
	6-417785	Flat Panel (Stainless Steel)			
12	287-50001	#10-32 x 3/8" Long Round Head			
		Machine Screw			


For complete Nozzle Guide Assy. order: 317088-1

Reference: Final Assembly

420039	262AFL
420315	262AFL-M-HV-LC-RC
420364	262AFL-MS/S-RC, 262AFL-M-1-RC-TW
420653	262AFL-MS/MM/SS/M-HV-LCS-RC

2-741443

262AFL-VC/IVC POST TRIM ASSEMBLY

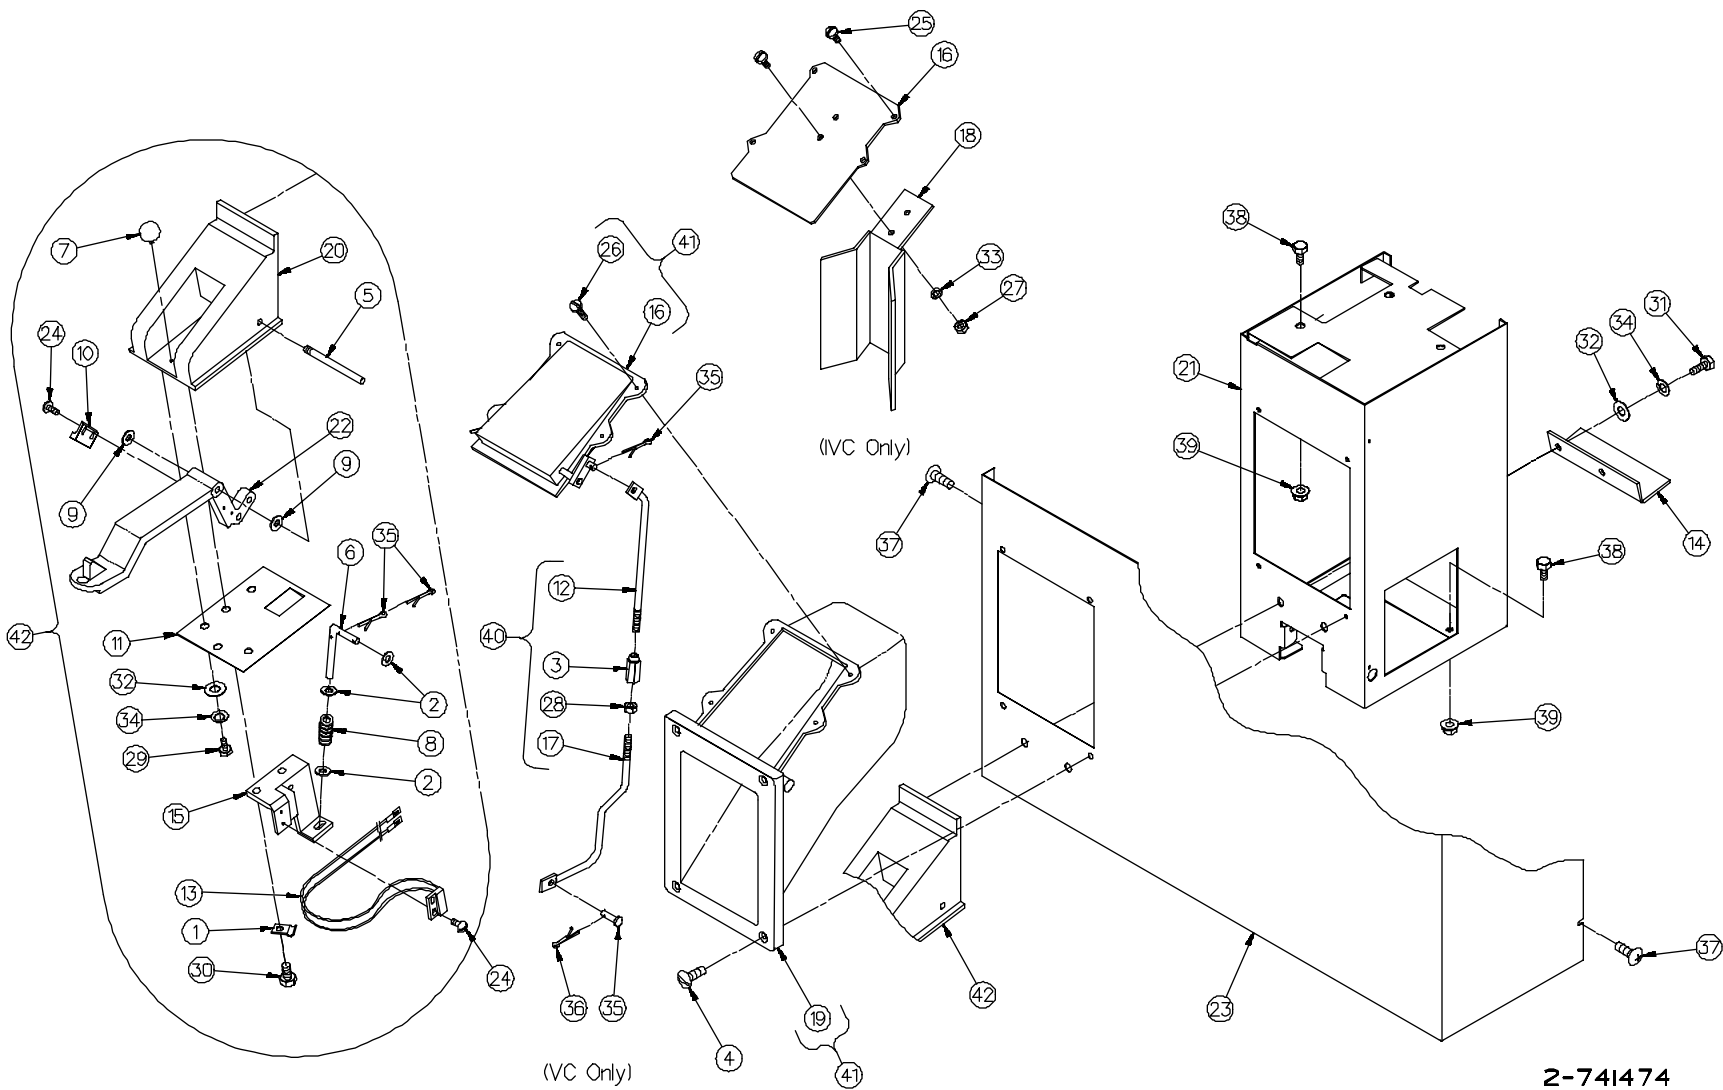

2-741474

2-741474

1 of 1


MODEL 262A -FL -VC/IVC POST TRIM ASSEMBLY

Item	Part No.	Description	Item	Part No.	Description
1	1-125244	Cable Clamp	25	291-50001	#10-32 x 1/2" Long Round Head Machine Screw (IVC)
2	1-126182	Washer	26	106-50181	#10-32 x 1/2" Long Fillister Head Machine Screw (VC)
3	1-127777	Turnbuckle (VC)	27	13-50211	#10-32 Hex Machine Nut (IVC)
4	2-127967	#12-24 x 3/4" Long Oval Head Thread Cutting Screw	28	01-50301	1/4-20 Hex Nut (VC)
5	1-131349	Shaft	29	01-50361	1/4-20 x 1/2" Long Hex Head Cap Screw
6	1-131350	Link	30	02-50361	1/4-20 x 5/8" Long Hex Head Cap Screw
7	1-131423	Bumper	31	03-50361	1/4-20 x 3/4" Long Hex Head Cap Screw
8	1-131424	Spring	32	07-50621	1/4" Plain Washer
9	1-131445	Nylon Washer	33	10-50641	#10 Lockwasher-Split (IVC)
10	1-131515	Actuator	34	13-50641	1/4" Lockwasher-Split
11	1-227593	Magnet Shield	35	17-51201	1/16" Dia. x 1/2" Long Cotter Pin
12	1-227763	Upper Link (VC)	36	22-51511	Rod End Pin
13	228150-1	Switch Sensor Assembly	37	174-53620	#8-32 x 1/2" Long Phillip Truss Head Screw
14	1-228938	Bracket	38	35-54742	5/16-18 x 5/8" Long M-F Hex Head Whiz-Lock Screw
15	1-316511	Support	39	02-54752	5/16-18 Hex Head Whiz-Lock Nut
16	316803-1	Door Assembly (VC)	40	317439-1	Linkage Assembly
	2-317444	Boot Top (IVC)	41	417222-1	Boot Assembly
17	1-317438	Linkage Rod (VC)	42	418219-1	Lever Assembly
18	1-317487	Nozzle Stop (IVC)			
19	1-417126	Nozzle Boot			
20	1-417252	Cover			
21	418090-1	Post Welding Assembly			
22	1-418112	Operating Lever			
23	<u>Ad Panel</u>				
	3-418726	With Nozzle			
	4-418726	Without Nozzle			
24	30-50001	#4-40 x 3/8" Long Round Head Machine Screw			

Reference: 420396 Final Assembly

2-741474


262A CHASSIS ASSEMBLY

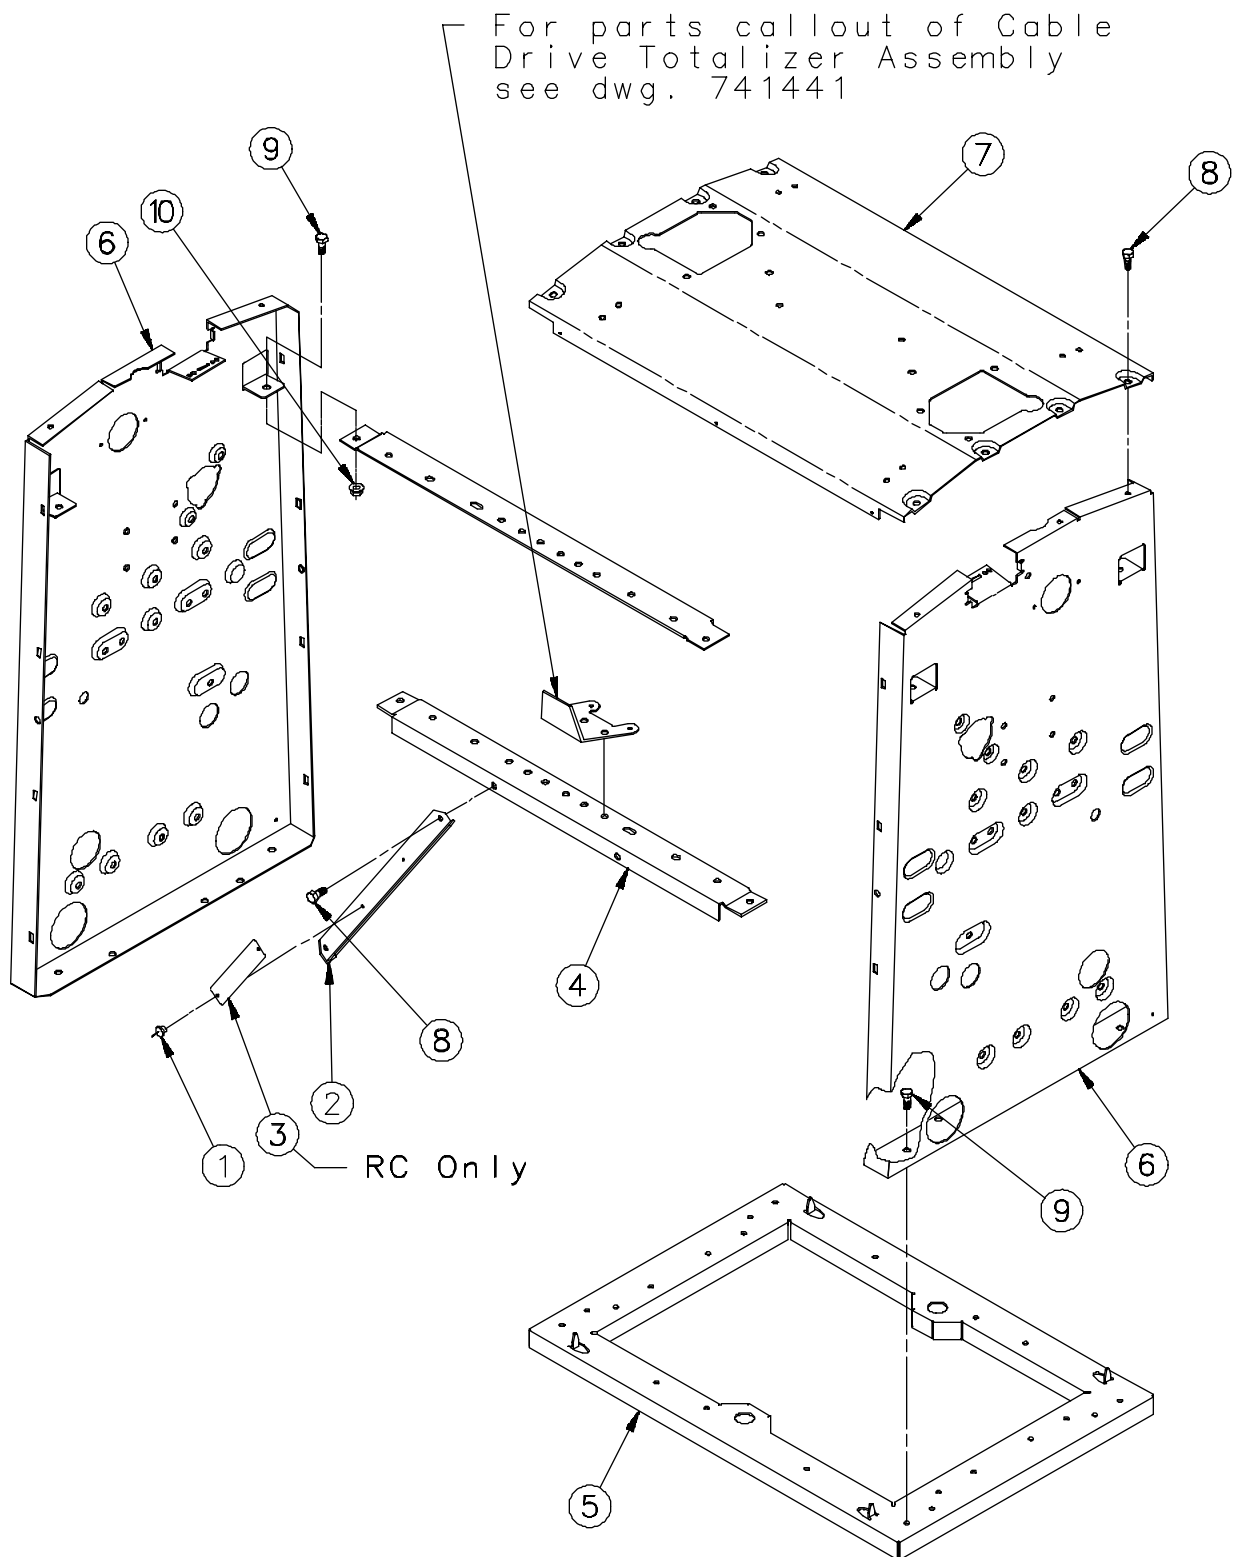

2-741438

[illegible]

262A SWITCH BOX ASSEMBLY

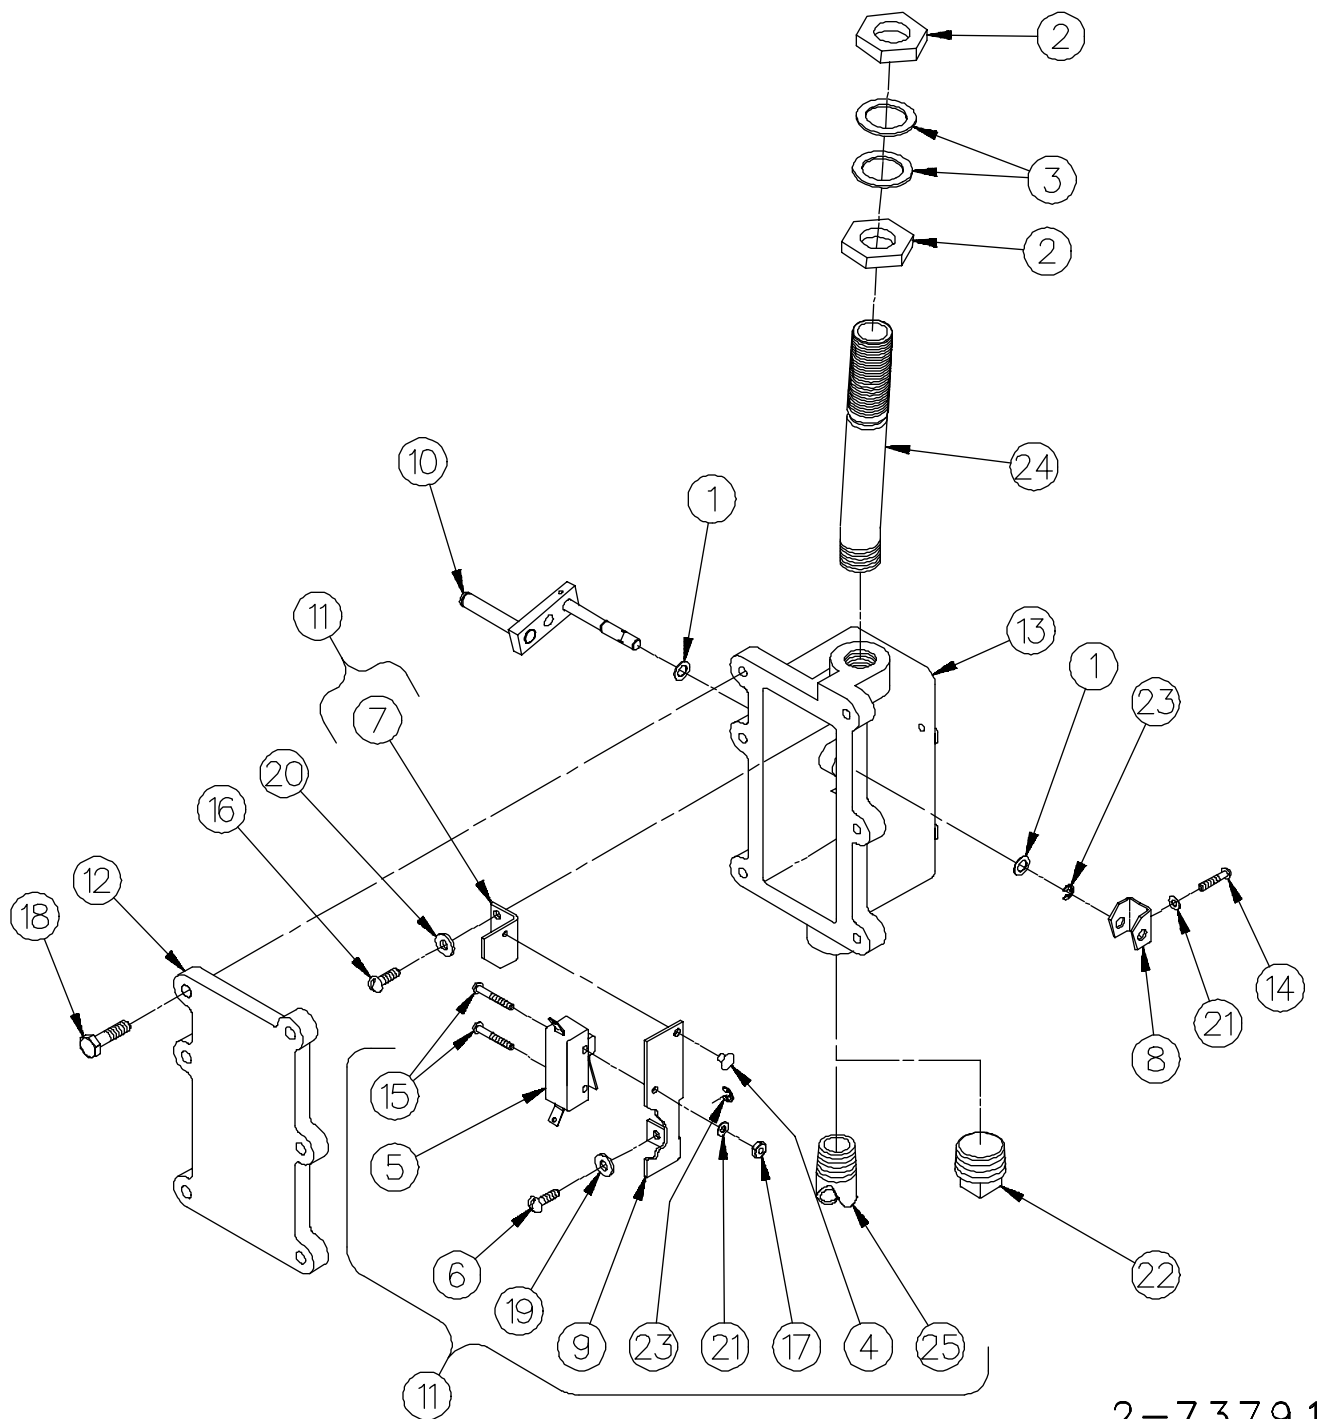

2-73791


MODEL 262A SWITCH BOX ASSEMBLY

<u>Item</u> <u>No.</u>	<u>Part</u> <u>No.</u>	<u>Description</u>	<u>Item</u> <u>No.</u>	<u>Part</u> <u>No.</u>	<u>Description</u>
1	1-126182	Washer			Wire Harness Assembly cont...
2	1-130590	Hex Locknut		TBS*	262A-2-TW (Hose #1)(3/4
3	1-130613	Conduit Washer			H.P. Motor)
4	1-131000	Shoulder Rivet		TBS*	262A-HS
5	1-131280	Switch			
6	1-131302	Special Screw	25	<u>Wire Harness Assembly</u>	
7	1-131303	Hinge		TBS*	262A-2-RC-TW, 262A,
8	1-227255	Switch Actuator			262A-RC & 262A-
9	1-227256	Mounting Bracket			262A-1-RC-TW (Hose
10	227262-1	Switch Shaft Assembly			#1)
11	230444-1	Switch & Bracket		TBS*	262A-M-HV-LC-RC
		Assembly		TBS*	262A-2-TW (Hose #2)
12	1-316355	Switch Box Cover		TBS*	262A-1-TW (Hose #1)
13	1-416685	Switch Box		TBS*	262A-2-TW (Hose #1)
14	96-50001	#6-32 x 1/2" Long Round			(3/4 H.P. Motor)
		Head Machine Screw		TBS*	262A-HS
15	104-50001	#6-32 x 1" Long Round			
		Head Machine Screw			For complete Switch Box Assembly order:
16	287-50001	#10-32 x 3/8" Long Round		420145-1	262A-2-RC-TW, 262A,
		Head Machine Screw			262A-RC &
17	03-50211	#6-32 Hex Mach Nut			262A-1-RC-TW (Hose
18	04-50361	1/4-20 x 1" Long Hex			#1)
		Head Cap Screw		420145-2	262A-2-RC-TW, 262A-1-
19	05-50621	#10 Plain Washer			RC-TW,
20	10-50641	#10 Lockwasher			262A-1-TW & 262A-2-
21	03-50761	#6 Shakeproof			TW (Hose #2)
		Lockwasher		420145-3	262A-1-TW
22	04-51901	1/2" Pipe Plug (262A-1 &		420145-4	262A-2-TW
		2-TW & 262A-1 & 2-RC-		420145-5	262A-M-HV-LC-RC
		TW only) (Hose #2)		420145-6	262A-2-TW (Hose #1)(3/4
23	05-52482	Retaining Ring Type "E"			H.P. Motor)
				420145-7	262A-HD 3/4 H.P. 380
24	<u>Wire Harness Assembly</u>				Volt
	TBS*	262A-2-RC-TW, 262A,		420145-8	262A-HD-2-TW (Hose
		262A-RC,			#1) 3/4 H.P. 380 Volt
		262A-1-RC-TW (Hose		420145-9	262A-HD-2-TW (Hose
		#1),			#2) 3/4 H.P. 380 Volt
		262A-2-TW & 262A-M-		420145-10	262A-HS
		HV-LC-RC		420145-11	262A-HD-1-TW (Hose
	TBS*	262A-2-RC-TW, 262A-1-			#1) 3/4 H.P. 380 Volt
		RC-TW,		420145-12	262A-HD-1-TW (Hose
		262A-1-TW & 262A-2-			#2) 3/4 H.P. 380 Volt
		TW (Hose #2),		420145-13	262A-HS 380 Volt
				420145-14	262A-M-HV-LCS-RC

* TBS = "To be supplied"

2-73791

262AFL SWITCH BOX ASSEMBLY

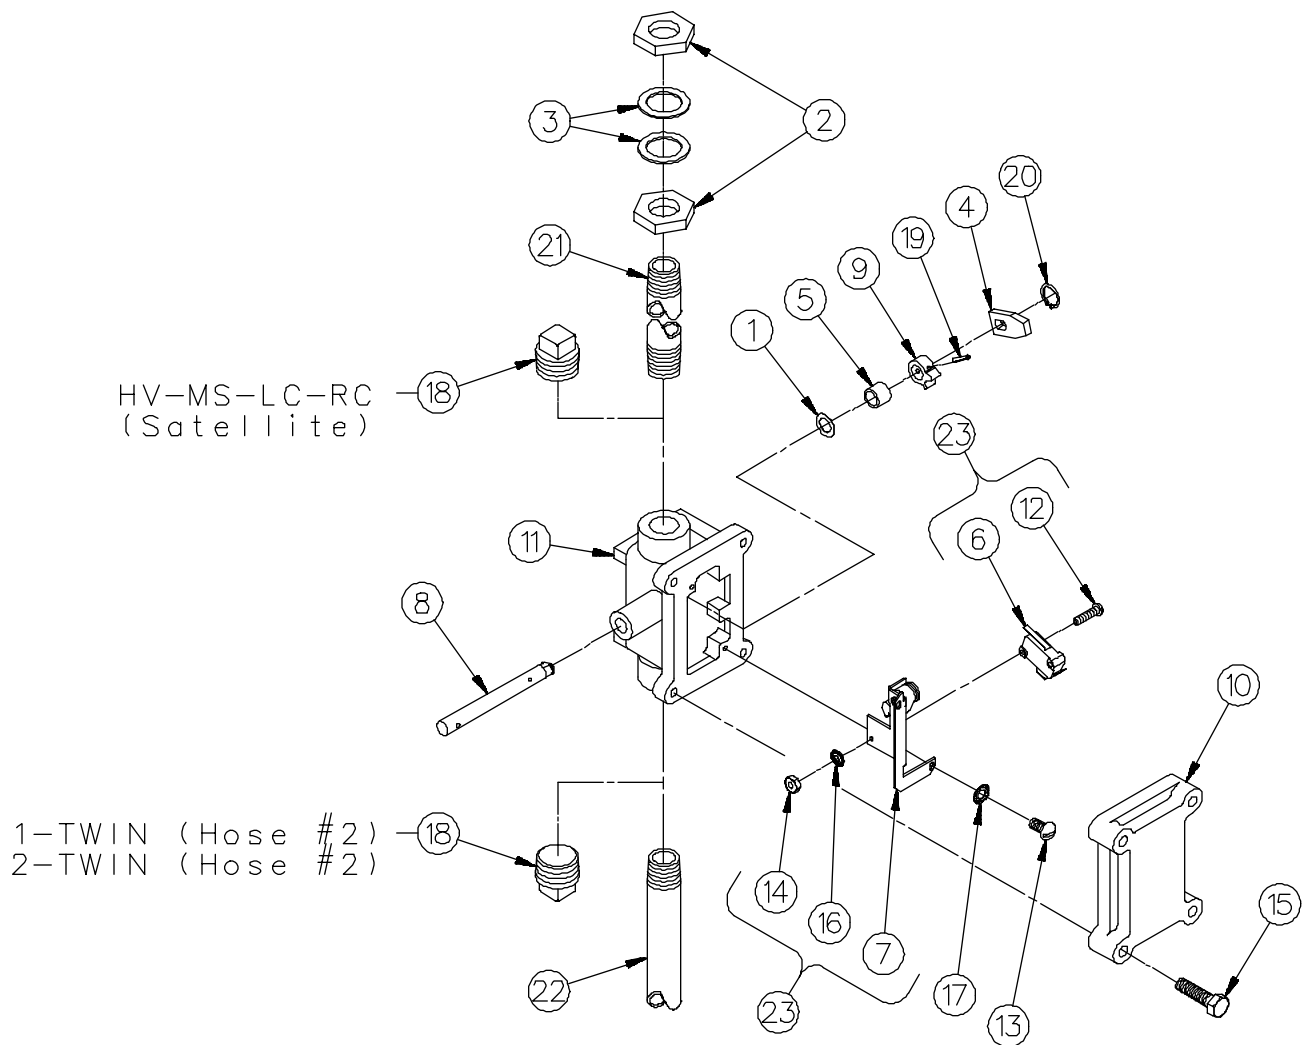

2-73792


MODEL 262A-FL SWITCH BOX ASSEMBLY

<u>Item No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Item No.</u>	<u>Part No.</u>	<u>Description</u>
1	3-110901	Thrust Washer	22	<u>Conduit and Harness Assembly</u>	
2	1-130590	Hex Locknut		TBS	SINGLE, MASTER, 1-TWIN, 2-RC-TW (Hose #1)
3	1-130613	Conduit Washer		TBS	2-TWIN (Hose #1)
4	1-130965	Stop		TBS	SATELLITE
5	1-131365	Spacer		TBS	HV-MS-LC-RC (Master Side)
6	<u>Switch</u>			TBS	HV-MS-LC-RC (Satellite Side)
	1-225240	110 Volt			
	2-225240	220 Volt			
7	226299-1	Bracket & Pawl Assembly	23	<u>Switch & Bracket Assembly</u>	
8	1-226350	Shaft		226354-4	110 Volt
9	1-226352	Cam		226354-5	220 Volt
10	1-314279	Pulser Box Cover			
11	1-415687	Switch Box		For Complete Switch Box Assembly Order:	
12	36-50001	#4-40 x 5/8" Long Round Head Machine Screw		420285-1	262AFL, 262AFL-RC, 262AFL-1-RC-TW, 262AFL-2-RC-TW (Hose #1), 262AFL- M-HV-LC-RC
13	90-50001	#6-32 x 5/16" Long Round Head Machine Screw		420285-2	262AFL-1-TW, 262AFL-2-TW, 262AFL-1-RC-TW, 262AFL-2-RC-TW (Hose #2)
14	02-50211	#4 Hex Nut		420285-3	262AFL-1-TW (Hose #1)
15	06-50361	1/4-20 x 1-1/4" Long Hex Head Cap Screw		420285-4	262AFL-2-TW (Hose #1)
16	01-50761	#4 Lockwasher		420285-5	262AFL SATELLITE
17	03-50761	#1106 Lockwasher		420285-6	262AFL MASTER
18	04-51901	1/2" Pipe Plug		420285-7	262AFL-HV-MS-LC-RC (Master Side)
19	34-52901	3/32" Dia x 5/8" Long Rollpin		420285-8	262AFL-HV-MS-LC-RC (Satellite Side)
20	13-52922	Tru-Arc Retaining Ring		420285-9	262AFL-SS-HV-LCS-RC (Satellite Side)
21	<u>Conduit and Harness Assembly</u>			420285-10	262AFL-MS-HV-LCS-RC (Satellite Side)(220 Volt)
	TBS	SINGLE, MASTER, 1-RC-TWIN, 2-TWIN (Hose #1)			
	TBS	1-TWIN (Hose #1)			
	TBS	TWIN (Hose #2)			
	TBS	HV-MS-LC-RC (Master Side)			


2-73792

*** TBS = "To be supplied"**

1" HOSE CLAMP

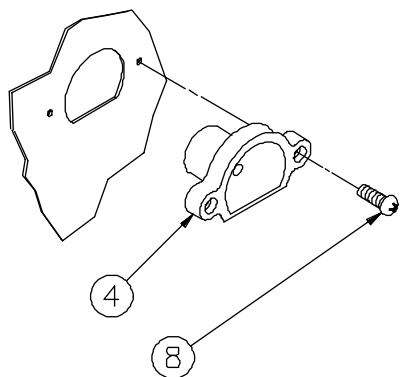

Knot Cable Per Dwg. 220855

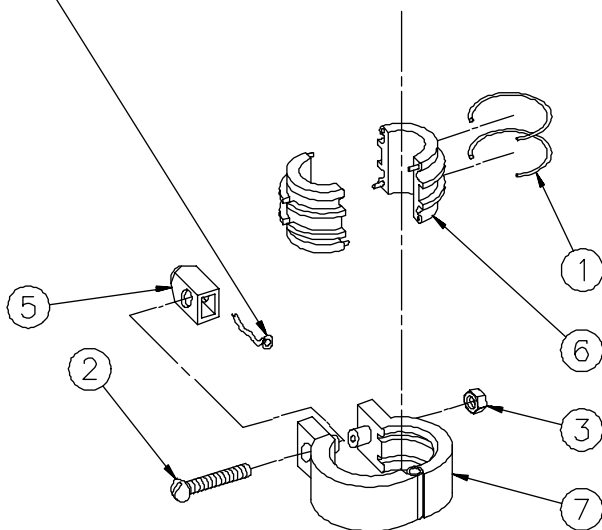


Item No.	Part No.	Name Of Part
1	1-131213	Snap Ring
2	1-131217	#10-24 x 1-1/4" Long Round Head Machine Screw
3	1-131218	#10-24 Hex Locknut
4	1-223979	Eyelet
5	1-226939	Swivel
6	Top & Bottom Halves	
	1-226940	Natural
	2-226940	Black
	3-226940	Green
7	1-226941	Outer Clamp
8	28-54570	#10-32 x 5/8" Phillips Round Head Self Tapping Screw

For complete Hose Clamp Assembly
(Less Cable & Eyelet) order:

316009-1	Natural
316009-2	Black
316009-3	Green
1-131215	1" Hose Clamp

2-73809

5/8" & 3/4" HOSE CLAMP ASSEMBLY

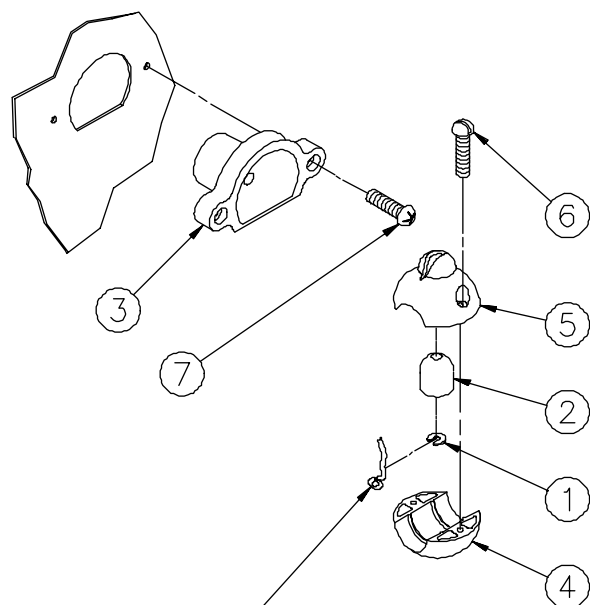


Item No.	Part No.	Name Of Part
1	1-131211	Retainer
2	1-131212	Swivel
3	1-223979	Eyelet
4	Bottom Clamp 1-226936 1-227343	5/8" Dia Hose 3/4" Dia Hose
5	1-226938	Top Clamp
6	Round Head Machine Screw #8-32 x 178-50001 182-50001	3/4" Long (5/8" Dia Hose) 1" Long (3/4" Dia Hose)
7	28-54570	#10-32 x 5/8" Phillips Round Head Self Tapping Screw

For complete Hose Clamp Assembly
(Less Cable & Eyelet) order:

226864-1	Vapor Recovery
226864-2	5/8" & 3/4" Dia Hose
4-228630	3/4" Dia Hose Clamp

2-73808

262A CABLE REEL ASSEMBLY

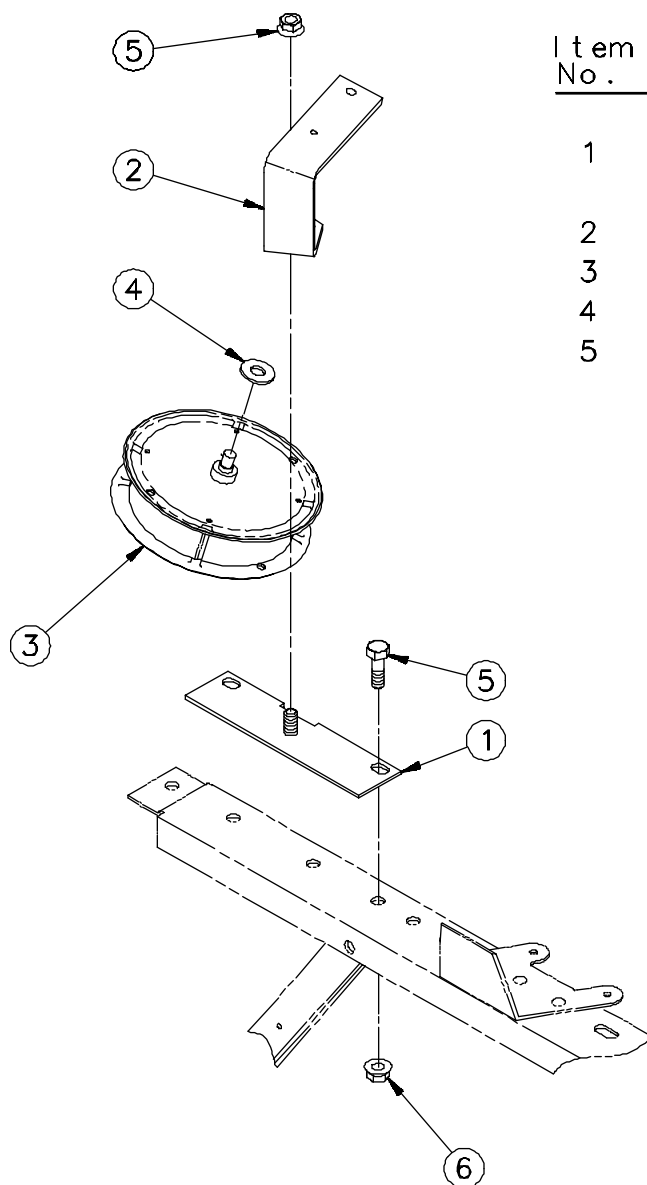

Item No.	Part No.	Name Of Part
1	230496-1	Adapter Weld Assembly (262A-2-TW only)
2	1-319488	Reel Bracket Weld Assembly
3	410796-2	Reel Assembly
4	08-50621	5/16" Plain Washer
5	35-54742	5/16-18 x 5/8" Long M-F Hex Head Whiz Lock Screw (All except 262A-2-TW)
	02-54752	5/16-18 M-F Flange Head Whiz Lock Nut (262A-2-TW)
For complete Cable Reel Assembly order:		
410796-16	262A/FL, 262A/FL-1-TW, 262A/ FL-RC, 262A/FL-1 & 2-RC-TW, 262A-HS	
410796-22	262AFL-M/MM/MS/SS/S-HV-LCS-RC & 262A-M-HV-LCS-RC	
410796-25	262A/FL-2-TW	

2-73807

DECALCOMANIA

<u>Item No.</u>	<u>Part No.</u>	<u>Description</u>
32	<u>Decalcomania</u>	
	1-420079	262AFL Preset, Cash/Credit
	2-420079	262A Cash/Credit
	3-420079	262A Preset, Cash/Credit
	4-420079	262AFL Cash/Credit
	5-420079	262A, 262A (Canada)
	6-420079	262A Preset
	7-420079	262AFL
	8-420079	262AFL Preset
	11-420079	262A Preset (Spanish - Mexico)
	12-420079	262A Preset (Yugoslavia)
	13-420079	262A Preset (Universal)
	18-420079	262AFL Preset (Spanish -Guatemala)
	20-420079	262A (Universal)
	21-420079	262AFL (Universal)
	22-420079	262AFL Preset (Universal)
	31-420079	262AFL Preset Cash/Credit (Universal)
	32-420079	262A Cash/Credit (Universal)
	33-420079	262A Preset, Cash/Credit (Universal)
	34-420079	262AFL Cash/Credit (Universal)
33	<u>Preset Amount</u>	
	9-420079	Dollar Amount
	10-420079	Spanish (Mexico)
	14-420079	Korea
	15-420079	Spanish (Ecuador)
	16-420079	Spanish (Colombia)
	17-420079	Spanish (Ecuador)
	19-420079	Spanish (Bolivia)
	23-420079	Spanish (Costa Rica)
	24-420079	Indonesia
	25-420079	Universal
	26-420079	Qatar
	27-420079	Taiwan
	28-420079	Bolivia
	29-420079	Saudi Arabia
	30-420079	Spanish (El Salvador)
	35-420079	Spanish (Peru)

1-71143