


Section Eight

Suction Systems

	Page Number	
		2
		6
<i>Suction System for 262A, 262A-HD & 262A-1-TW</i>	8-2, 8-3	2
Motor Assembly for 262A-HD	8-4, 8-5	A
Motor Assembly for 262A & 262A-1-TW	8-6, 8-7	
Rotary Pump Assembly	8-8, 8-9	
<i>Suction System for 262A-2-TW</i>	8-10, 8-11	D
Motor Assembly for 262A-HD-2-TW	8-12, 8-13	I
Motor Assembly for 262A-2-TW	8-14, 8-15	S
Rotary Pump Assembly	8-16, 8-17	P
<i>Suction System for 262A-HS</i>	8-18, 8-19	E
Motor Assembly for 262A-HS	8-20, 8-21	N
Rotary Pump Assembly	8-22, 8-23	S
<i>Rotary Pump & Air Separator</i>	8-24—8-27	E
		R

SUCTION SYSTEM FOR 262A, 262A-HD & 262A-1-TW

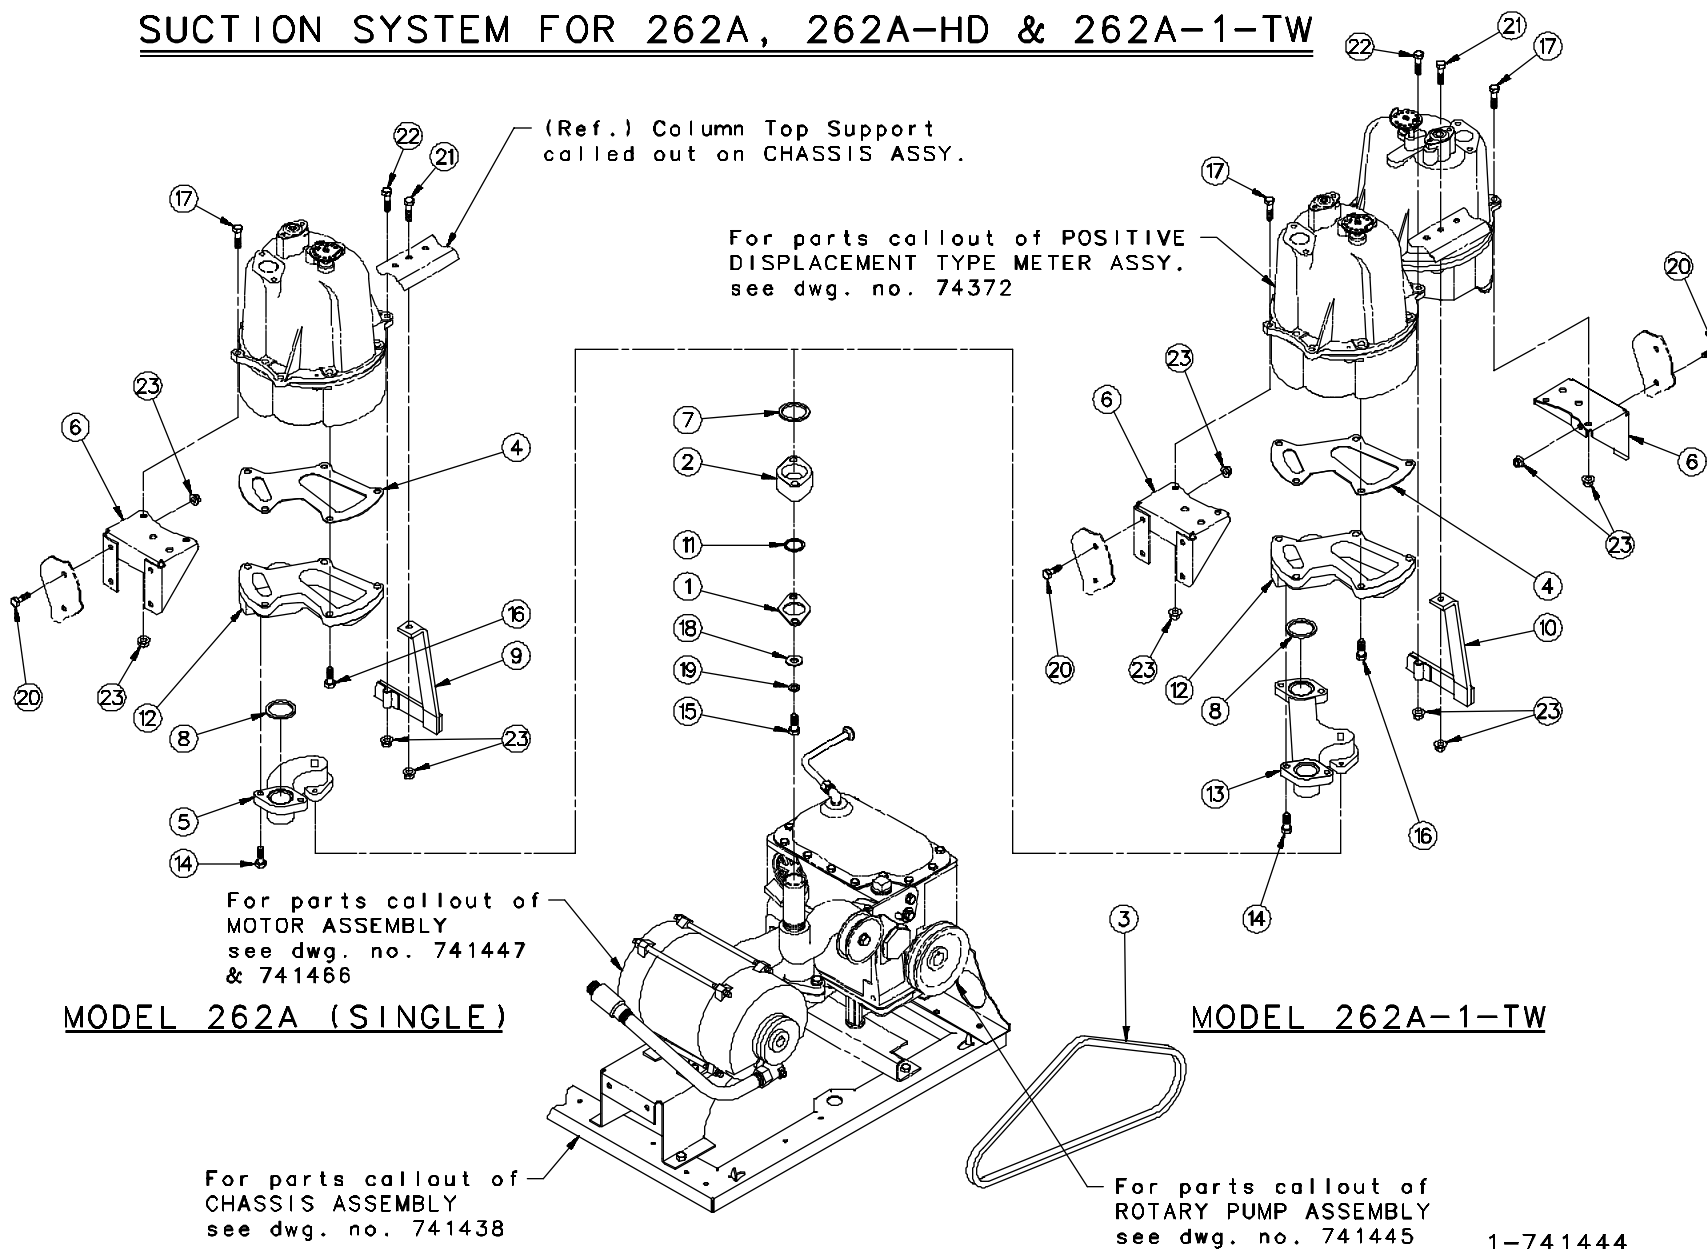

1-741444

1-741444

1 of 1


SUCTION SYSTEM

MODEL 262A-HD & 262A-1-TW

<u>Item</u>	<u>Part No.</u>	<u>Description</u>	<u>Item</u>	<u>Part No.</u>	<u>Description</u>
1	1-129618	Flange	17	296-50361	5/16-18 X 1-1/8 Large Hex. Head Cap Screw
2	1-224019	Coupling	18	03-50611	5/16 Plate Washer
3	<u>"V" Belt</u>		19	14-50641	5/16 Lockwasher
	9-37852	262A-HD 3/4 H.P. 60 Cycle Motor	20	35-54742	5/16-18 X 5/8 Large M-F Hex. Head Whiz-Lock Screw
	15-37852	All Except 262A-HD	21	38-54742	5/16-18 X 1" Large M-F Hex. Head Whiz-Lock Screw
	17-37852	262A-HD 3/4 H.P. 380 Volt	22	43-54742	5/16-18 X 2" Large M-F Hex. Head Whiz-Lock Screw
	28-37852	262A-HD 3/4 H.P. 50 Cycle Motor	23	02-54752	5/16-18 M-F Flange Whiz-Lock Nut
4	1-38082	Meter Transfer Body Gasket	For complete Meter & Strainer Assembly order: 316594-3 Gallons 316594-9 Litre		
5	1-310979	Meter Inlet Connector			
6	1-312008	Meter Support			
7	6-313235	Gasket			
8	13-313235	Gasket			
9	315582-1	Meter Mounting Bracket Weld Assembly			
10	315582-2	Meter Mounting Bracket Weld Assembly			
11	19-318940	"O" Ring			
12	2-406857	Meter Transfer Body			
13	1-407233	Transfer Body Manifold			
14	35-50361	5/16-18 X 1" Large Hex. Head Cap Screw			
15	38-50361	5/16-18 X 1-3/4 Large Hex. Head Cap Screw			
16	66-50361	5/16-18 X 1-1/4 Large Hex. Head Cap Screw			

1-741444

MOTOR ASSEMBLY FOR 262A-HD

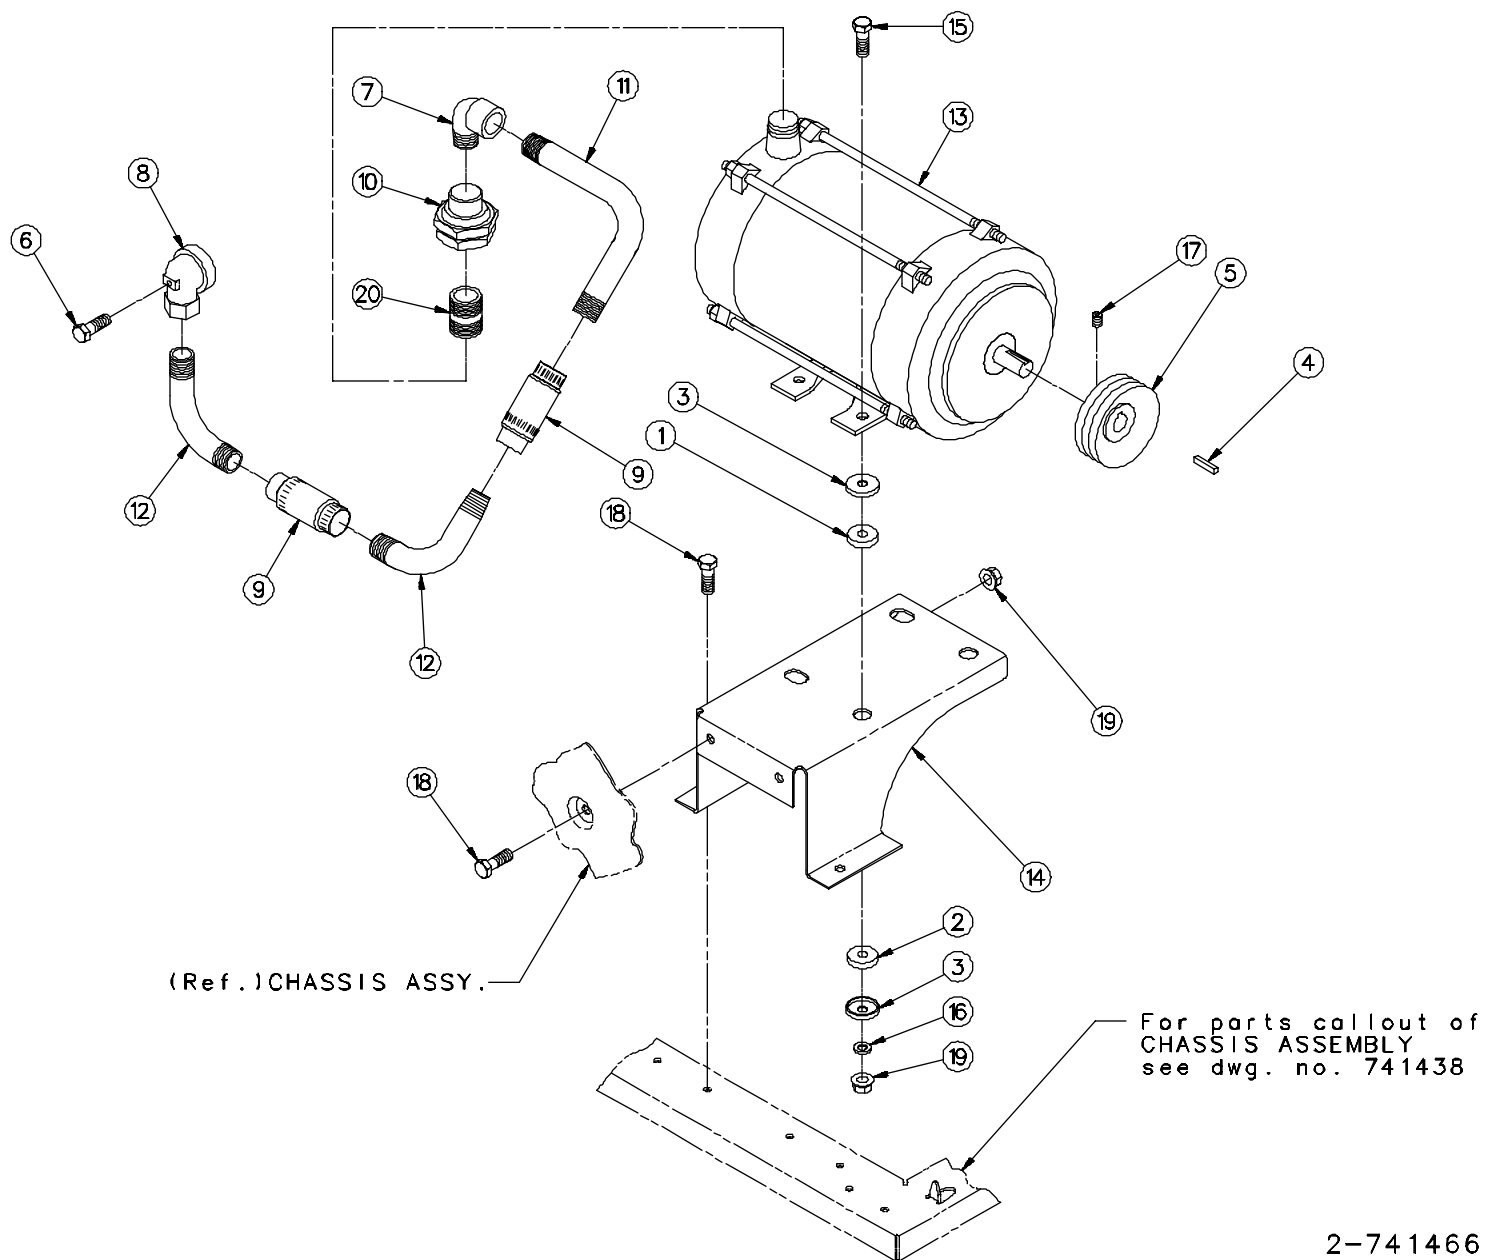


2-741466

MOTOR ASSEMBLY FOR 262A-HD


Item	Part No.	Description	Item	Part No.	Description
1	1-114468	Cushion Grommet			(Thermal Protection)
2	1-114469	Cushion Washer			
3	1-114470	Cushion Retainer			
4	1-119636	Key	14	1-411235	Motor Support
5	<u>Motor Pulley</u>		15	37-50361	5/16-18 x 1-1/2" Long Hex Head Cap Screw
	1-119529	262A-HD 3/4 H.P. 60 Cycle	16	03-50611	5/16" Plate Washer
	1-220878	262A-HD 3/4 H.P. 50 Cycle	17	65-50721	5/16-18 x 1/4" Long Hex Socket Head Cup Point Set Screw
6	1-121413	Special Screw	18	35-54742	5/16-18 x 5/8" Long M-F Hex Head Whiz-Lock Screw
7	1-128035	1/2 x 90° Conduit Street Elbow	19	02-54752	5/16-18 M-F Flange Whiz-Lock Nut
8	1-214107	Conduit Connector	20	02-50710	3/4" x 1-3/8" Close Conduit Nipple
9	1-219892	Expansion Union			For complete Motor Conduit Assembly order:
10	1-227391	3/4" x 1/2" Conduit Union (Female)	316481-2		262A-HD 115/230 Volt
11	1-227605	Conduit	316481-3		262A-HD 380 Volt
12	1-230742	Conduit			For complete 3/4 H.P. Motor Assembly order:
13	<u>Motor 3/4 H.P. (115/230 Volt) Volt 60/50 Cycle</u>		316479-3		262A-HD 115/230 Volt 50 Cycle
	2-417119	General Electric	316479-4		262A-HD 380 Volt 50 Cycle
	1-419108	Franklin Electric	316479-5		262A-HD 380 Volt 50 Cycle (Thermal Protected)
	1-421174	A.O. Smith			
	<u>Motor 3/4 H.P. 380 Volt 50 Cycle</u>				
	1-420499	Franklin Electric			
	2-420499	Franklin Electric			

MOTOR ASSEMBLY FOR 262A & 262A-1-TW

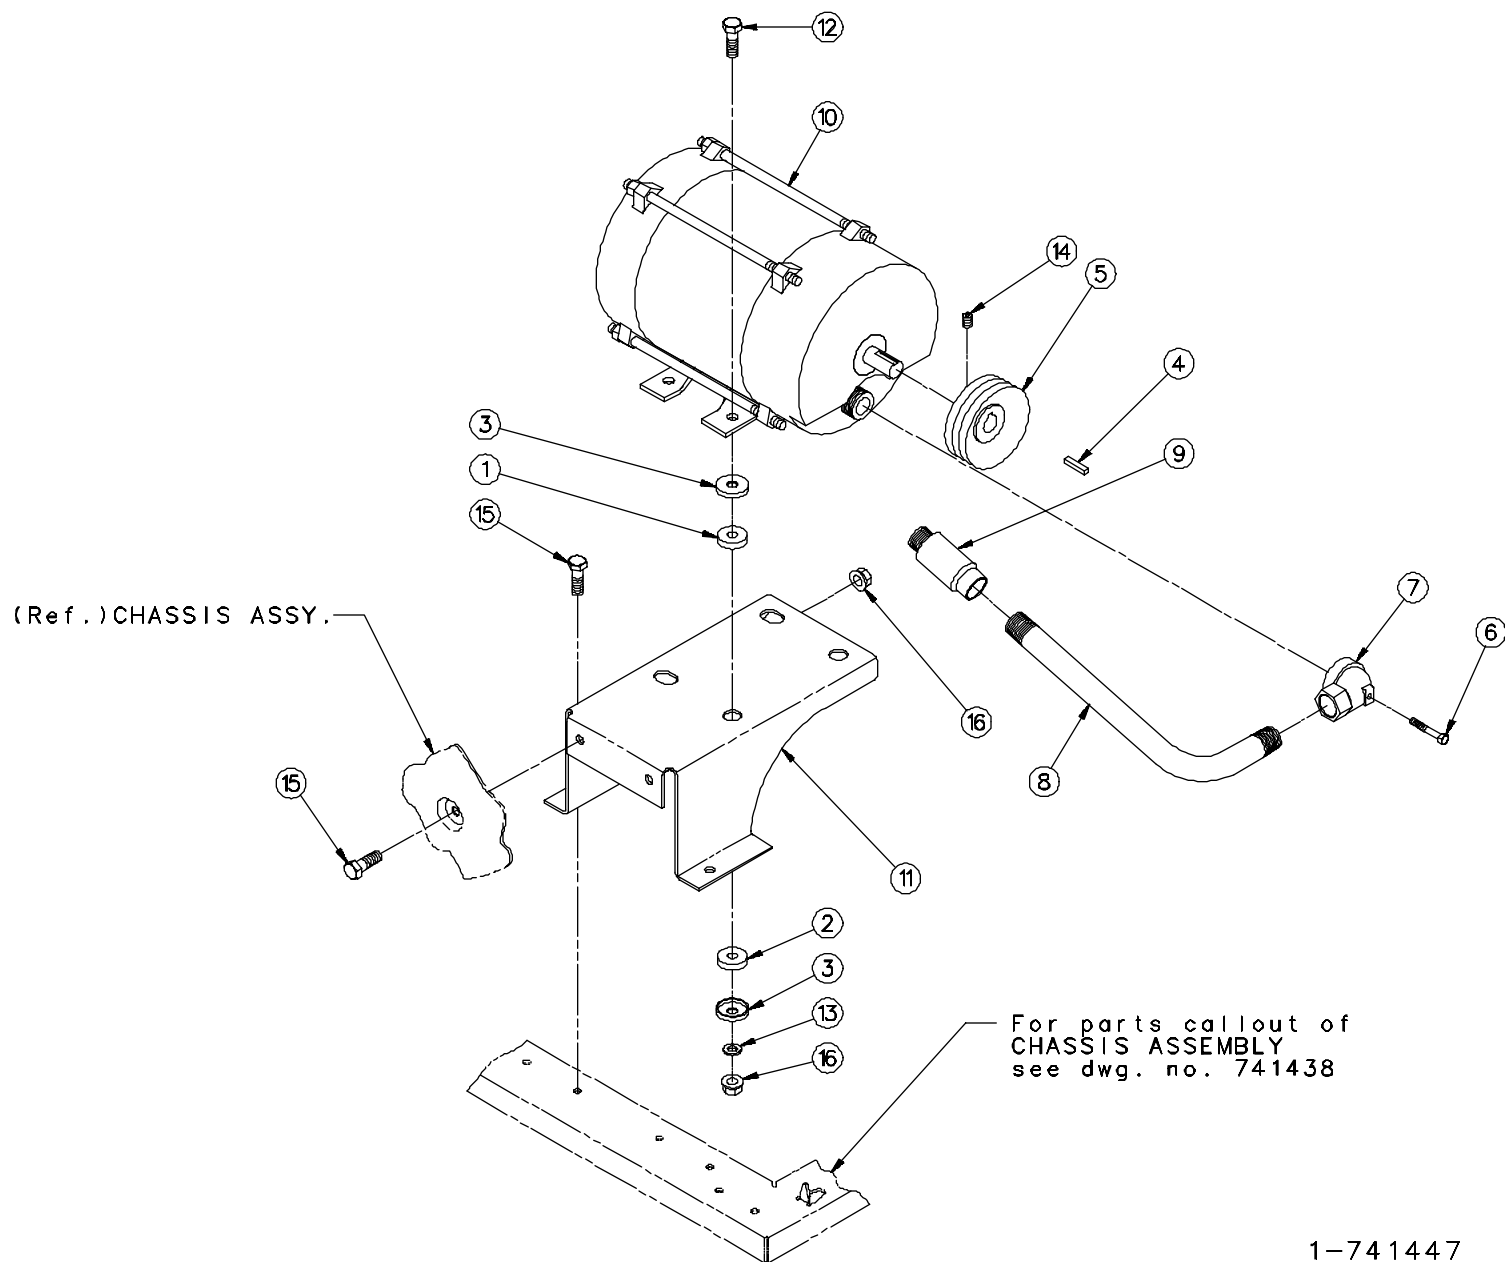

Item	Part No.	Description	Item	Part No.	Description
1	1-114468	Cushion Grommet			Head Cap Screw
2	1-114469	Cushion Washer	13	03-50611	5/16" Plate Washer
3	1-114470	Cushion Retainer	14	65-50721	5/16-18 x 1/4" Long Hex Socket Head Cup Point Set Screw
4	1-119636	Key			
5	<u>Motor Pulley</u>		15	35-54742	5/16-18 x 5/8" Long M-F Hex Head Whiz-Lock Screw
	1-119529	262A-1-TW	16	02-54752	5/16-18 M-F Flange Whiz- Lock Nut
	2-221339	262A			
6	1-121413	Special Screw			
7	1-214107	Conduit Connector			
8	1-218860	Motor Conduit			
9	1-218941	Expansion Union			
10	<u>Motor 1/3 H.P. (115/230 Volt) (262A)</u>				
	1-405586	A. O. Smith			
	4-408411	General Electric			
	1-412766	Franklin Electric			
	<u>Motor 1/2 H.P. (115/230 Volt) (262A-1-</u>				
		TW)			
	1-406206	Leland			
	2-408389	A. O. Smith			
	2-415138	General Electric			
	2-416908	Franklin Electric			
11	1-411235	Motor Support			
12	37-50361	5/16-18 x 1-1/2" Long Hex			

ROTARY PUMP ASSEMBLY FOR 262A, 262A-HD & 262A-1-TWIN

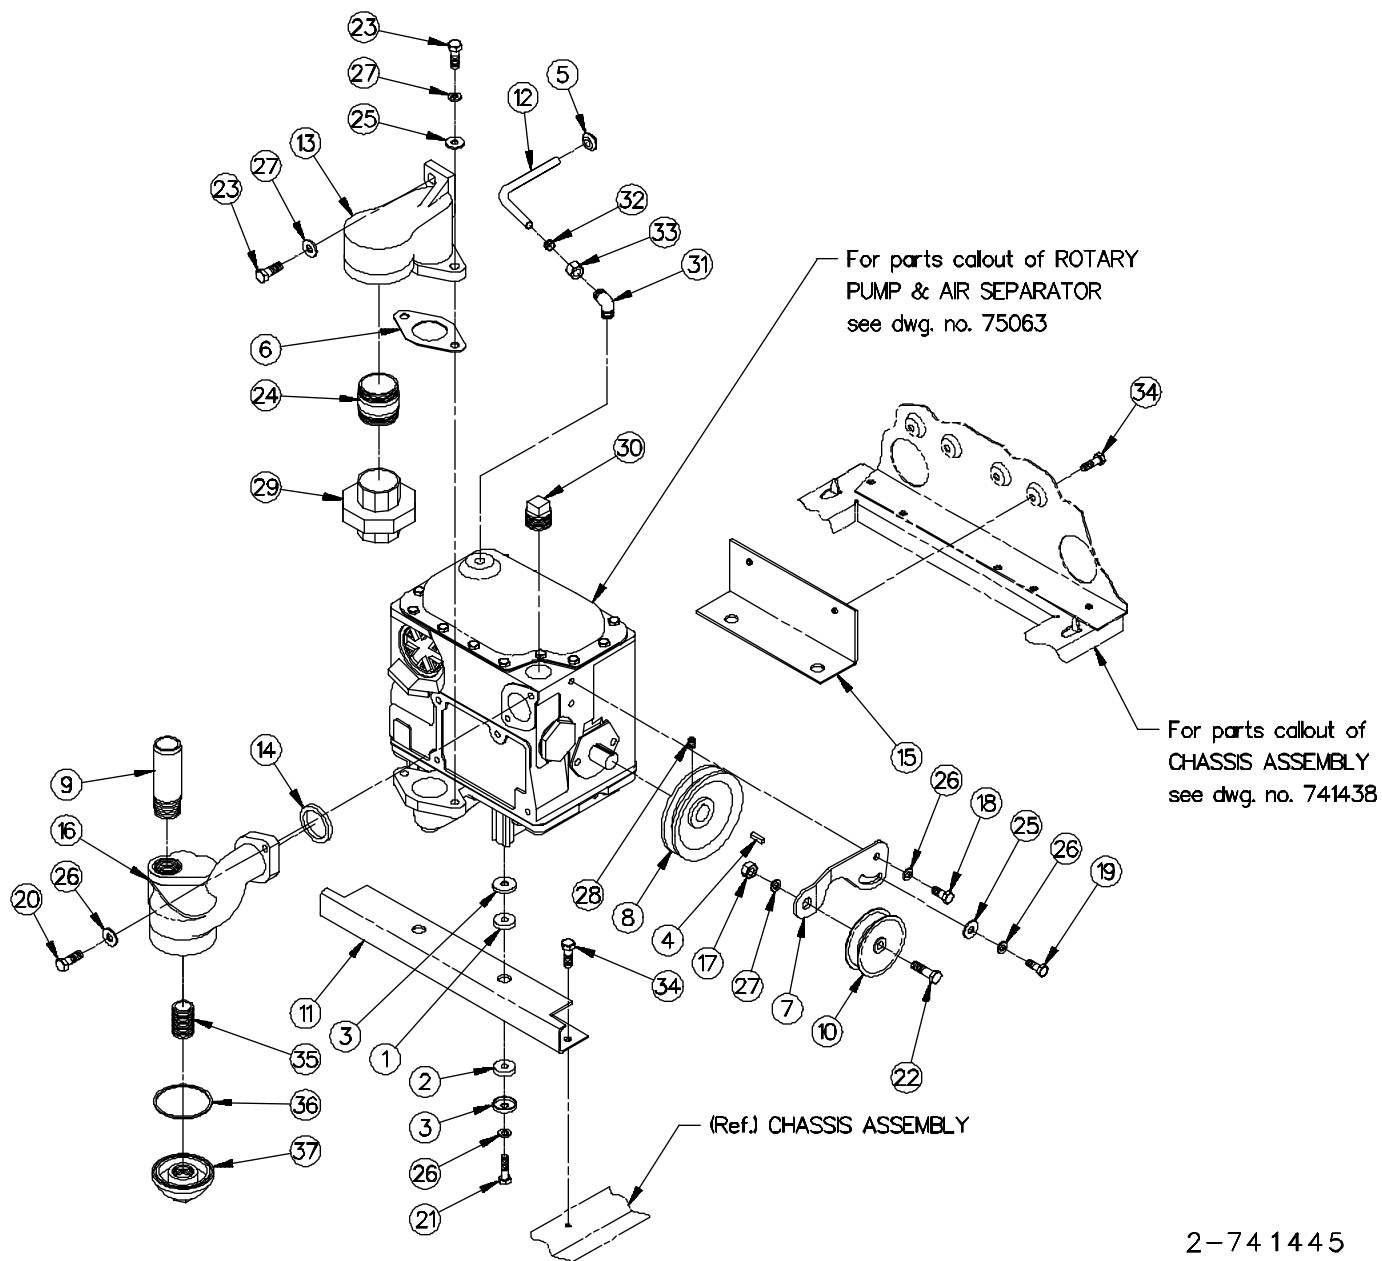

2-741445

2-741445

1 of 1

ROTARY PUMP ASSEMBLY FOR 262A, 262A-HD & 262A-1-TWIN


Item	Part No.	Description	Item	Part No.	Description
1	1-114468	Cushion Grommet	25	03-50611	5/16" Plate Washer
2	1-114469	Cushion Washer	26	14-50641	5/16" Lockwasher
3	1-114470	Cushion Retainer	27	15-50641	3/8" Lockwasher
4	1-119636	Key	28	65-50721	5/16-18 x 1/4" Long Hex Socket Head Cup Point Set Screw
5	1-127786	Grommet			
6	1-217902	Pump Inlet Connection Gasket	29	1-1/2" Female Union (262A & 262A-1-TW)	
7	1-217903	Idle Arm		07-51780	150#
8	Pump Pulley			27-51780	250#
	1-216295	262A-HD & 262A-1-TW		2" Female Union (262A-HD)	
	2-221338	262A		08-51780	150#
9	2-220383	Coupling Nipple		28-51780	250#
10	1-221668	Idle Pulley	30	06-51901	1" Pipe Plug
11	1-221821	Pump Support	31	05-52020	Compression Elbow
12	2-224150	Vent Tube	32	05-52040	Compression Sleeve
13	1-38403	Pump Inlet Connection	33	14-52040	Compression Nut
14	137-311105	Gasket	34	35-54742	5/16-18 x 5/8" Long M-F Hex Head Whiz-Lock Screw
15	1-312034	Pump Support Bracket	35	1-125865	Nipple
16	Rotary Pump Discharge Connection		36	16-313235	Gasket
	1-407225	Without Wix Filter	37	Filter	
	3-411304	With Wix Filter		1-218950	Standard Duty Wix Filter
17	03-50301	3/8-16 Hex Nut		1-226999	Water Alert Filter
18	32-50361	5/16-18 x 5/8" Long Hex Head Cap Screw		1-318183	Cap (Wix GFB Filter)
19	33-50361	5/16-18 x 3/4" Long Hex Head Cap Screw		1-311509	Heavy Duty Wix Filter
20	35-50361	5/16-18 x 1" Long Hex Head Cap Screw	For complete Rotary Pump Assembly order:		
21	36-50361	5/16-18 x 1-1/4" Long Hex Head Cap Screw	405952-37	262A-HD (Gallon)	
22	67-50361	3/8-16 x 1-1/2" Long Hex Head Cap Screw	411284-2	262A-1-TW (Gallon)	
23	297-50361	3/8-16 x 1-1/8" Long Hex Head Cap Screw	411284-5	262A (Gallon)	
24	Pipe 1-1/2" x (262A & 262A-1-TW)		411284-10	262A (Litre)	
	269-50510	2-1/4" Long (Used with 27-51780)	411284-11	262A-1-TW (Litre)	
	119-50560	2-1/2" Long (Used with 07-51780)	411284-14	262A-HD (Litre)	
	Pipe 2" x (262A-HD)		For complete Idler Arm & Pulley Assembly order:		
	316-50510	2-1/4" Long (Used with 28-51780)	37277-5	262A & 262A-1-TW & Canada	
	138-50560	2-1/2" Long (Used with 08-5178)	37277-24	262A-HD	

2-741445

SUCTION SYSTEM FOR 262A-2-TW

For parts callout of POSITIVE
DISPLACEMENT TYPE METER ASSY.
see dwg. no. 74372


For parts callout of
MOTOR ASSEMBLY
see dwg. no. 741451

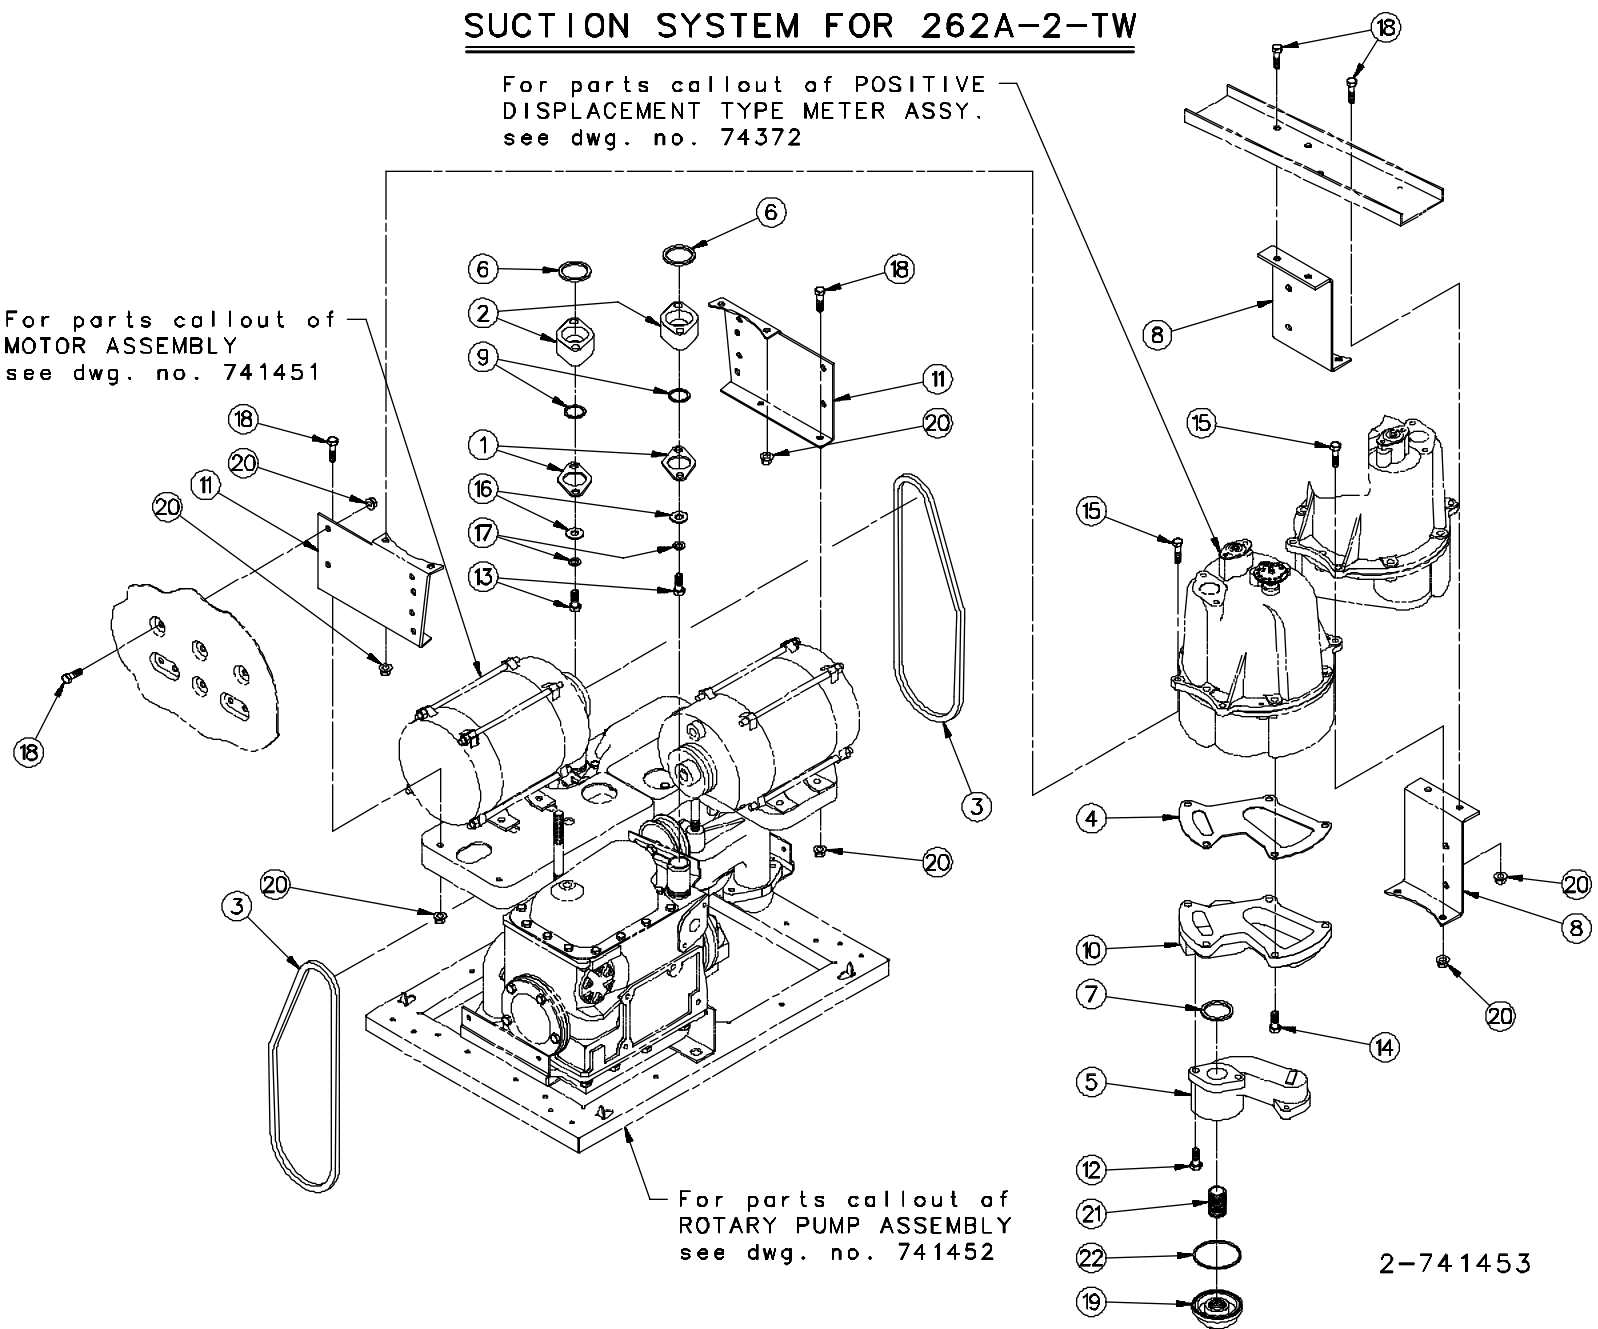

Item	Part No.	Description	Item	Part No.	Description
1	1-129618	Flange	15	296-50361	5/16-18 x 1-1/8" Long Hex Head Cap Screw
2	1-224019	Coupling	16	03-50611	5/16" Plate Washer
3	<u>"V" Belt</u>		17	14-50641	5/16" Lockwasher
	10-37852	262A-2-TW	18	35-54742	5/16-18 x 5/8" Long M-F Hex Head Whiz-Lock Screw
	25-37852	262A-HD-2-TW			
4	1-38082	Meter Transfer Body Gasket	19	<u>Filter</u>	
5	<u>Manifold</u>			1-218950	Standard Duty Wix Filter
	1-312061	Without Wix Filter		1-226999	Water Alert Filter
	1-312062	With Wix Filter		1-318183	Cap (Wix GFB Filter)
				1-311509	Heavy Duty Wix Filter
6	6-313235	Gasket	20	02-54752	5/16-18 M-F Flange Whiz-Lock Nut
7	13-313235	Gasket	21	1-125865	Nipple
8	1-314602	Meter Mounting Bracket	22	16-313235	Gasket
9	19-318940	"O" Ring			
10	2-406857	Meter Transfer Body		For complete Meter & Strainer Assembly order:	
11	1-411187	Meter & Motor Mounting Bracket		316594-3	262A-2-TW
12	35-50361	5/16-18 x 1" Long Hex Head Cap Screw		316594-9	262A-2-TW Canada
13	38-50361	5/16-18 x 1-3/4" Long Hex Head Cap Screw			
14	66-50361	5/16-18 x 1-1/4" Long Hex Head Cap Screw			

2-741453

MOTOR ASSEMBLY FOR 262A-HD-2-TW

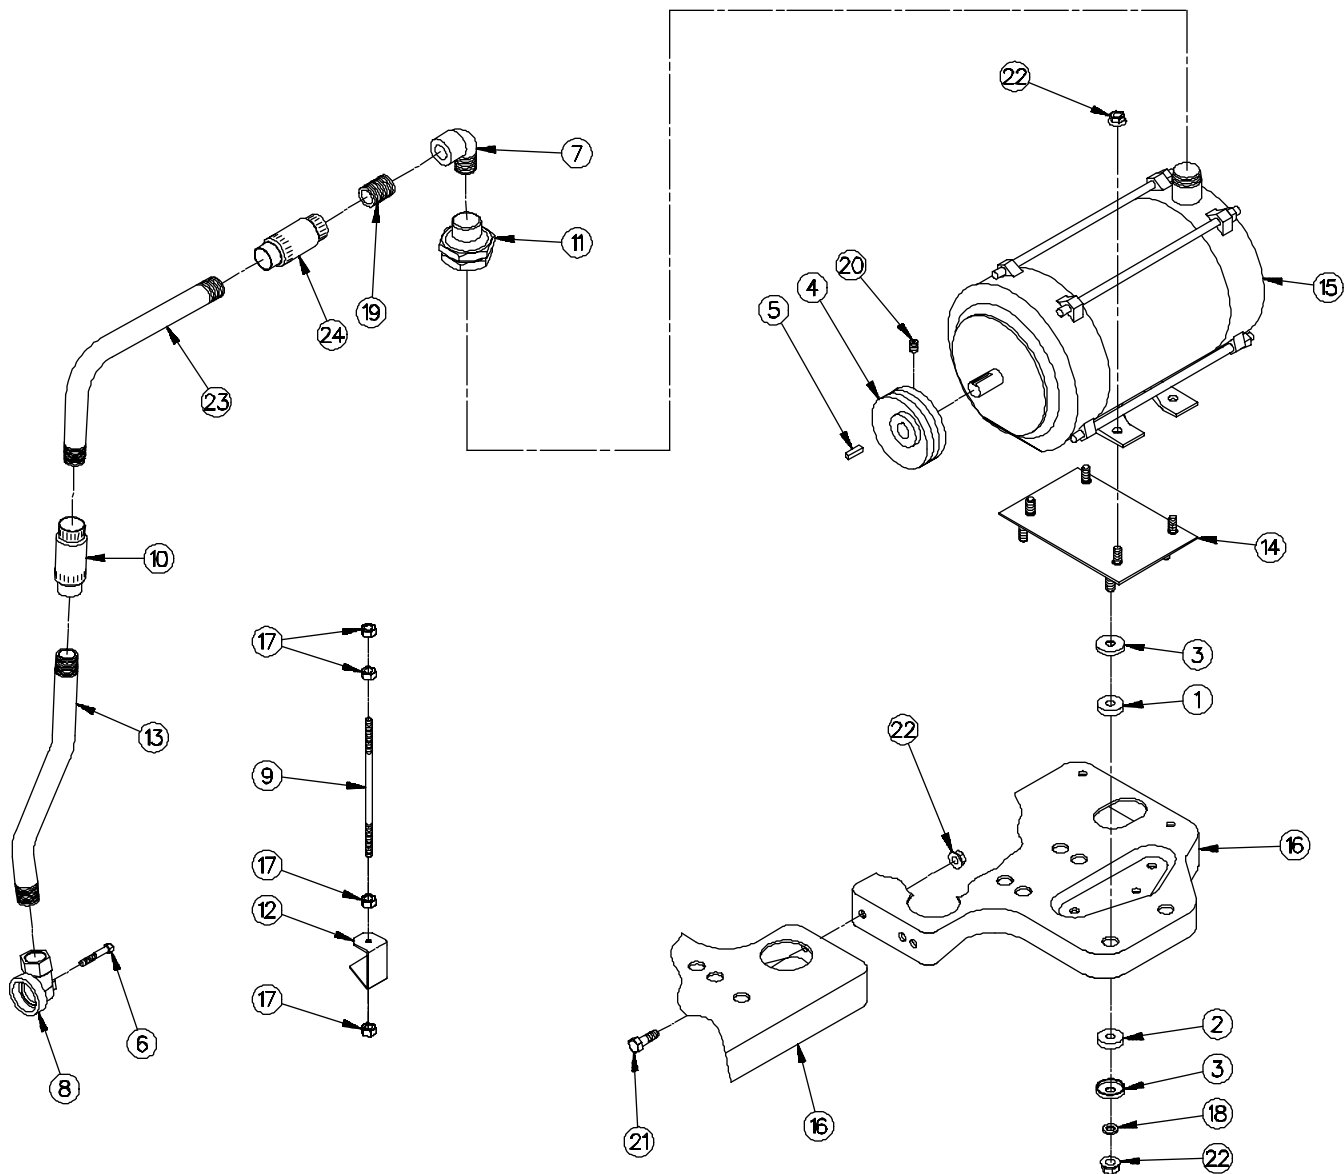

2-741467

2-741467


1 of 1

MOTOR ASSEMBLY FOR 262A-HD-2-TW

Item	Part No.	Description	Item	Part No.	Description
1	1-114468	Cushion Grommet	18	03-50611	5/16" Plate Washer
2	1-114469	Cushion Washer	19	<u>Conduit Nipple 1/2" x</u>	
3	1-114470	Cushion Retainer		14-50710	1-1/2" Long (262A-HD-2-TW 380 Volt)
4	<u>Motor Pulley 3/4 H.P.</u>			26-50710	3" Long (262A-2-TW 115/230 Volt)
	2-119529	60 Cycle	20	65-50721	5/16-18 x 1/4" Long Hex Socket Head Cup Point Set Screw
	2-220878	50 Cycle	21	35-54742	5/16-18 x 5/8" Long M-F Hex Head Whiz-Lock Screw
5	1-119636	Key	22	02-54752	5/16-18 M-F Flange Whiz-Lock Nut
6	1-121413	Special Screw	23	1-319363	Conduit
7	1-128035	1/2" x 90° Conduit Street Elbow	24	<u>Expansion Union</u>	
8	1-214107	Conduit Connector		1-218941	Male/Female (115/230 Volt)
9	2-218591	Motor Support Rod		1-219892	Female (380 Volt)
10	1-219892	Expansion Union	For complete Motor Conduit Assembly order:		
11	1-227391	Conduit Union		319315-1	115/230 Volt
	07-51841	Face Bushing		319315-2	380 Volt
12	1-230752	Motor Support Bracket	For complete Motor Assembly order:		
13	1-319408	Motor Conduit		316479-3	3/4 H.P. 50/60 Cycle
14	319110-1	Adapter Plate Weld Assembly		319067-1	3/4 H.P. (380 Volt)
15	<u>3/4 H.P. Motor (115/230 Volt)</u>			319067-2	3/4 H.P. (115/230 Volt)
	2-417119	Franklin Electric			
	1-419108	General Electric			
	1-421174	A.O. Smith			
	<u>3/4 H.P. Motor (380 Volt)</u>				
	319067-1	Franklin Electric			
16	3-407915	Motor & Connection Box Support			
17	01-50301	1/4-20 Hex Nut			

2-741467

MOTOR ASSEMBLY FOR 262A-2-TW

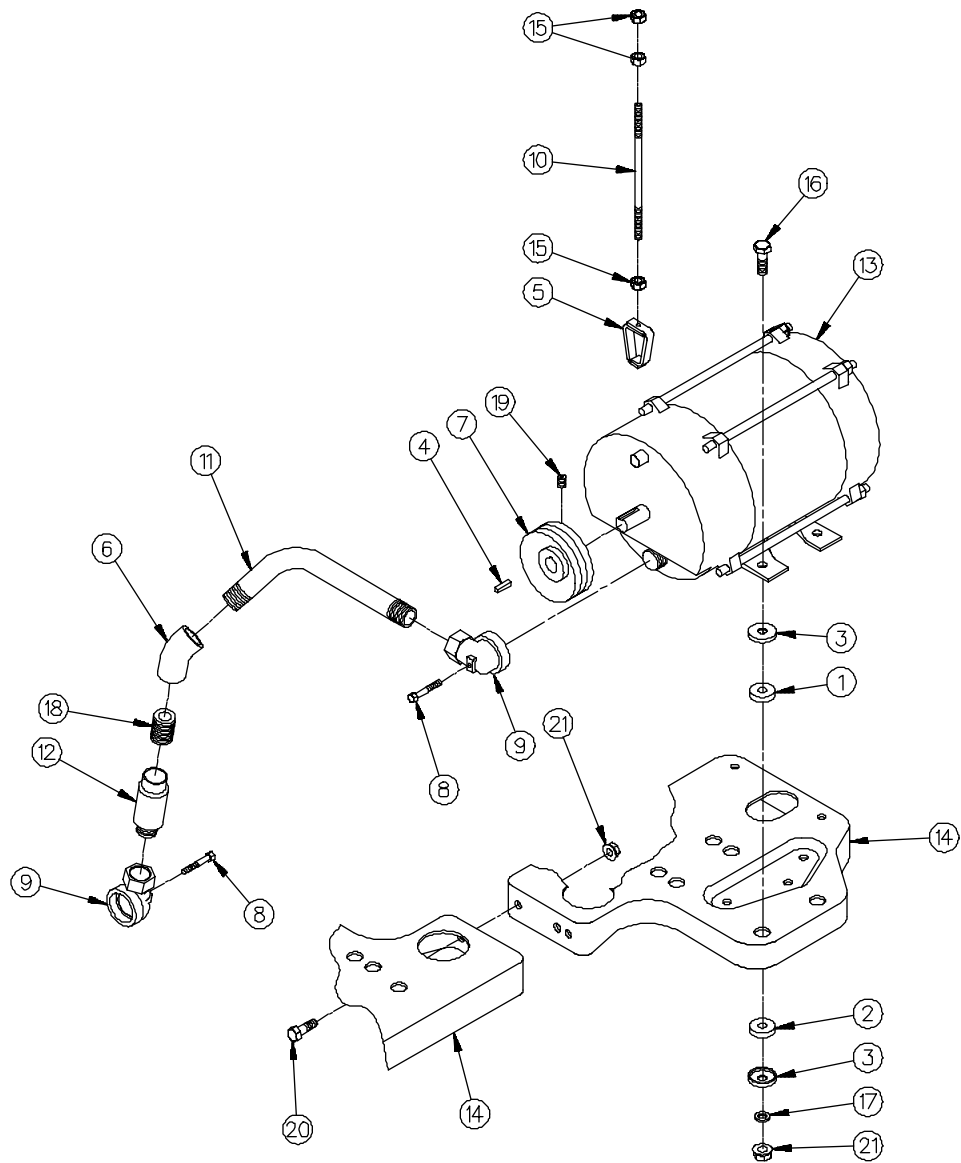

1-74 145 1

1-741451

1 of 1

MOTOR ASSEMBLY FOR 262A-2-TW


Item	Part No.	Description	Item	Part No.	Description
1	1-114468	Cushion Grommet	16	36-50361	5/16-18 x 1-1/4" Long Hex Head Cap Screw
2	1-114469	Cushion Washer	17	03-50611	5/16" Plate Washer
3	1-114470	Cushion Retainer	18	01-50710	1/2" x 1-1/8" Long Conduit Nipple
4	1-119636	Key	19	65-50721	5/16-18 x 1/4" Long Hex Socket Head Cup Point Set Screw
5	125369-1	Clamp Weld Assembly	20	35-54742	5/16-18 x 5/8" Long M-F Hex Head Whiz-Lock Screw
6	1-128034	1/2" x 45° Conduit Elbow	21	02-54752	5/16-18 M-F Flange Whiz-Lock Nut
7	2-221339	Motor Pulley			
8	1-121413	Special Screw			
9	1-214107	Conduit Connector			
10	2-218591	Motor Support Rod			
11	<u>Motor Conduit</u>				
	1-218871	All Models Except Listed Below			
	1-231821	262A-VC/IVC-2-TW			
12	1-218941	Expansion Union			
13	<u>Motor 1/3 H.P. (115/230 Volt)</u>				
	1-38983	General Electric			
	2-38983	A. O. Smith			
	7-38983	Franklin Electric			
14	2-407915	Motor & Connection Box Support			
15	01-50301	1/4-20 Hex. Nut			

For complete Motor Conduit Assembly order:

316408-1	262A-2-TW
319402-1	262A-VC/IVC-2-TW

1-741451

ROTARY PUMP ASSEMBLY FOR 262A-2-TW

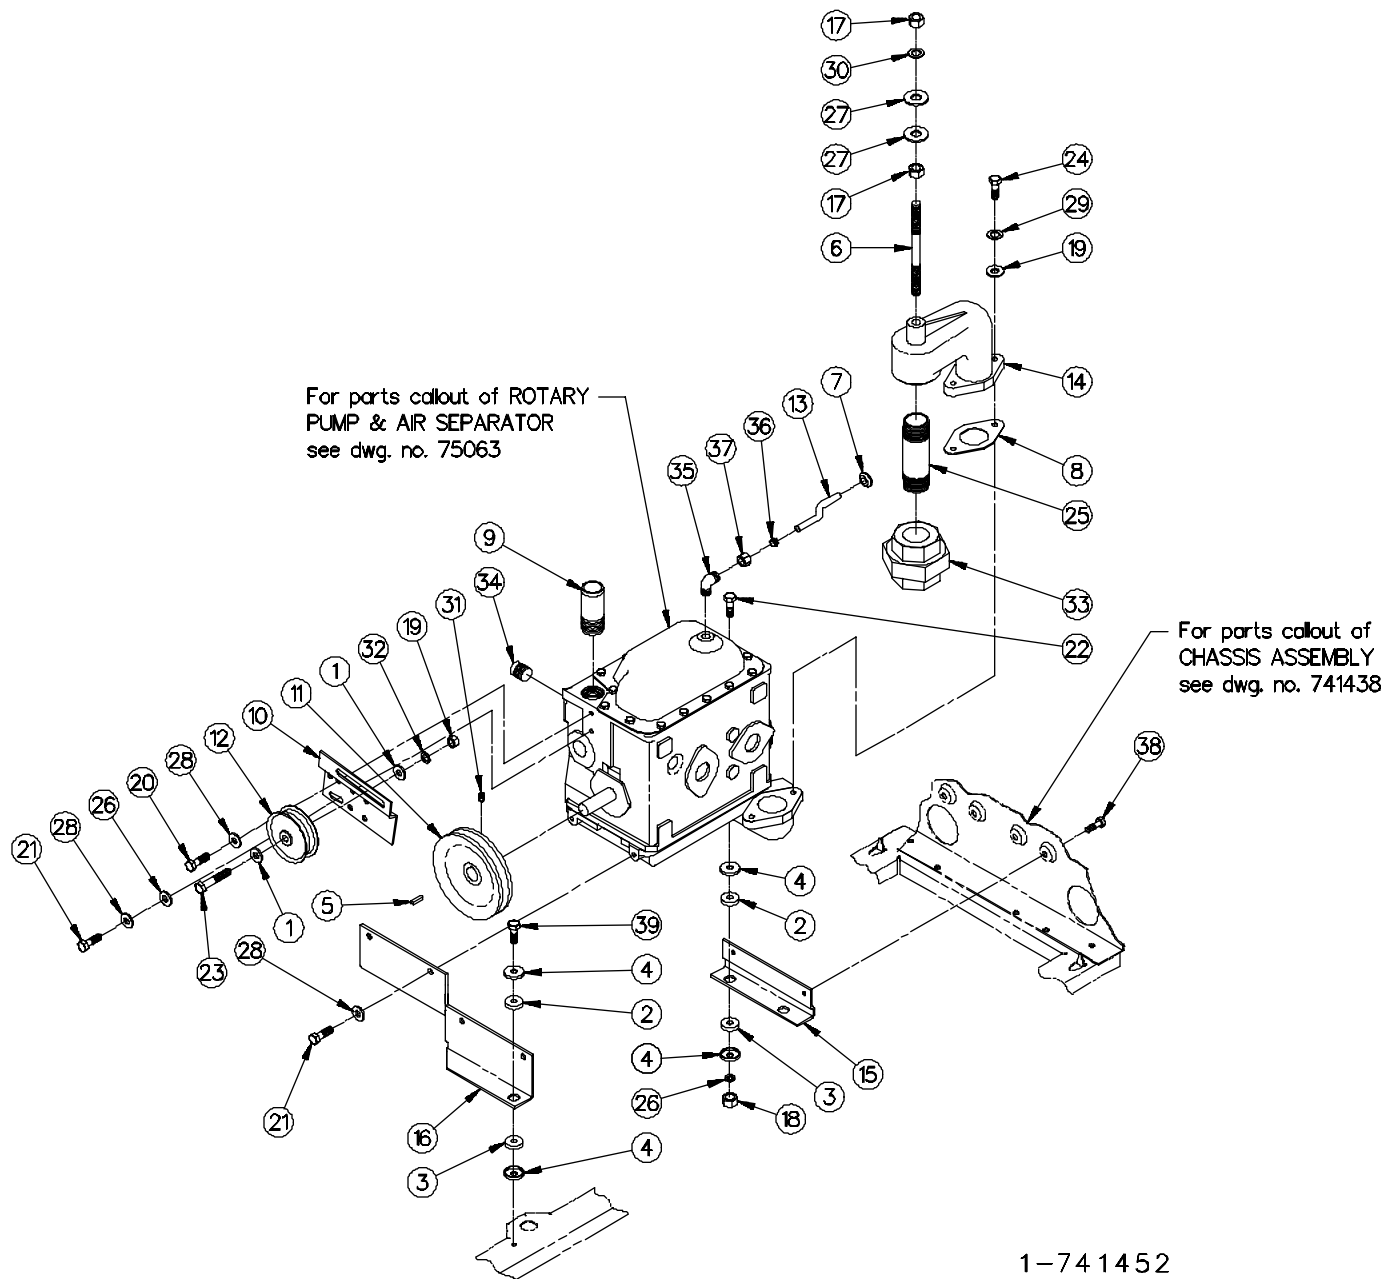

1-741452

1-741452

1 of 1


ROTARY PUMP ASSEMBLY FOR 262A-2-TW

Item	Part No.	Description	Item	Part No.	Description
1	2-13867	Washer	28	14-50641	5/16" Lockwasher
2	1-114468	Cushion Grommet	29	15-50641	3/8" Lockwasher
3	1-114469	Cushion Washer	30	17-50641	1/2" Lockwasher
4	1-114470	Cushion Retainer	31	65-50721	5/16-18 x 1/4" Long Hex Socket Head Cup Point Set Screw
5	1-119636	Key	32	27-50761	3/8" Lockwasher
6	1-124981	Suction Support Stud	33	1-1/2" Female Union	
7	1-127786	Grommet		07-51780	150#
8	1-217902	Pump Inlet Connection Gasket		27-51780	250#
9	2-220383	Coupling Nipple	34	06-51901	1" Pipe Plug
10	1-220849	Idler Arm	35	05-52020	Compression Elbow
11	1-216295	Pump Pulley	36	05-52040	Compression Sleeve
12	1-221668	Idler Pulley	37	14-52040	Compression Nut
13	2-224156	Vent Tube	38	35-54742	5/16-18 x 5/8" Long M-F Hex Head Whiz-Lock Screw
14	1-38510	Pump Inlet Connection	39	38-54742	5/16-18 x 1" Long M-F Hex Head Whiz-Lock Screw
15	1-312036	Pump Support Bracket	For complete Rotary Pump Assembly order:		
16	1-413442	Pump Support	407241-5	Gallon	
17	05-50271	1/2-13 Hex Jam Nut	407241-25	Litre	
18	02-54752	5/16-18 M-F Flange Whiz-Lock Nut	For complete Idler Arm & Pulley Assembly order:		
19	03-50301	3/8-16 Hex Nut	37277-16	262A-2-TW	
20	32-50361	5/16-18 x 5/8" Long Hex Head Cap Screw			
21	33-50361	5/16-18 x 3/4" Long Hex Head Cap Screw			
22	38-50361	5/16-18 x 1-3/4" Long Hex Head Cap Screw			
23	67-50361	3/8-16 x 1-1/2" Long Hex Head Cap Screw			
24	297-50361	3/8-16 x 1-1/8" Long Hex Head Cap Screw			
25	Pipe 1-1/2" x 320-50510	4-3/4" Long (Used with 150# Female Union)			
	123-50560	4-1/2" Long (Used with 250# Female Union)			
26	03-50611	5/16" Plate Washer			
27	06-50611	1/2" Plate Washer			

1-741452

SUCTION SYSTEM (262A-HS)

For parts callout of POSITIVE
DISPLACEMENT TYPE METER ASSY.
see dwg. no. 74372

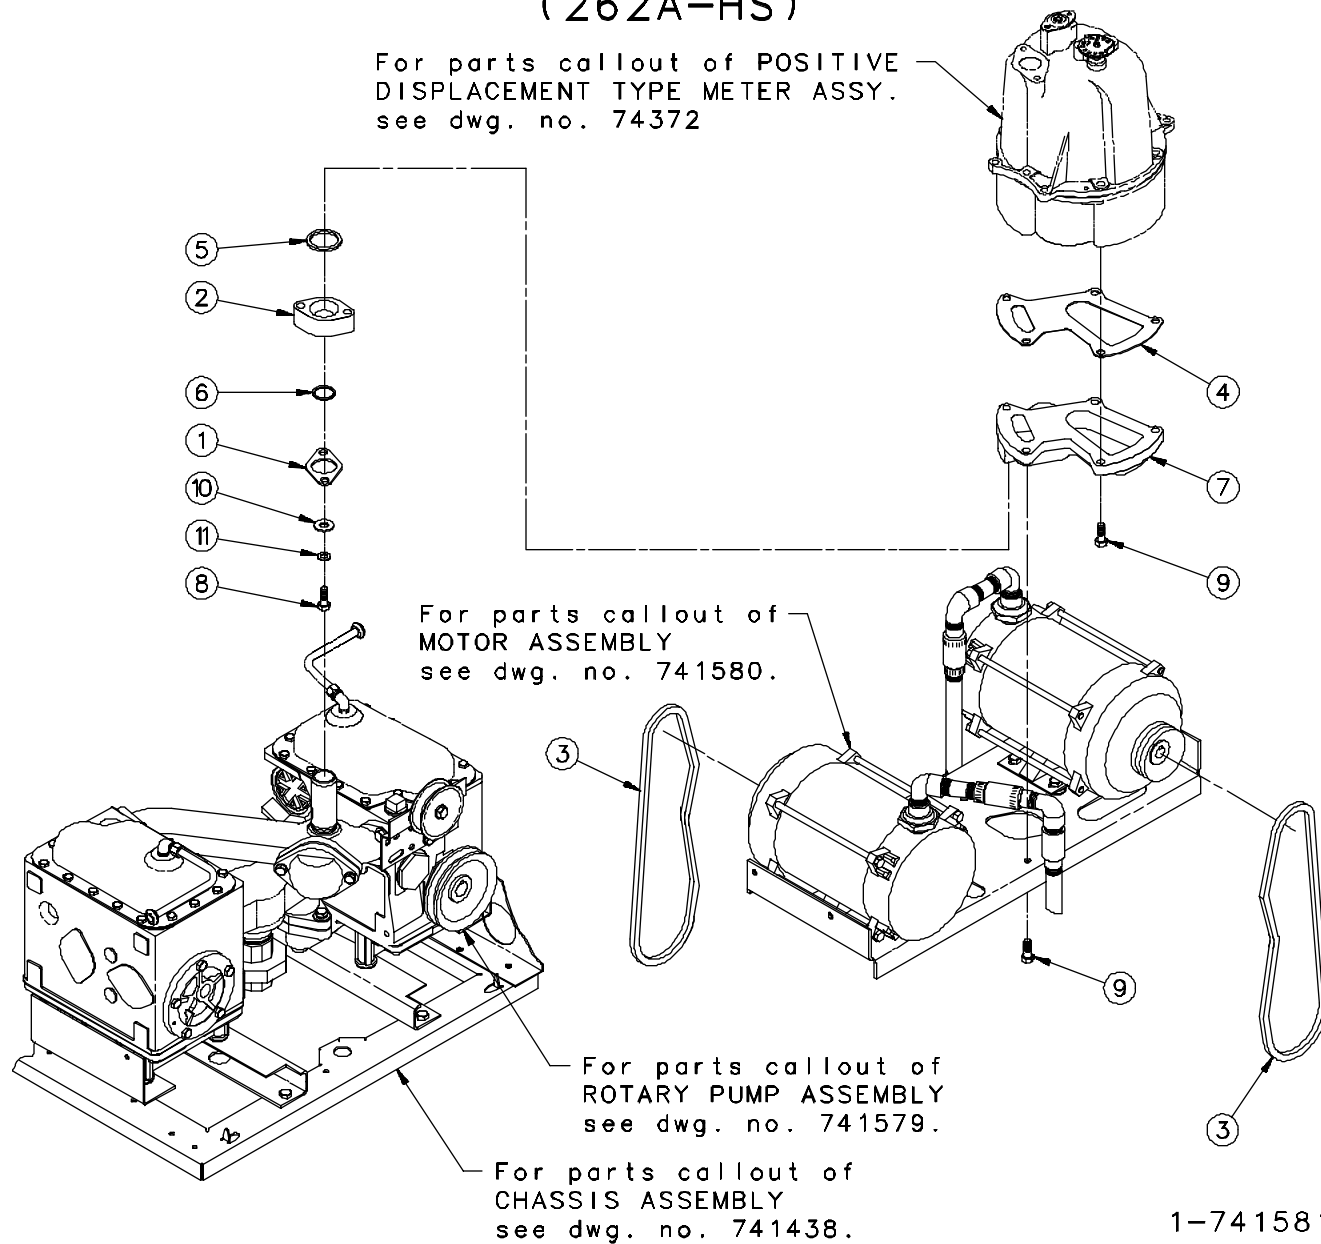

1-741581*1 of 1*

SUCTION SYSTEM (262A-HS)


<u>Item</u>	<u>Part No.</u>	<u>Description</u>
1	1-129618	Flange
2	1-224019	Coupling
3	10-37852	"V" Belt
4	1-38082	Meter Transfer Body Gasket
5	6-313235	Gasket
6	19-318940	"O" Ring
7	2-406857	Meter Transfer Body
8	38-50361	5/16-18 x 1-3/4" Long Hex Head Cap Screw
9	66-50361	5/16-18 x 1-1/4" Long Hex Head Cap Screw
10	03-50611	5/16" Plate Washer
11	14-50641	5/16" Lockwasher

For complete Meter & Strainer Assembly order:

316594-3 262A-HS

1-741581

MOTOR ASSEMBLY (262A-HS)

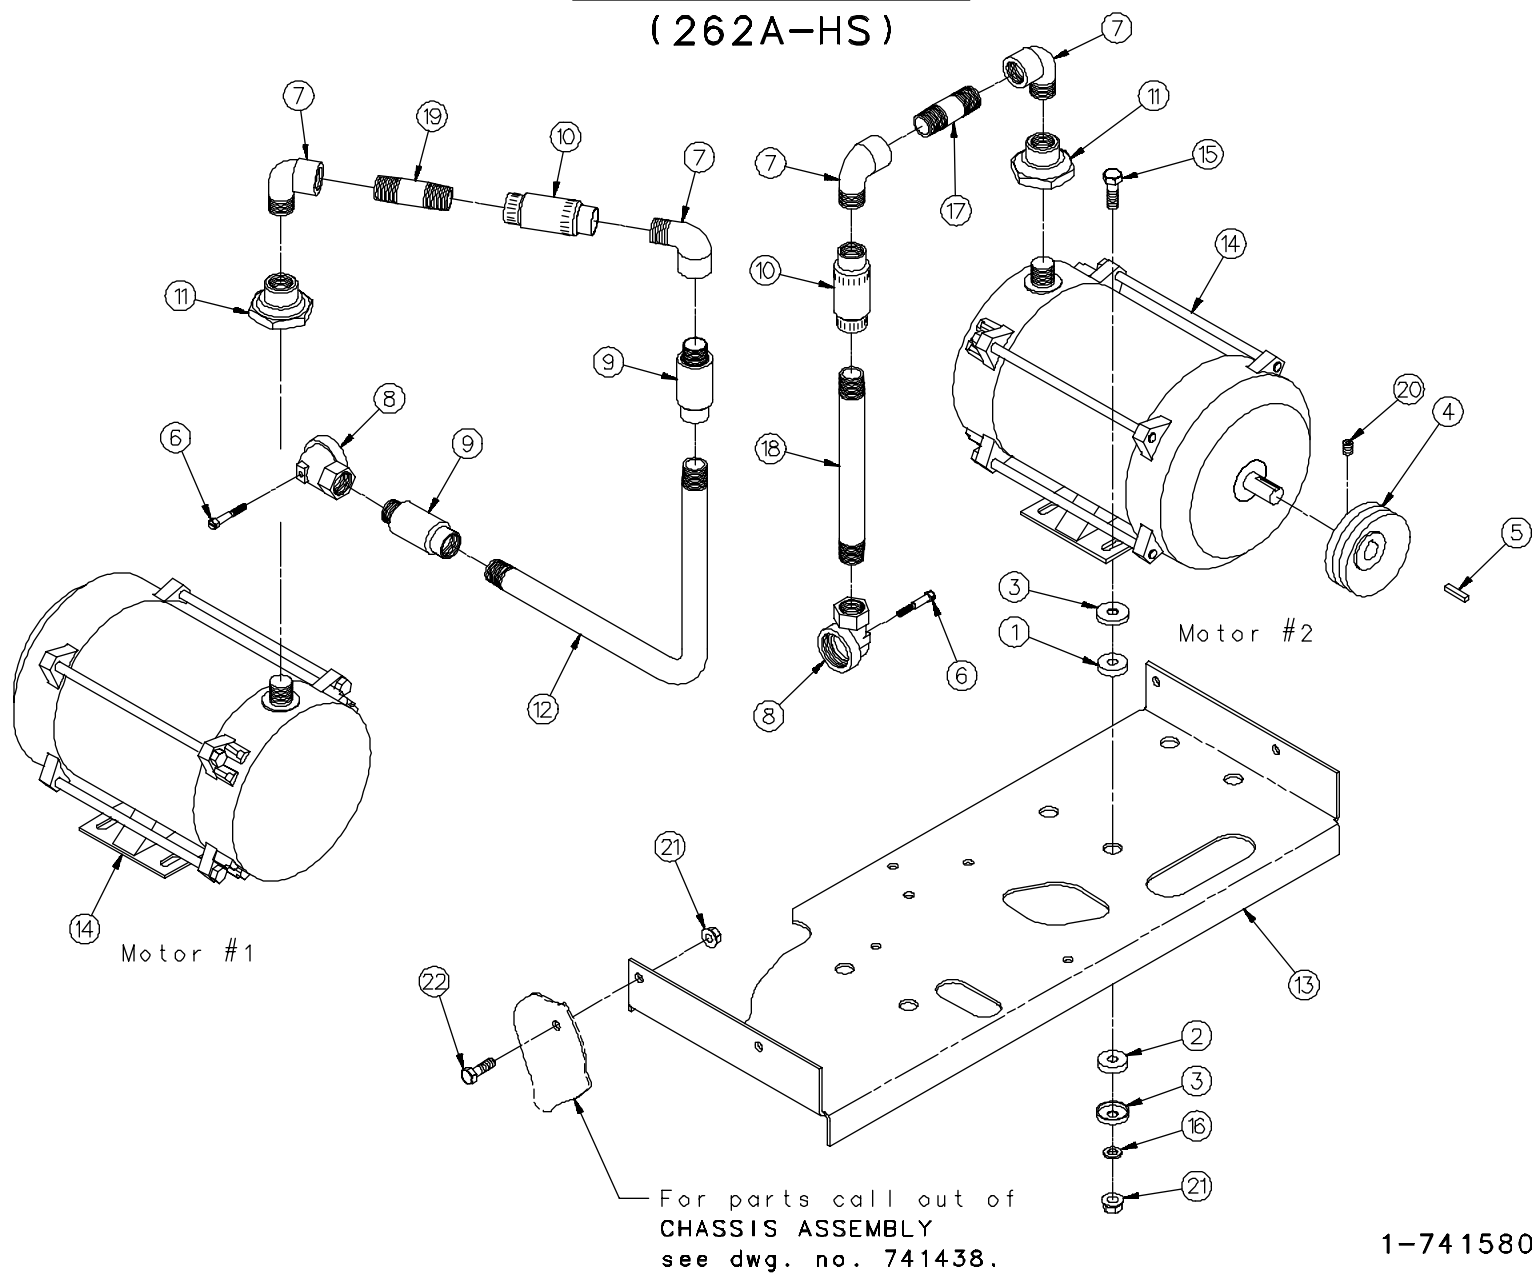

1-741580

1-741580


1 of 1

MOTOR ASSEMBLY (262A-HS)

Item	Part No.	Description	Item	Part No.	Description
1	1-114468	Cushion Grommet	17	13-50700	Conduit
2	1-114469	Cushion Washer	18	47-50700	Conduit
3	1-114470	Cushion Retainer	19	20-50710	Conduit
4	1-119529	Motor Pulley	20	65-50721	5/16-18 x 1/4" Long Hex Socket Head Cup Point Set Screw
5	1-119636	Key	21	02-54752	5/16-18 M-F Flange Whiz-Lock Nut
6	1-121413	Special Screw	22	35-54742	5/16-18 x 5/8" Long M-F Hex Head Whiz-Lock Screw
7	1-128035	1/2" x 90° Street Elbow	For complete Motor Conduit Assembly order: 420650-1 262A-HS Motor #2 420651-1 262A-HS Motor #1		
8	1-214107	Conduit Connector			
9	1-218941	Expansion Union (Male Female)			
10	1-219892	Expansion Union (Female)	For complete Motor Assembly order: 316479-3 262A-HS		
11	1-227391	3/4" x 1/2" Conduit Union (Female)			
12	2-319063	Conduit			
13	1-411188	Meter & Motor Mounting Plate			
14	<u>Motor 3/4 H.P. (115/230 Volt)</u>				
	2-417119	General Electric			
	1-419108	Franklin Electric			
	1-421174	A. O. Smith			
15	37-50361	5/16-18 x 1-1/2" Long Hex Head Cap Screw			
16	03-50611	5/16" Plate Washer			

1-741580

ROTARY PUMP ASSEMBLY FOR 262A-HS

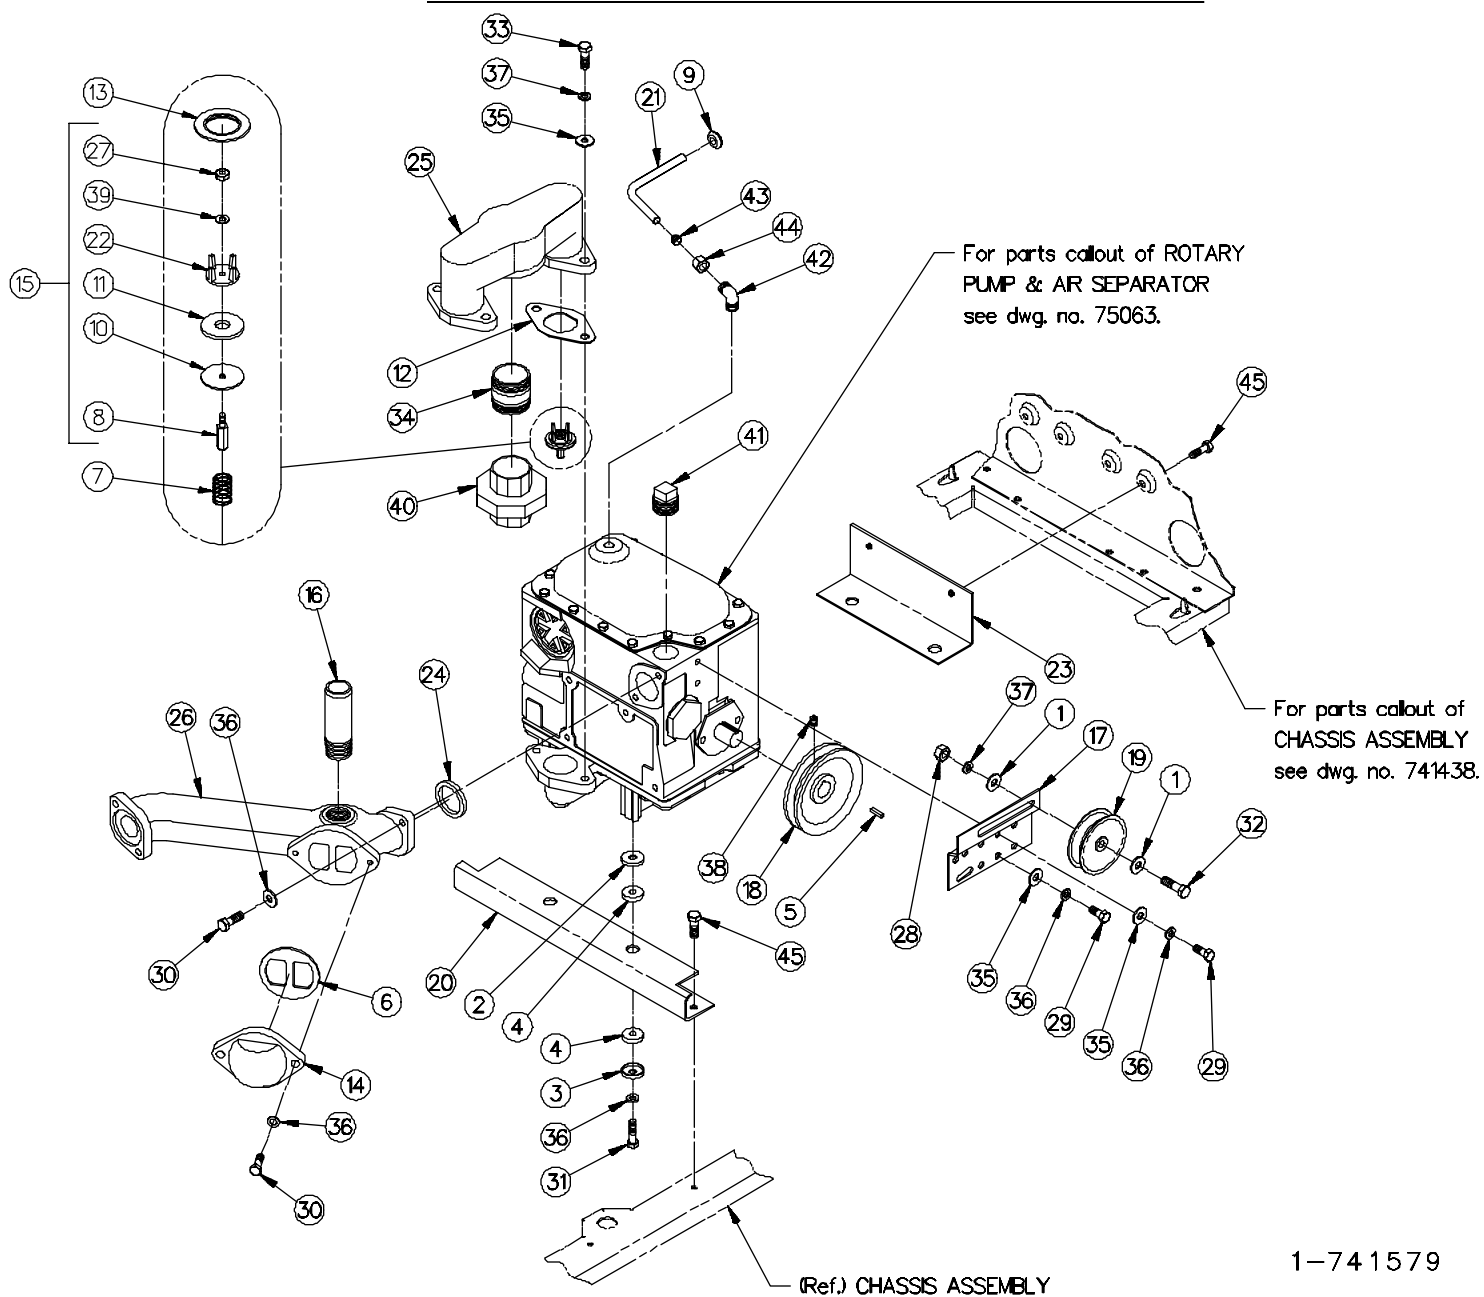

1-741579

1-741579


1 of 1

ROTARY PUMP ASSEMBLY FOR 262A-HS

Item	Part No.	Description	Item	Part No.	Description
1	2-13867	Washer	36	14-50641	5/16" Lockwasher
2	1-114468	Cushion Grommet	37	15-50641	3/8" Lockwasher
3	1-114469	Cushion Washer	38	65-50721	5/16-18 x 1/4" Long Hex Socket Head Cup Point Set Screw
4	1-114470	Cushion Retainer	39	06-50761	#12 Lockwasher Shakeproof
5	1-119636	Key	40	<u>1-1/2" Female Union</u>	
6	1-125619	Gasket		07-51780	150#
7	1-125630	Compression Spring		27-51780	250#
8	1-125632	Check Valve Stem	41	06-51901	1" Pipe Plug
9	1-127786	Grommet	42	05-52020	Compression Elbow
10	1-130561	Poppet Retainer	43	05-52040	Compression Sleeve
11	1-130562	Poppet Seal	44	14-52040	Compression Nut
12	1-217902	Pump Inlet Connection Gasket	45	35-55132	5/16-18 x 5/8" Long M-F Flange Whiz-Lock Screw
13	1-218897	Valve Seat	For complete Rotary Pump Assembly order: 411284-4 262A-HS		
14	1-218914	Cover			
15	220300-1	Poppet Disc Assembly	For complete Idler Arm & Pulley Assembly order: 37277-16 262A-HS		
16	2-220383	Coupling Nipple			
17	1-220849	Idler Arm			
18	1-216295	Pump Pulley			
19	1-221668	Idler Pulley			
20	1-221821	Pump Support			
21	2-224150	Vent Tube			
22	1-225595	Poppet Guide			
23	1-312034	Pump Support Bracket			
24	14-313235	Gasket			
25	2-407747	Pump Inlet Connection			
26	1-407757	Pump Discharge Connection			
27	06-50211	#12-24 Hex Machine Nut			
28	03-50301	3/8-16 Hex Nut			
29	33-50361	5/16-18 x 3/4" Long Hex Head Cap Screw			
30	35-50361	5/16-18 x 1" Long Hex Head Cap Screw			
31	36-50361	5/16-18 x 1-1/4" Long Hex Head Cap Screw			
32	67-50361	3/8-16 x 1-1/2" Long Hex Head Cap Screw			
33	297-50361	3/8-16 x 1-1/8" Long Hex Head Cap Screw			
34	<u>Pipe 1-1/2" x</u> 119-50560 269-50510	2-1/2" Long (Used with 07-51780) 2-1/4" Long (Used with 27-51780)			
35	03-50611	5/16" Plate Washer			

1-741579

ROTARY PUMP & AIR SEPARATOR

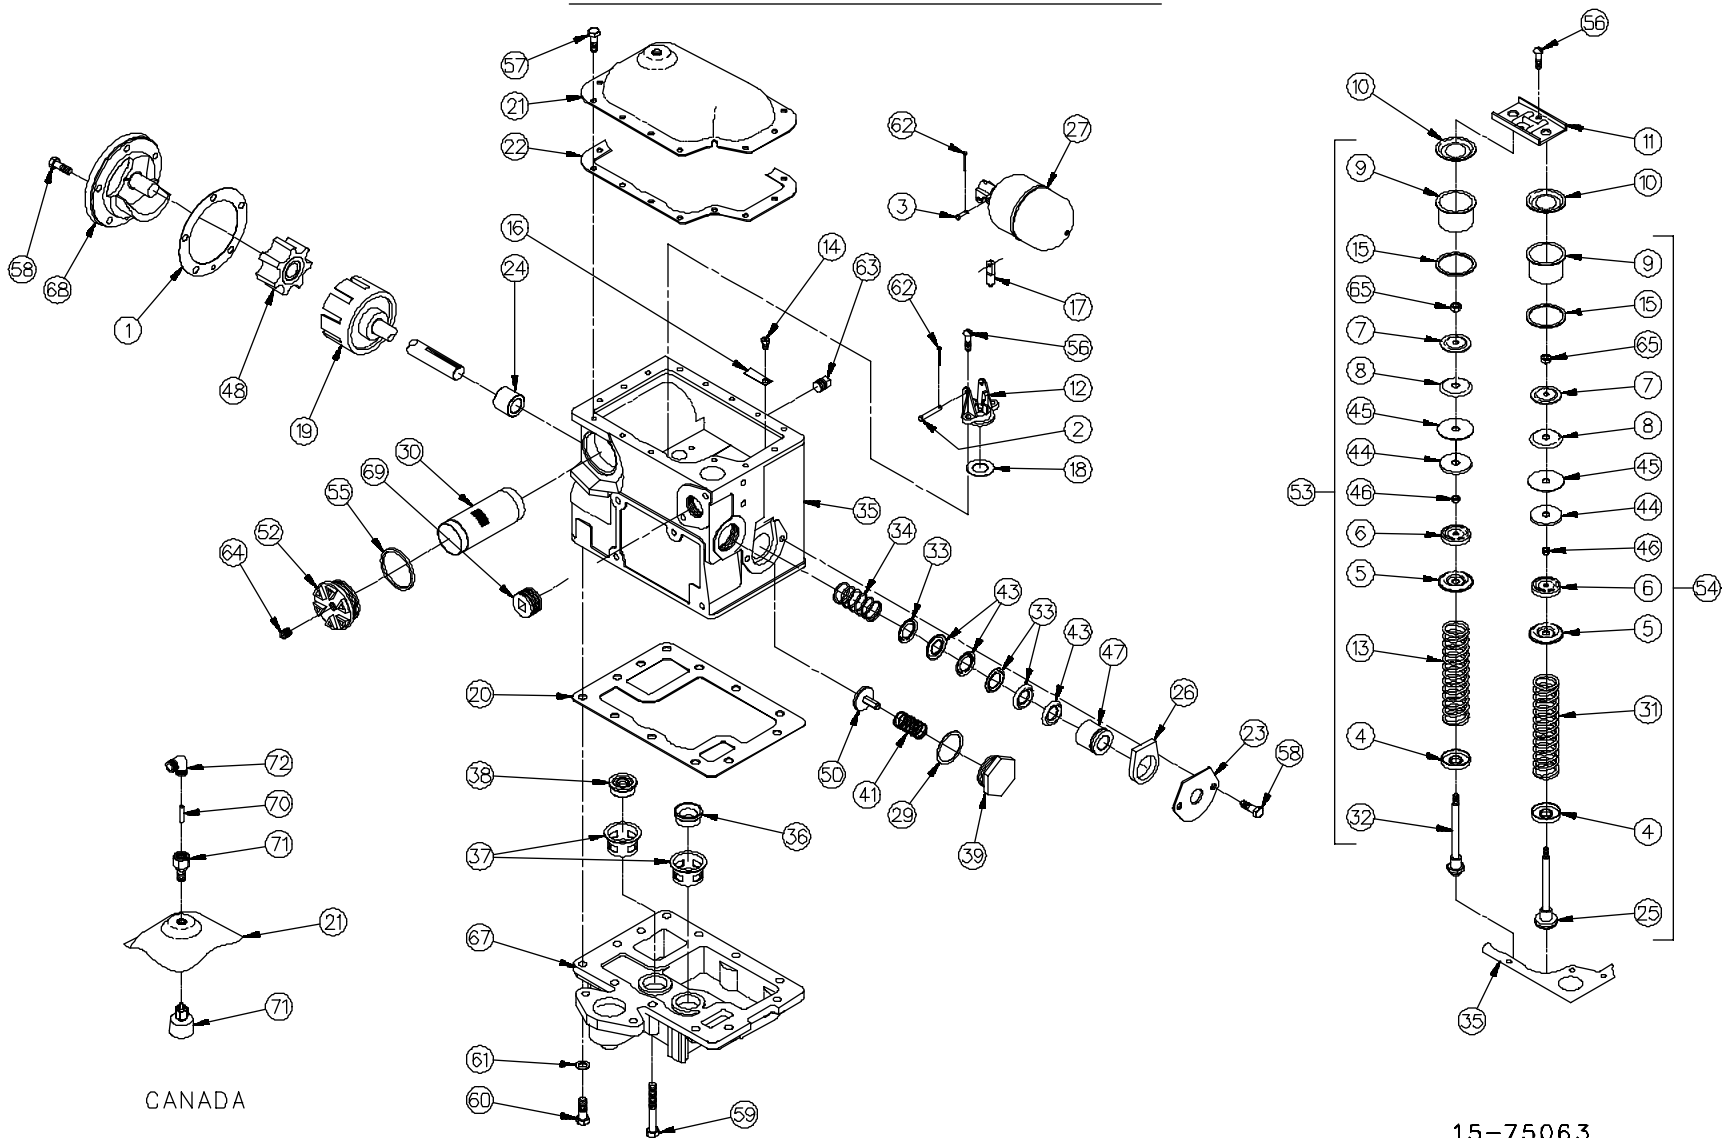

CANADA

15-75063

ROTARY PUMP & AIR SEPARATOR

Item	Part No.	Description	Item	Part No.	Description
1	1-17526	Gasket	21	1-32089	Separator Cover
2	1-18654	Float Lever Pin	22	2-113691	Cover Gasket
3	1-18655	Valve Pin	23	1-113698	Retainer
4	1-18716	Guide Plate	24	1-113703	Bearing
5	1-18717	Spring Plate	25	113776-1	Regulating Poppet Assembly
6	1-18718	Plunger Head	26	1-113819	Oil Well Felt
7	1-18719	Plunger Plate	27	114064-1	Float Assembly
8	1-18720	Plunger Follower	29	21-313235	Gasket
9	1-18721	Valve Cylinder	30	<u>Suction Screen</u>	
10	1-18722	Cylinder Head		1-115075	Gasoline
11	1-18731	Clamp Plate		2-115075	Diesel
12	1-18734	Float Valve Body			
13	<u>By-Pass Valve Spring</u>		31	1-115642	Regulating Valve Spring
	1-18735	(34# To 35-1/2# Spring) (855-BB & 855-CC)	32	1-116628	By-Pass Valve Poppet
	1-131178	(44-1/2# Spring) (855-DD & 855-BB)	33	1-117475	Packing Gland
			34	1-117660	Packing Spring
			35	118335-1	Rotary Pump & Separator Body With Gasket, Bearing, Screws & Spring
14	1-18750	Vent Screw	36	1-118590	Regulating Valve Seat
15	1-18792	Valve Cylinder Gasket	37	1-118591	Valve Seat Guide
16	1-18799	Vent Screw Guard	38	1-118640	By-Pass Valve Seat
17	1-18860	Float Valve Needle	39	2-120731	Check Valve Cap
18	1-18961	Float Valve Gasket	41	1-120733	Poppet Spring
19	25664-1	Pump Rotor Shaft Assembly	43	1-121394	"V" Packing
20	1-25879	Bottom Head Gasket	44	1-126295	Plunger Guide
			45	1-126343	Plunger Disc
CONTINUED NEXT PAGE ...					

ROTARY PUMP & AIR SEPARATOR

Item	Part No.	Description	Item	Part No.	Description
46	1-126344	Plunger Spacer	64	38-51911	1/4" Countersunk Pipe Plug
47	1-210024	Drive Shaft Bearing	65	01-52321	1/4-28 Hex Nut
48	1-211816	Rotary Pump Idler			
50	213168-1	Poppet Disc & Relief Valve Assembly	67	<u>Lower Pump Head With Valve Seat Guides, Regulating Valve Seat.</u>	
			408143-1	855-BB	
52	<u>Suction Strainer Cap</u>		408143-2	855-CC	
	1-232289	855-BB & 855-DD	408143-4	855-DD	
	2-215030	855-CC			
53	<u>By-Pass Valve Assembly</u>		68	211818-1	Rotary Pump Head Assembly
	217897-2	34# To 35-1/2# Spring (855-BB & 855-CC)	69	27-51901	1" Pipe Plug (855-CC)
	217897-6	44-1/2# Spring (855-DD & 855-BB)	70	1-132735	Valve Stem
			71	1-232164	Float Assembly
54	217898-2	Regulating Valve Assembly	72	05-52020	3/8" Tube 90° Elbow
55	2-313235	Gasket			
56	403-54921	1/4-20 x 1" Long Phillips Pan Head Machine Screw	For complete Rotary Pump & Air Separator order:		
57	01-50360	1/4-20 x 1/2" Long Hex Head Cap Screw	405952-39	855-BB (162, 162-1-TW, 1248/50A, 1248/50A-1-TW, 1248/50AS, 785, 785MC, 785-1-TW, 262 & 262-1-TW, 311, 312, 322, 324, 413, 426, 614& 628)	
58	34-50360	5/16-18 x 7/8" Long Hex Head Cap Screw	405952-40	855-CC (162-2-TW, 1248/50A-2-TW, 785-2-TW, 262-2-TW)	
59	72-50360	3/8-16 x 2-3/4" Long Hex Head Cap Screw	405952-42	855-DD (162-HC, 1248/50A-HS, 1248/50AS-HS & 785-HC	
60	297-50360	3/8-16 x 1-1/8" Long Hex Head Cap Screw	405952-43	855-BB (1248/50AS-HD)	
61	15-50641	3/8" Lockwasher (855-CC)			
62	17-51210	1/16" Dia x 1/2" Long Cotter Pin			
63	02-51911	1/4" Square Head Pipe Plug			

NOTES