

Section Seven


Premier Parts Manual • H Models

Cash Acceptor, DPT & Dials

Page Number

Money/Volume Display Assembly	7-2, 7-3
Product I.D. Panel Assembly	7-4, 7-5
45" Cash Acceptor Assembly	7-6, 7-7
Non-DPT Panel Assembly	7-8, 7-9
<u>Dial Assembly</u>	
30" DPT	7-10, 7-11
30" Debit	7-12, 7-13
30" InSight	7-14, 7-15
45" DPT	7-16, 7-17
45" Debit	7-18, 7-19
45" InSight	7-20, 7-21
<u>Printer Dial Assembly</u>	
First Design	7-22, 7-23
Graphic (Keypad & Without Debit)	7-24, 7-25
Graphic (Debit)	7-26, 7-27
30" DPT Board Support Assembly	7-28, 7-29
45" DPT Slide Support Assembly (not used with Cash Acceptor)	7-30, 7-31
1 X 5 Keypad Overlay	7-32 — 7-34
For your notes	7-35
DPT Keypad Overlay	7-36 — 7-46

MONEY/VOLUME DISPLAY ASSEMBLY

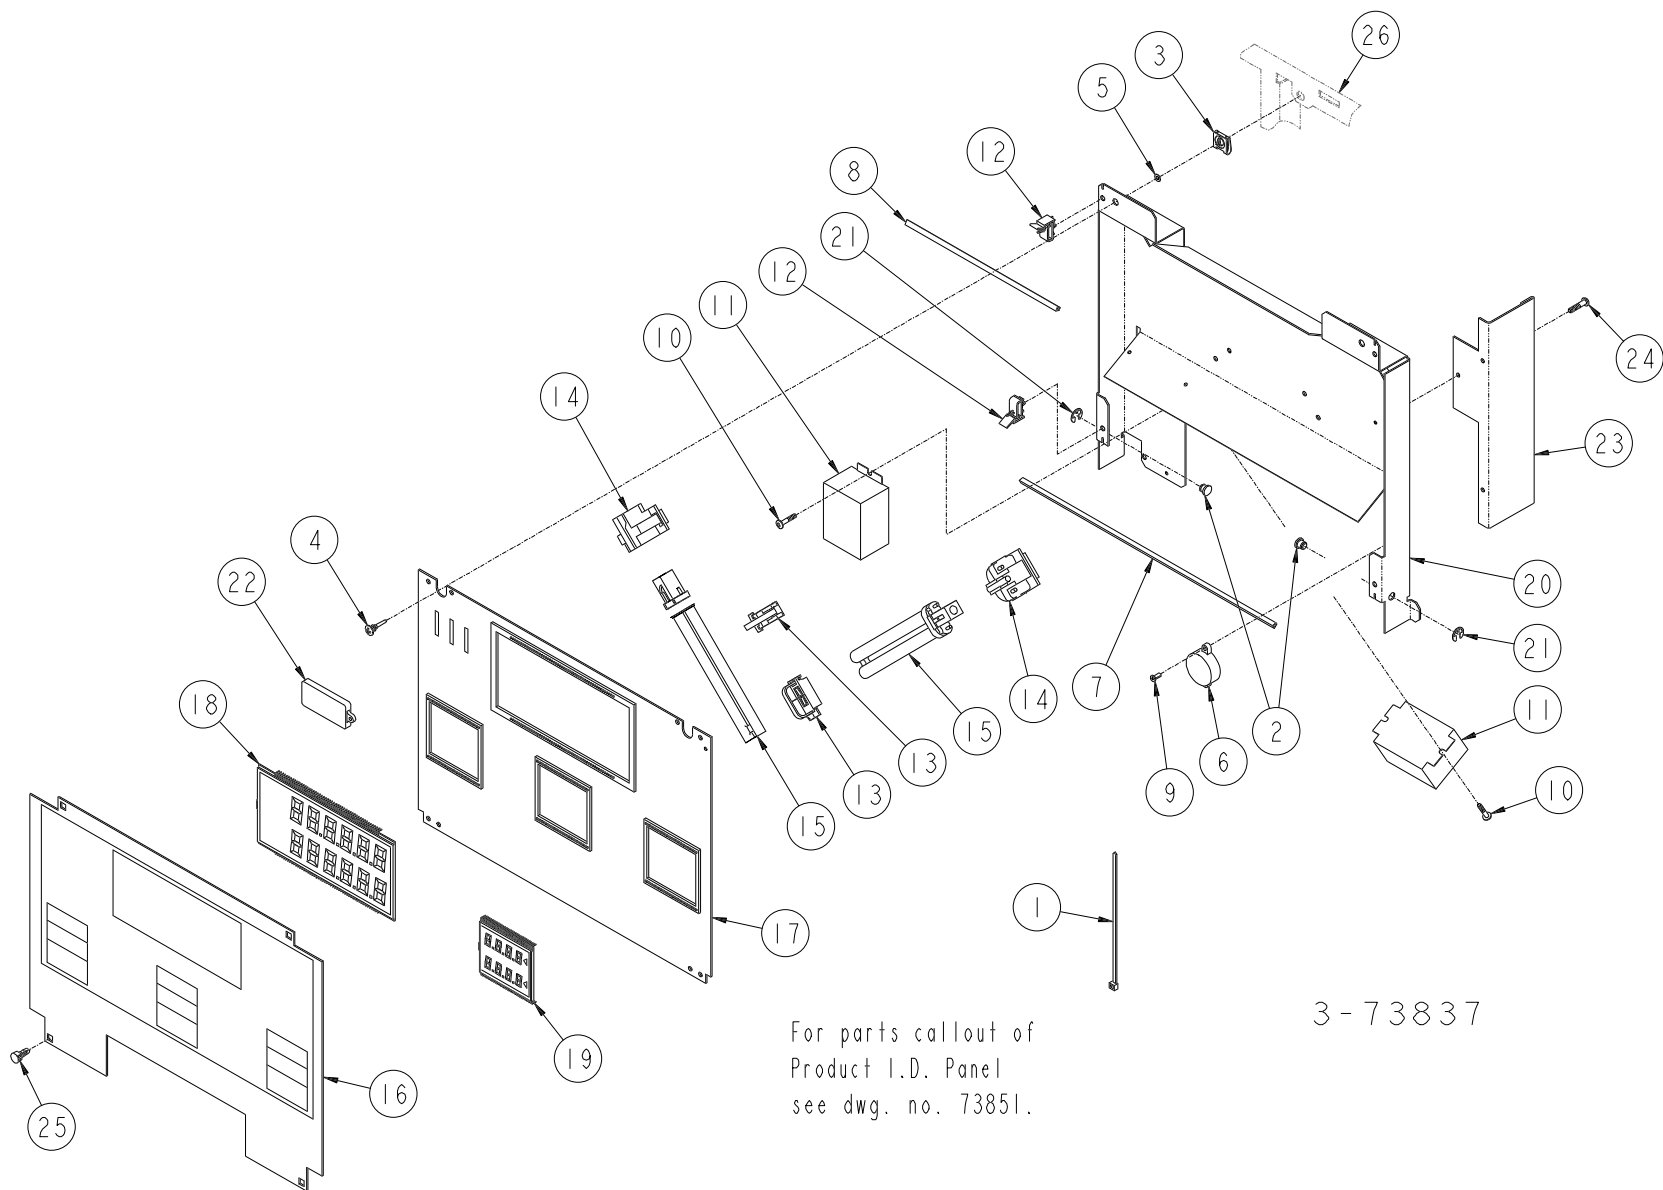

For parts callout of
Product I.D. Panel
see dwg. no. 73851.

3-73837

MONEY/VOLUME DISPLAY ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION
1	2-128725	Cable Tie
2	2-130330	Pivot Pin
3	1-132487	1/4-Turn Receptacle (Serial No. 018138 & Below)
	168-50001	#8-32 x 5/16" Long Round Head Screw (Serial No. 018139 & Above)
4	1-132488	1/4-Turn Stud (Serial No. 018138 & Below)
	4-130449	"U" Nut (Serial No. 018139 & Above)
5	1-132489	Push-On Retainer (Serial No. 018138 & Below)
	1-132803	Nylon Retaining Washer (Serial No. 018139 & Above)
6	228677-1	Buzzer Assembly (Annunciator) (1st Design See Serial Break List 71144)
7	10-229425	Edge Protector
8	11-229425	Edge Protector
9	1-229652	Plastic Rivet
10	1-230689	Phillips Head Self Tapping Screw
11	<u>Ballast Harness Assembly</u>	
	231193-1	120 Volt
	231193-2	240 Volt 50Hz
	231193-3	240 Volt 60Hz
12	1-231851	Snap Fastener
13	1-232120	Lampholder Support
14	1-232121	Lampholder
15	1-232122	Light
16	1-231198	Mask Display (See drawing 232220 and paint chart)

ITEM NO.	PART NO.	DESCRIPTION
17	<u>Money/Volume/Product Display Board Assy</u> (1st Design See Serial Break List 71144)	
	420942-1	3 Product (Decimal)
	420942-2	4 Product (Decimal)
	420942-3	2 Product (Decimal)
	420942-4	1 Product (Decimal)
	420942-5	5 Product (Decimal)
	420942-6	3 Product (Comma)
	420942-7	4 Product (Comma)
	420942-8	2 Product (Comma)
	420942-9	1 Product (Comma)
	420942-10	5 Product (Comma)
	<u>(2nd Design See Serial Break List 71144)</u>	
	421437-1	3 Product (Decimal)
	421437-2	4 Product (Decimal)
	421437-3	2 Product (Decimal)
	421437-4	1 Product (Decimal)
	421437-5	5 Product (Decimal)
	421437-6	3 Product (Comma)
	421437-7	4 Product (Comma)
	421437-8	2 Product (Comma)
	421437-9	1 Product (Comma)
	421437-10	5 Product (Comma)
	421437-11	
18	<u>Money/Volume Liquid Crystal Display</u>	
	1-421047	Decimal
	3-421047	Comma
19	<u>Product Liquid Crystal Display</u>	
	2-421047	Decimal
	4-421047	Comma
20	<u>Money/Volume Display Bracket</u>	
	1-421057	Serial No. 018138 & Below
	1-421876	Serial No. 018139 & Above


ITEM NO.	PART NO.	DESCRIPTION
21	06-52482	Retaining Ring
22	<u>Magnetic Key</u>	
	1-132719	Managers (Black)
	2-132719	Attendants (Red)
23	1-421238	AC Power Shield
24	1-230689	#6 x 3/8" Long Phillips Head Self Tapping Screw
25	4-225470	Standoff
	<u>For complete Money/Volume Display Assembly order:</u>	
	319490-1	H413/26B (120 Volt)
	319490-2	H414/28B-R
	319490-3	H413/26B-S (240 Volt 50Hz)
	319490-4	H413/26B-S (240 Volt 60Hz)
	319490-5	H312/24B-R
	319490-6	H312/24B-S (240 Volt 50 Hz)
	319490-7	H312/24B-S (240 Volt 60 Hz)
	319490-8	H311/22B-R-B3 (120 Volt)
	319490-9	H311/22B-R-B5 (120 Volt)
	319490-10	H311/22B-R (120 Volt)
	319490-11	H311/22B-S (240 Volt 60Hz)
	319490-12	H311/22B-S (240 Volt 50Hz)
	319490-13	H414/28B-R (240 Volt 50Hz)
	319490-14	H414/28B-R (240 Volt 60Hz)

Reference for Tokheim internal use only:

319393 Head Assembly (45")
 319395 Trim Assembly (45")
 319630 Head Assembly (30")
 319635 Trim Assembly (30")
 319743 Trim Assembly (45")
 319821 Trim Assembly (30")

PRODUCT I.D. PANEL ASSEMBLY

For parts call out of
Money/Volume Display
Assembly see drawing
number 73837.

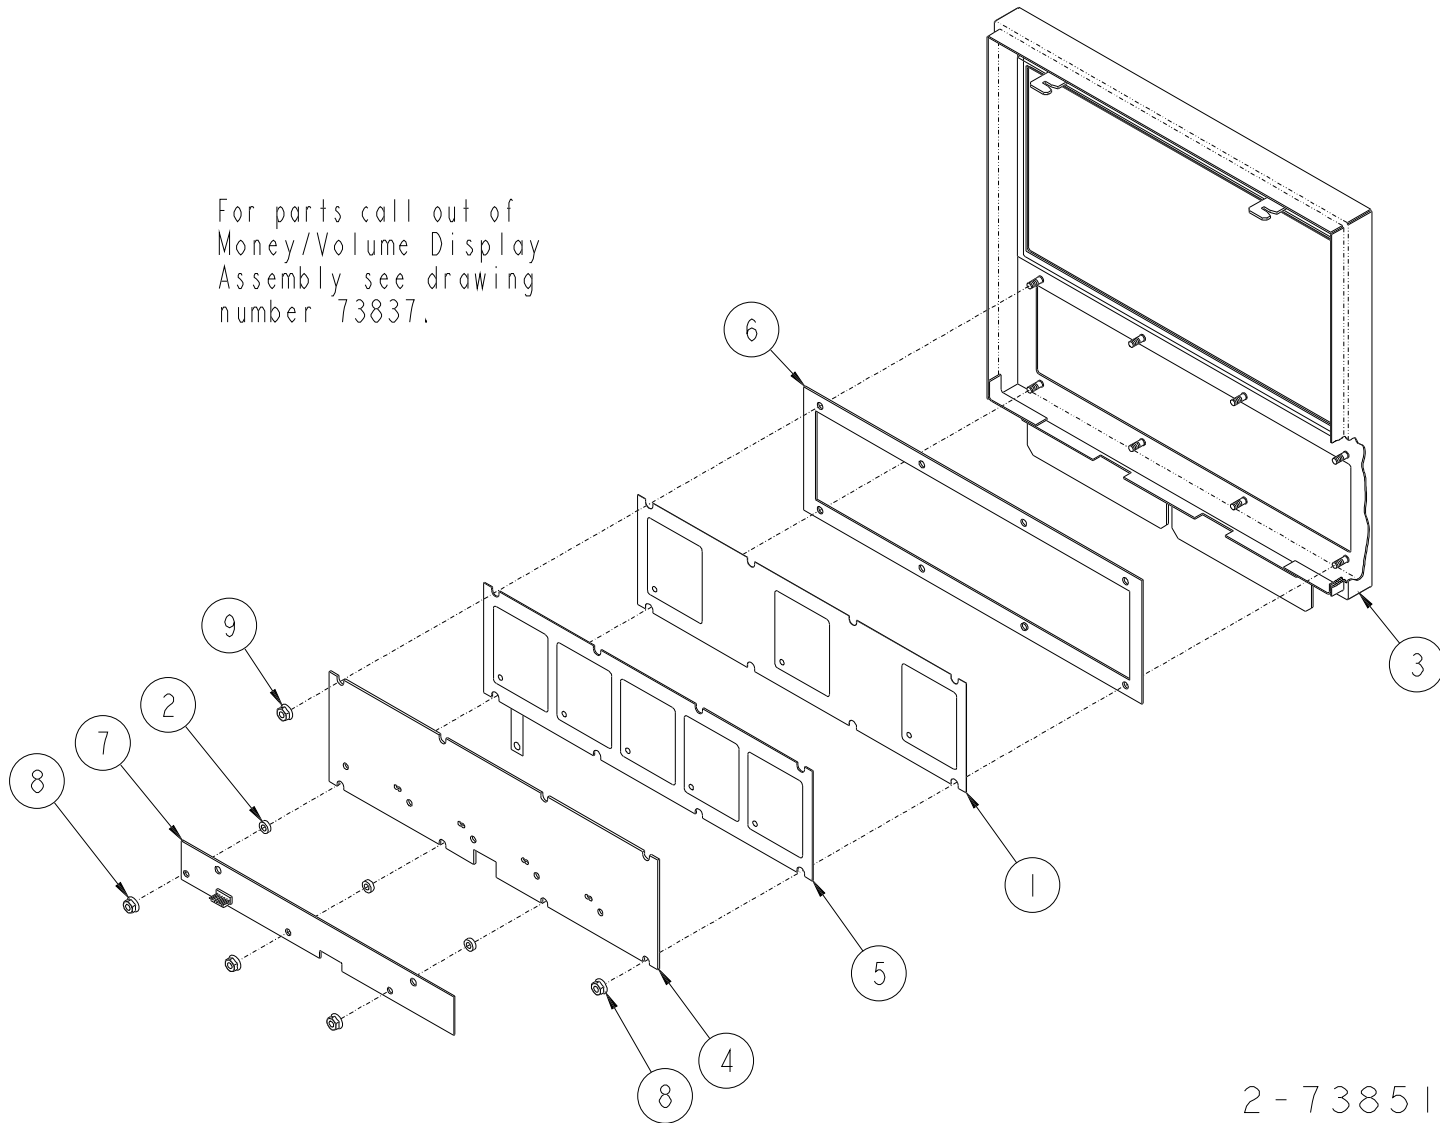

2-73851

PRODUCT I.D. PANEL ASSEMBLY

ITEM PART


NO. NO. DESCRIPTION

- | | |
|---|---|
| 1 | 1 x 5 Keypad Overlay (See Parts List 71145) |
| 2 | 10-229606 Universal Spacer |
| 3 | <u>Money/Volume Display Assembly</u> |
| | 319502-4 Painted (1 x 5 Keypad Cutout) |
| | 319502-6 Painted (No 1 x 5 Keypad Cutout) |
| 4 | 1-319568 Product Keypad Mounting Plate |
| 5 | 320132-1 Product Keypad & Cushion Assembly (Includes Item #6) |
| 6 | 1-320502 Cushion |
| 7 | 421228-1 Led Printed Circuit Board Assembly |
| 8 | 03-54752 #10-24 M-F Flange Whiz-Lock Nut |

For complete Money/Volume Dial Assembly order:

319502-5 Includes 1 x 5 Keypad

45" CASH ACCEPTOR ASSEMBLY

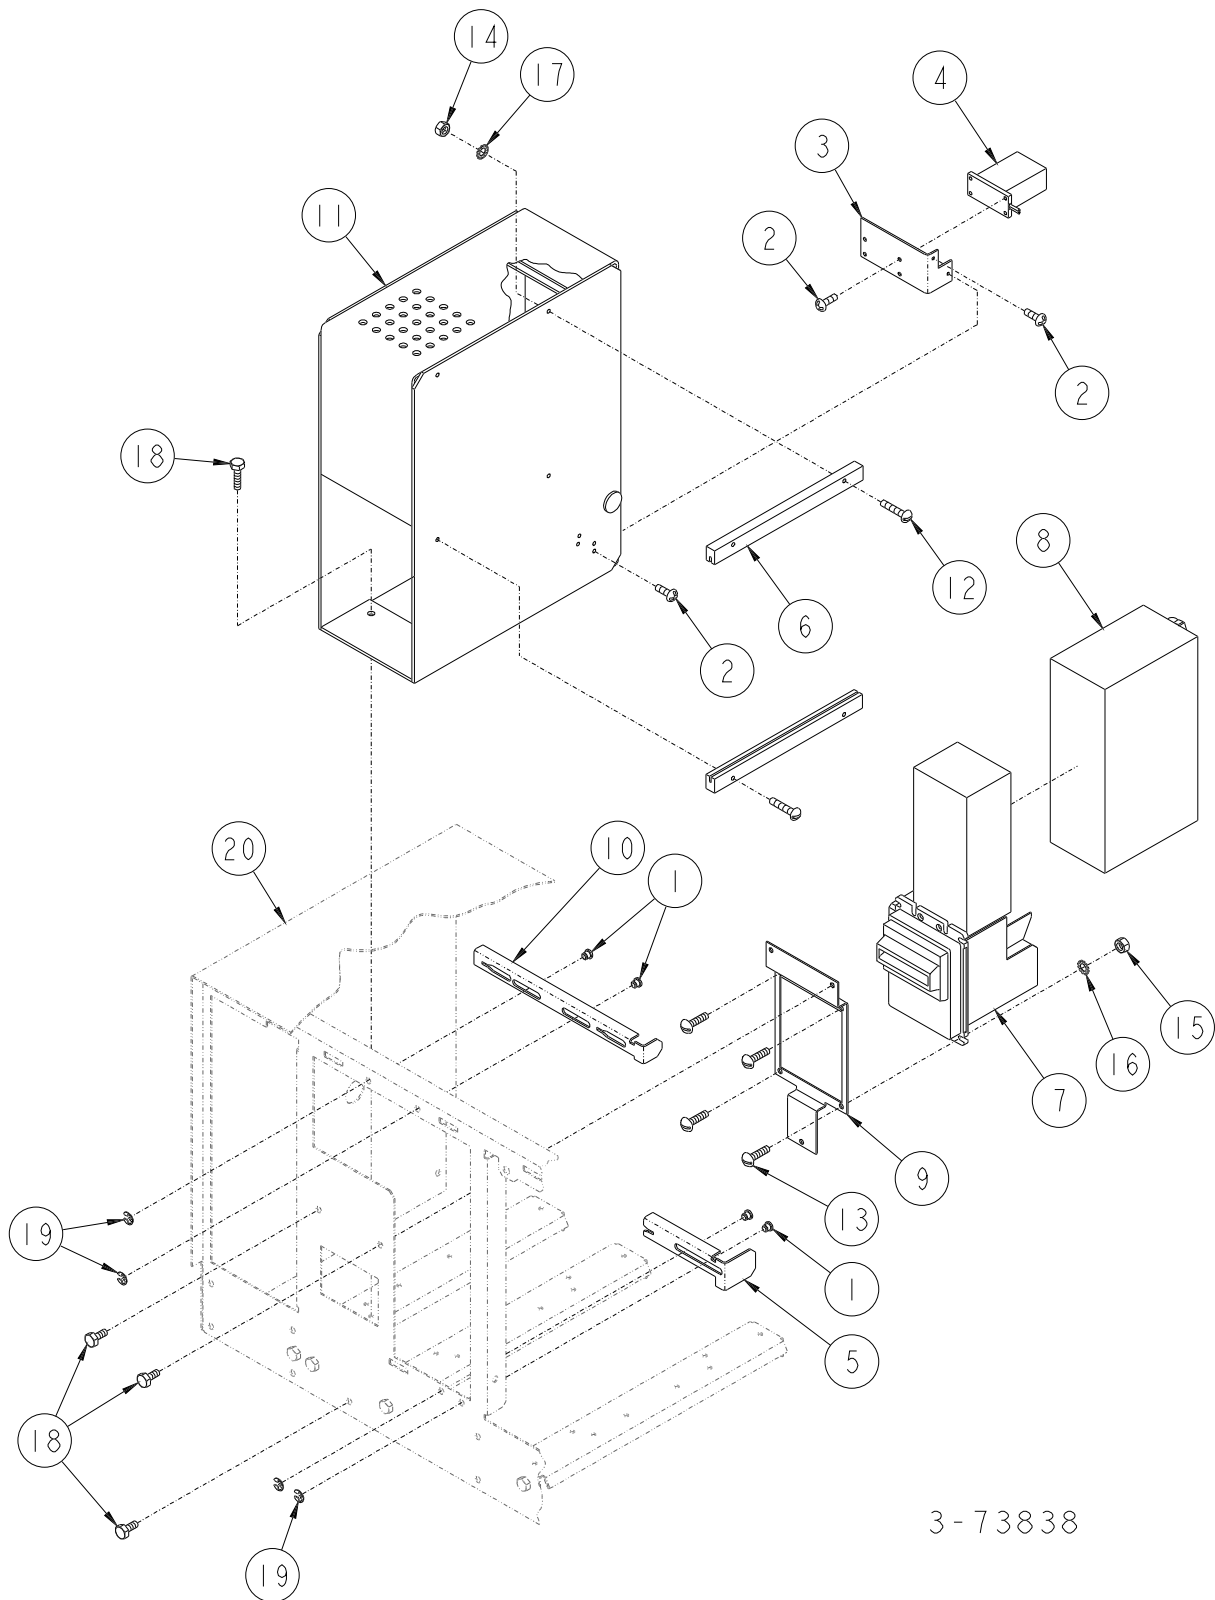


3-73838

45" CASH ACCEPTOR ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	2-130330	Pivot Pin	15	04-50211	#8-32 Hex Nut
2	1-230689	#6-32 x 3/8" Long Phillips Truss Head Self-Tapping Screw	16	04-50761	#8 Shakeproof Lockwasher
3	1-231827	Totalizer Bracket	17	21-50761	#6 Shakeproof Lockwasher
4	1-231839	Electronic Totalizer	18	10-51491	#14 x 1/2" Long Hex Head P.K. Self Tapping Screw
5	1-231850	DPT Latch Bracket (Bottom)	19	6-52482	Retaining Ring
6	1-231873	Vault Slide Retainer	20	<u>For parts call out of Head Assembly see:</u>	
7	<u>Cash Acceptor</u>		73829	45"	
	1-321055	Non-Locking Includes Non-Locking Cassette	73870	30"	
	3-321055	Locking Requires Locking Cassette	<u>For complete Cash Acceptor Assembly order 1-319398</u>		
8	2-321055	Cassette	<u>Reference for Tokheim internal use only:</u>		
9	1-319406	Cash Acceptor Mounting Bracket	319393	Head Assembly	
10	1-319414	DPT Latch Bracket (Top)	231840	Vault Totalizer Assembly	
11	421042-1	Vault Weld Assembly	421058	Cash Acceptor Vault Assembly	
12	100-50001	#6-32 x 3/4" Long Round Head Machine Screw			
13	178-50001	#8-32 x 3/4" Long Round Head Machine Screw			3-73838
14	03-50211	#6-32 Hex Nut			

NON-DPT PANEL ASSEMBLY

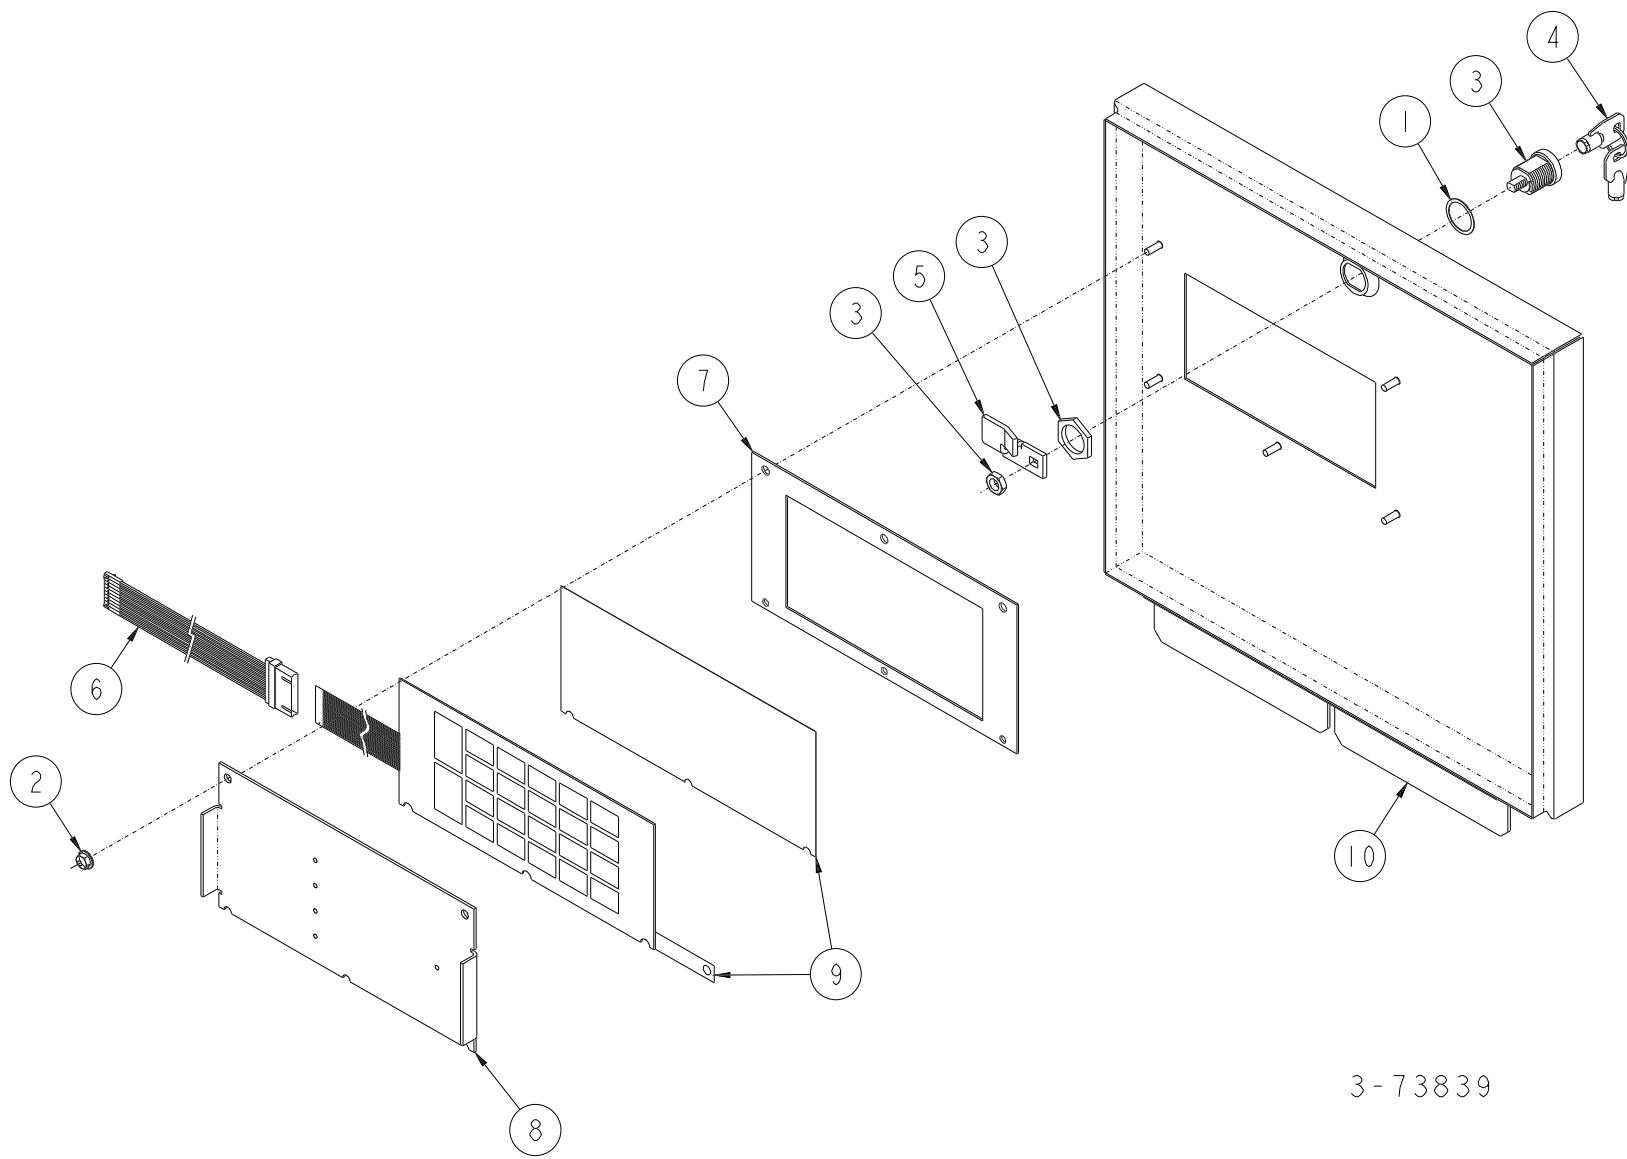

3-73839


NON-DPT PANEL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION
1	2-127656	Lock Gasket
2	1-228671	#8-32 Capped Washer Locknut
3	232962-1	Lock Assembly (Includes Item #1, 4 & 5)
4	2-231841	Tubular Key (TPX 88)
5	1-232108	Lock Cam
6	232163-1	Ribbon Cable Assembly
7	2-320575	Cushion
8	1-319509	Standard Keypad Plate
9	<u>See Keypad, Overlay & Decal Assembly 71142</u>	
10	421172-4	Keypad Dial

Reference for Tokheim internal use only: 421172-2 Non-DPT Module (Painted)

30" DPT DIAL ASSEMBLY

See DPT Wiring Schematic
72636 for wiring not called for.

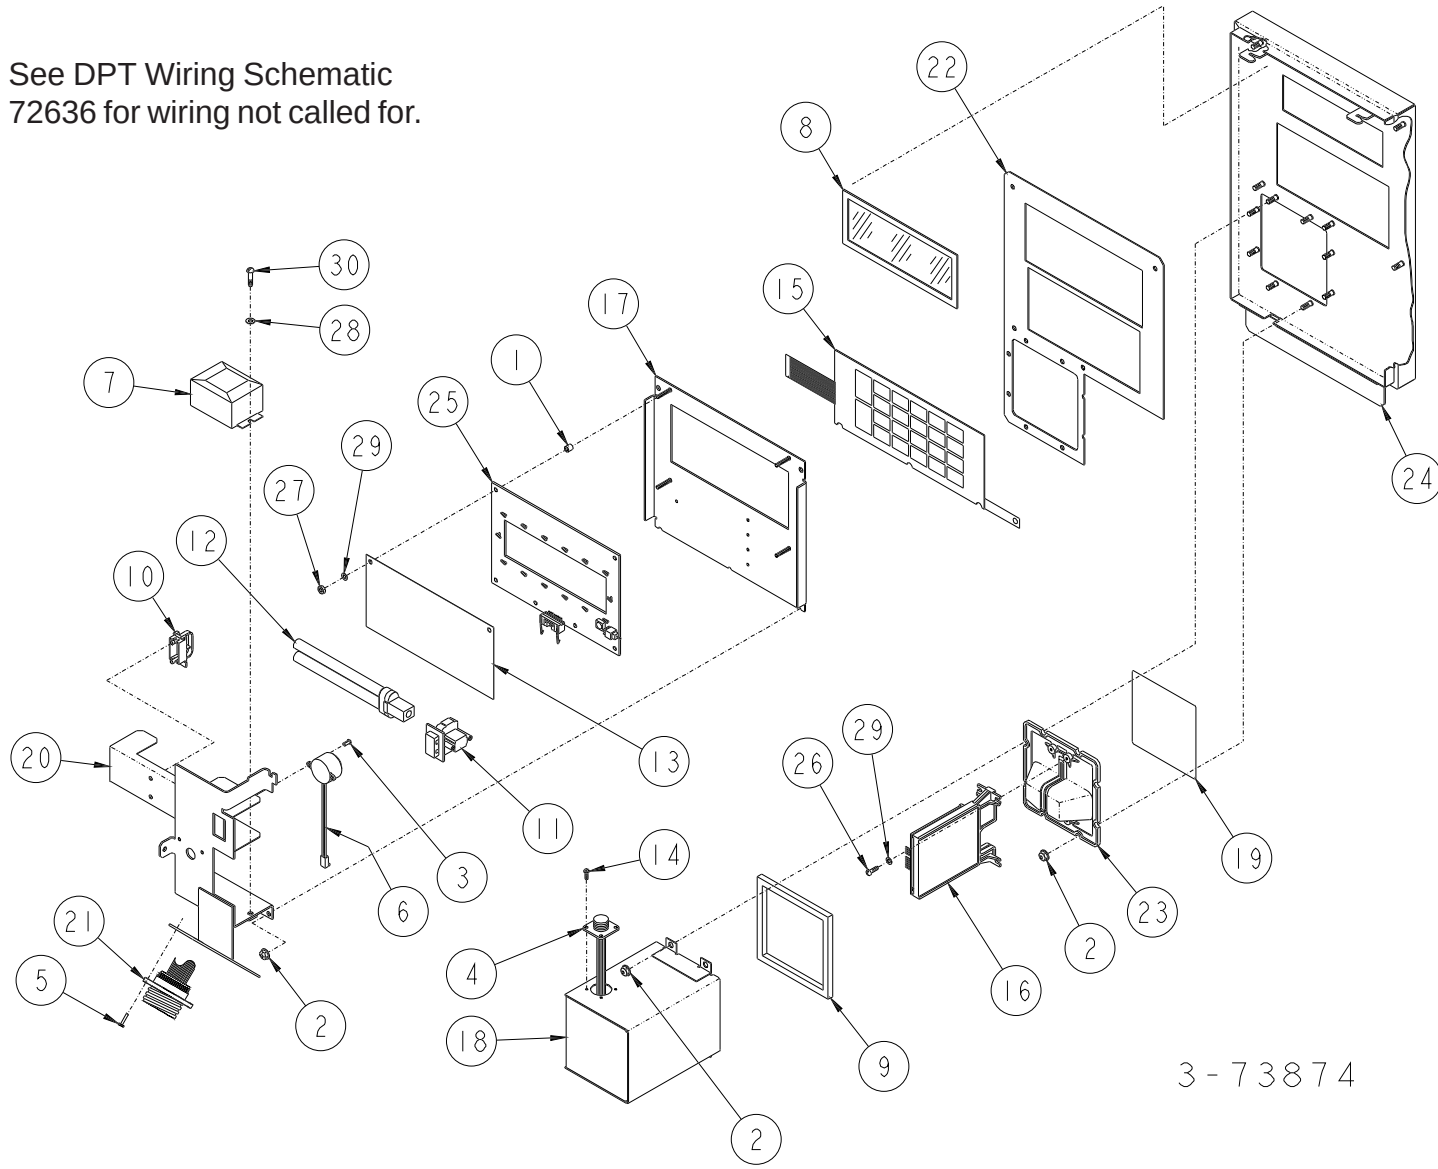

3-73874


30" DPT DIAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION
1	1-132486	Spacer
2	1-228671	#8-32 Capped Washer Locknut
3	1-229652	Plastic Rivet (1st Design See Serial Break List 71144)
4	230618-1	Internal Card Reader Harness Assembly
5	1-230689	#6 x 3/8" Long Phillips Head Self Tapping Screw
6	230744-2	Transducer Assembly (Annunciator) (1st Design See Serial Break List 71144)
7	<u>Ballast</u>	
	5-315556	120 Volt
	3-315556	240 Volt 50Hz
	4-315556	240 Volt 60Hz
8	1-231847	Display Panel
9	1-232111	Card Reader Box Gasket
10	1-232120	Lamp Holder Support
11	1-232121	Lamp Holder
12	1-232122	Light (Phillips)
13	1-232130	Diffuser
14	20-55392	#4 x 3/8" Long Hex Head Self Tapping Screw
15	<u>See Keypad, Overlay & Decal Assembly 71142</u>	
16	5-319403	Card Reader (Dual Head)
17	319412-1	Keypad Plate Weld Assembly
18	319442-1	Card Reader Box Weld Assembly

ITEM NO.	PART NO.	DESCRIPTION
19	<u>Decal</u>	
	1-319471	(Card) Phillips, Texaco, Suothland, Marathon, Distributor/CFN, Emro, Total, Distributor
	6-319471	(Card) Amoco CDF
	8-319471	(Insert Card) Amoco Std.
	11-319471	(Insert Card) Chevron
20	319642-2	DPT Dial Bracket Weld Assembly
21	319657-1	Internal DPT/Dial Harness Assembly
22	1-320484	Cushion
23	1-421073	Card Reader Bezel
24	319487-27	Dial Weld Assembly (Card Reader)
25	<u>Display Module</u>	
	1-421076	
	3-421076	Hebrew
26	88-50021	#6-32 x 1/4" Long Phillips Round Head Machine Screw
27	03-50212	#6-32 Hex Machine Nut
28	22-50761	#8 Shakeproof Lockwasher
29	03-50762	#6 Shakeproof Lockwasher
30	166-52851	#8-32 x 1/4" Long Hex Head Machine Screw
<u>Reference for Tokheim internal use only:</u>		
	319487	DPT Dial Assembly

30" DEBIT DPT DIAL ASSEMBLY

See DPT Wiring Schematic
72636 for wiring not called for.

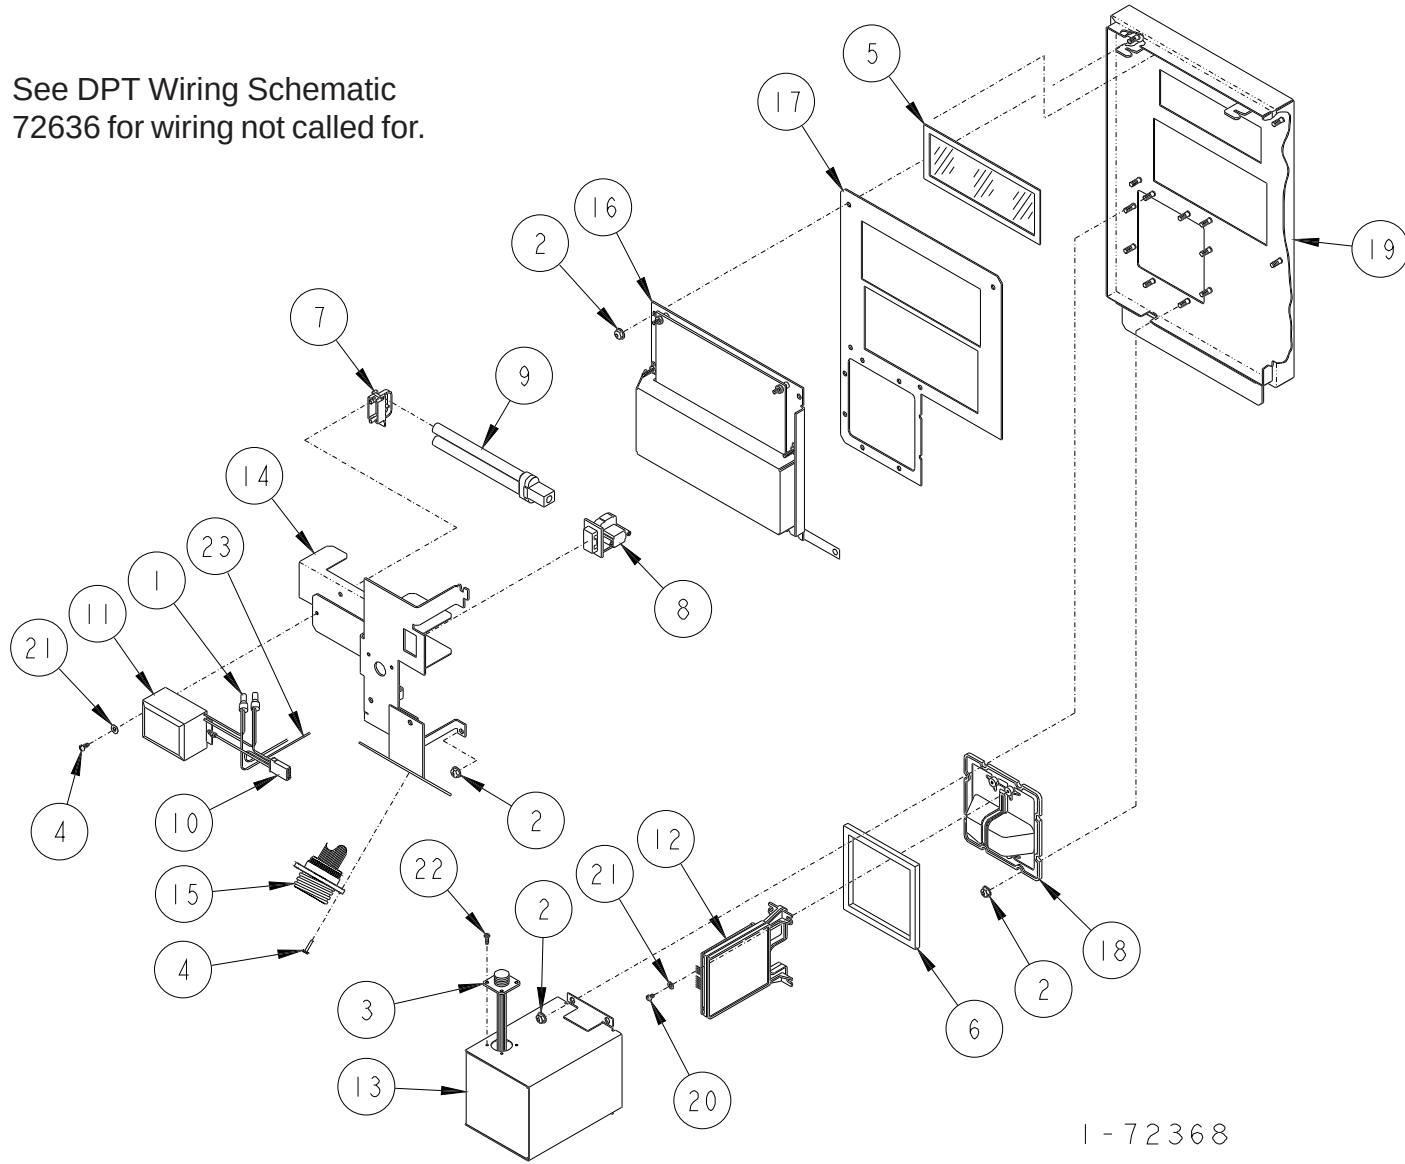

1 - 72368

1-72368

30" DEBIT DPT DIAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION
1	1-129223	Wire Connector
2	1-228671	#8-32 Capped Washer Locknut
3	230618-1	Internal Cardreader Harness Assembly
4	1-230689	#6 x 3/8" Long Phillips Head Self Tapping Screw
5	1-231847	DPT Display Panel
6	1-232111	Card Reader Box Gasket
7	1-232120	Lampholder Support
8	1-232121	Lampholder
9	1-232122	Light
10	232136-2	Display Adapter Harness Assembly
11	<u>Ballast</u>	
	3-315556	240 Volt 50 Cycle
	4-315556	240 Volt 60 Cycle
	5-315556	118 Volt
12	5-319403	Card Reader (Dual Head)
13	319442-1	Card Reader Box Weld Assembly
14	319642-3	DPT Dial Bracket Weld Assembly
15	319657-2	Internal DPT/Dial Harness Assembly
16	320247	Secure Pin Pad Module (Specify Customer)
17	1-320484	Cushion
18	1-421073	Card Reader Bezel
19	319487-27	DPT Dial Weld Assembly

ITEM NO.	PART NO.	DESCRIPTION
20	88-50021	#6-32 x 1/4" Long Phillips Round Head Machine Screw
21	03-50762	#6 Shakeproof Lockwasher
22	20-55392	#4 x 3/8" Long Hex Head Tapping Screw
23	010-554809-20	Conductor (#18 Gauge Black)


Reference for Tokheim internal use only:

319487 DPT Dial Assembly

1-72368

30" INSIGHT DIAL ASSEMBLY

See Insight Wiring Schematic
72638 for wiring not called for.

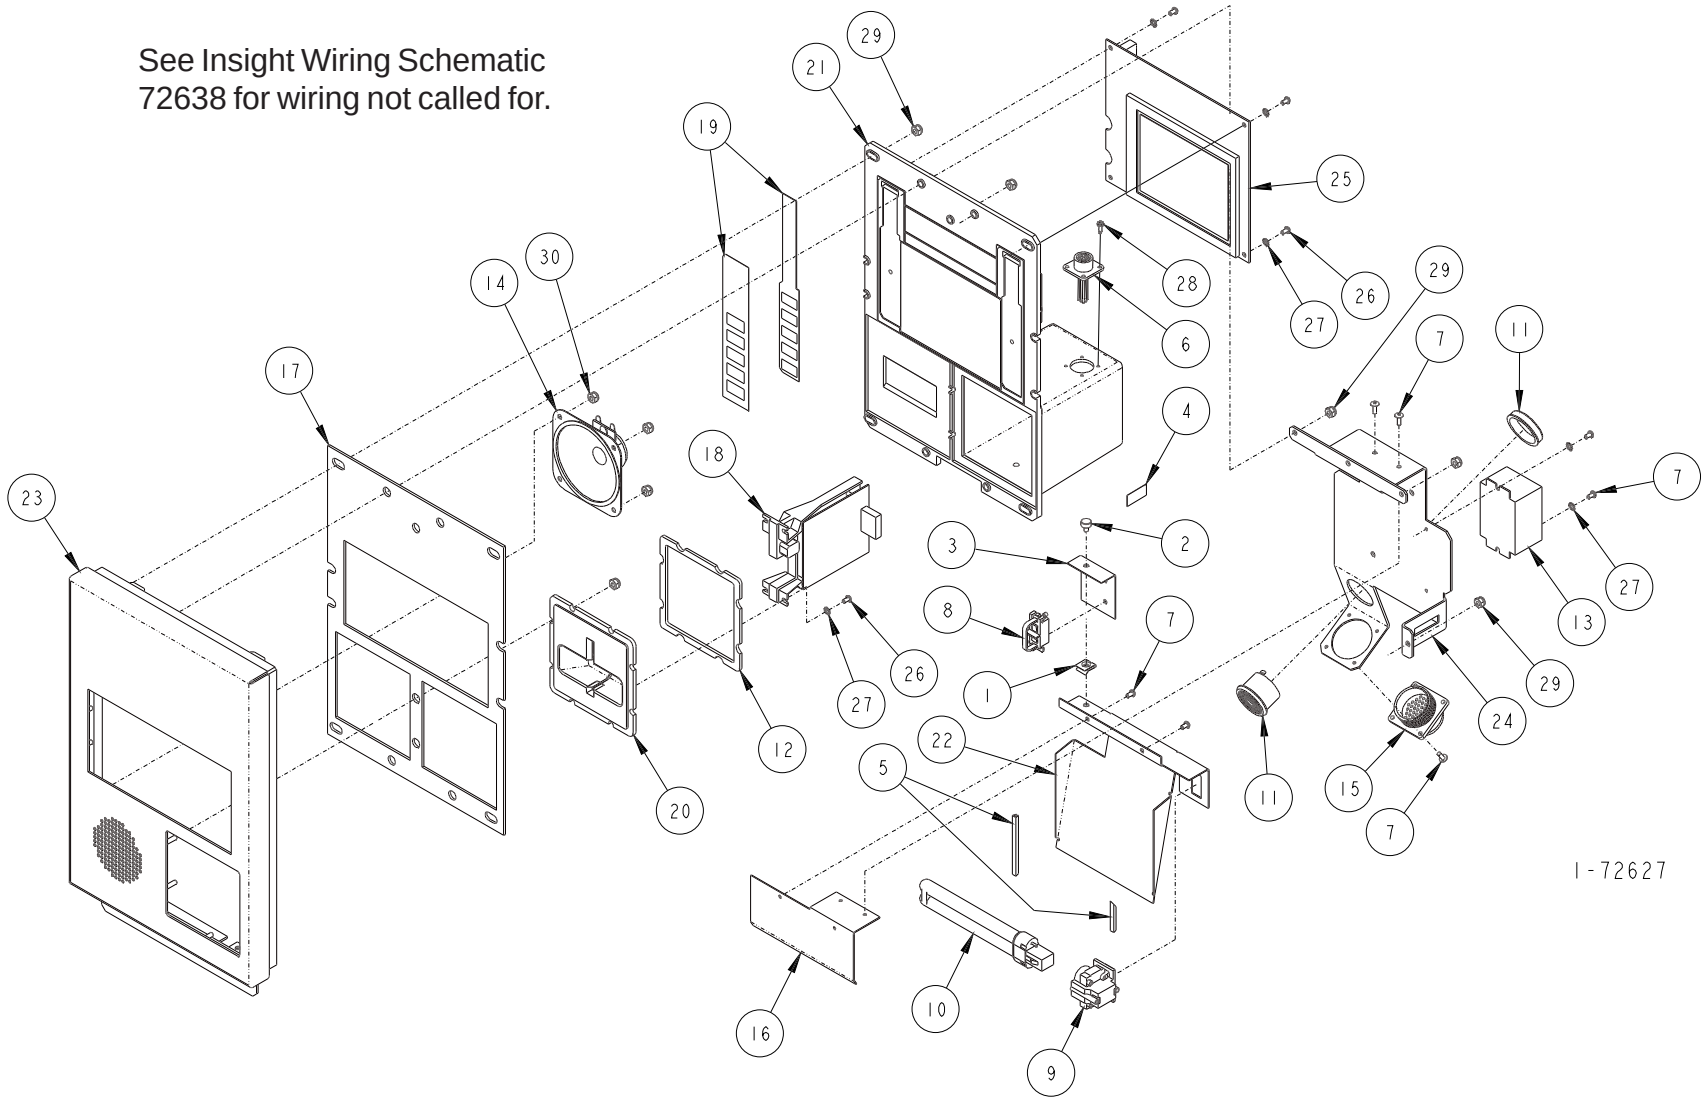


1-72627

Tokheim Corporation
7-15

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	4-130449	#8-32 "U" Nut	18	<u>Card Reader Kit (Includes Items # 12 & 17)</u>		24	1-422393	DPT Dial Bracket
2	1-131110	Thumb Screw		320922-5	Card	25	1-422448	Graphic DPT Display
3	1-132849	Backlight Access Bracket		320922-6	Card/Cash	26	88-50021	#6-32 x 1/4" Long Phillips Round Head Machine Screw
4	1-132947	Product Registration Label	19	<u>Softkey Keypad Kit (Includes Item #17)</u>		27	03-50762	#6 Shakeproof Lockwasher
5	5-229425	Edge Protector		320922-3	Card	28	20-55392	#4 x 3/8" Long Hex Head Self Tapping Screw
6	230618-1	Internal Card Reader Harness Assembly		320922-4	Card/Cash	29	04-55531	#8-32 Nylon Insert Locknut
7	2-230689	#6 x 3/8" Long Phillips Head Self Tapping Screw	20	<u>Card Reader Bezel Kit (Includes Items #12 & 17)</u>		30	55561	Self-Tapping Push Nut (Plastic)
8	1-232120	Lampholder Support		320922-7	Card			<u>For complete Graphic DPT Dial Assembly order: (Doesn't Include Ballast)</u>
9	1-232121	Lampholder		320922-8	Card/Cash	422287-1		Card - Right
10	1-232122	Light	21	<u>Lexan Window Kit (Includes Items # 4, 12, 17 & 19)</u>				
11	1-232236	Buzzer		320922-1	Card			
12	1-233564	Card Reader Cushion		320922-2	Card/Cash			
13	<u>Ballast Assembly</u>		22	1-422311	Backlight Lampholder/ Reflector			
	231193-4	120Volt	23	<u>Graphic DPT Dial Weld Assembly</u>				
	231193-5	240 Volt 50 Cycle		422392-3	Without Speaker			
	231193-6	240 Volt 60 Cycle		422392-4	With Speaker			
14	1-318170	Speaker						
15	319657-3	DPT Dial Harness Assembly						
16	1-320693	Backlight Support Bracket						
17	1-320764	DPT Dial Cushion						

45" DPT DIAL ASSEMBLY

See DPT Wiring Schematic
72637 for wiring not called for.

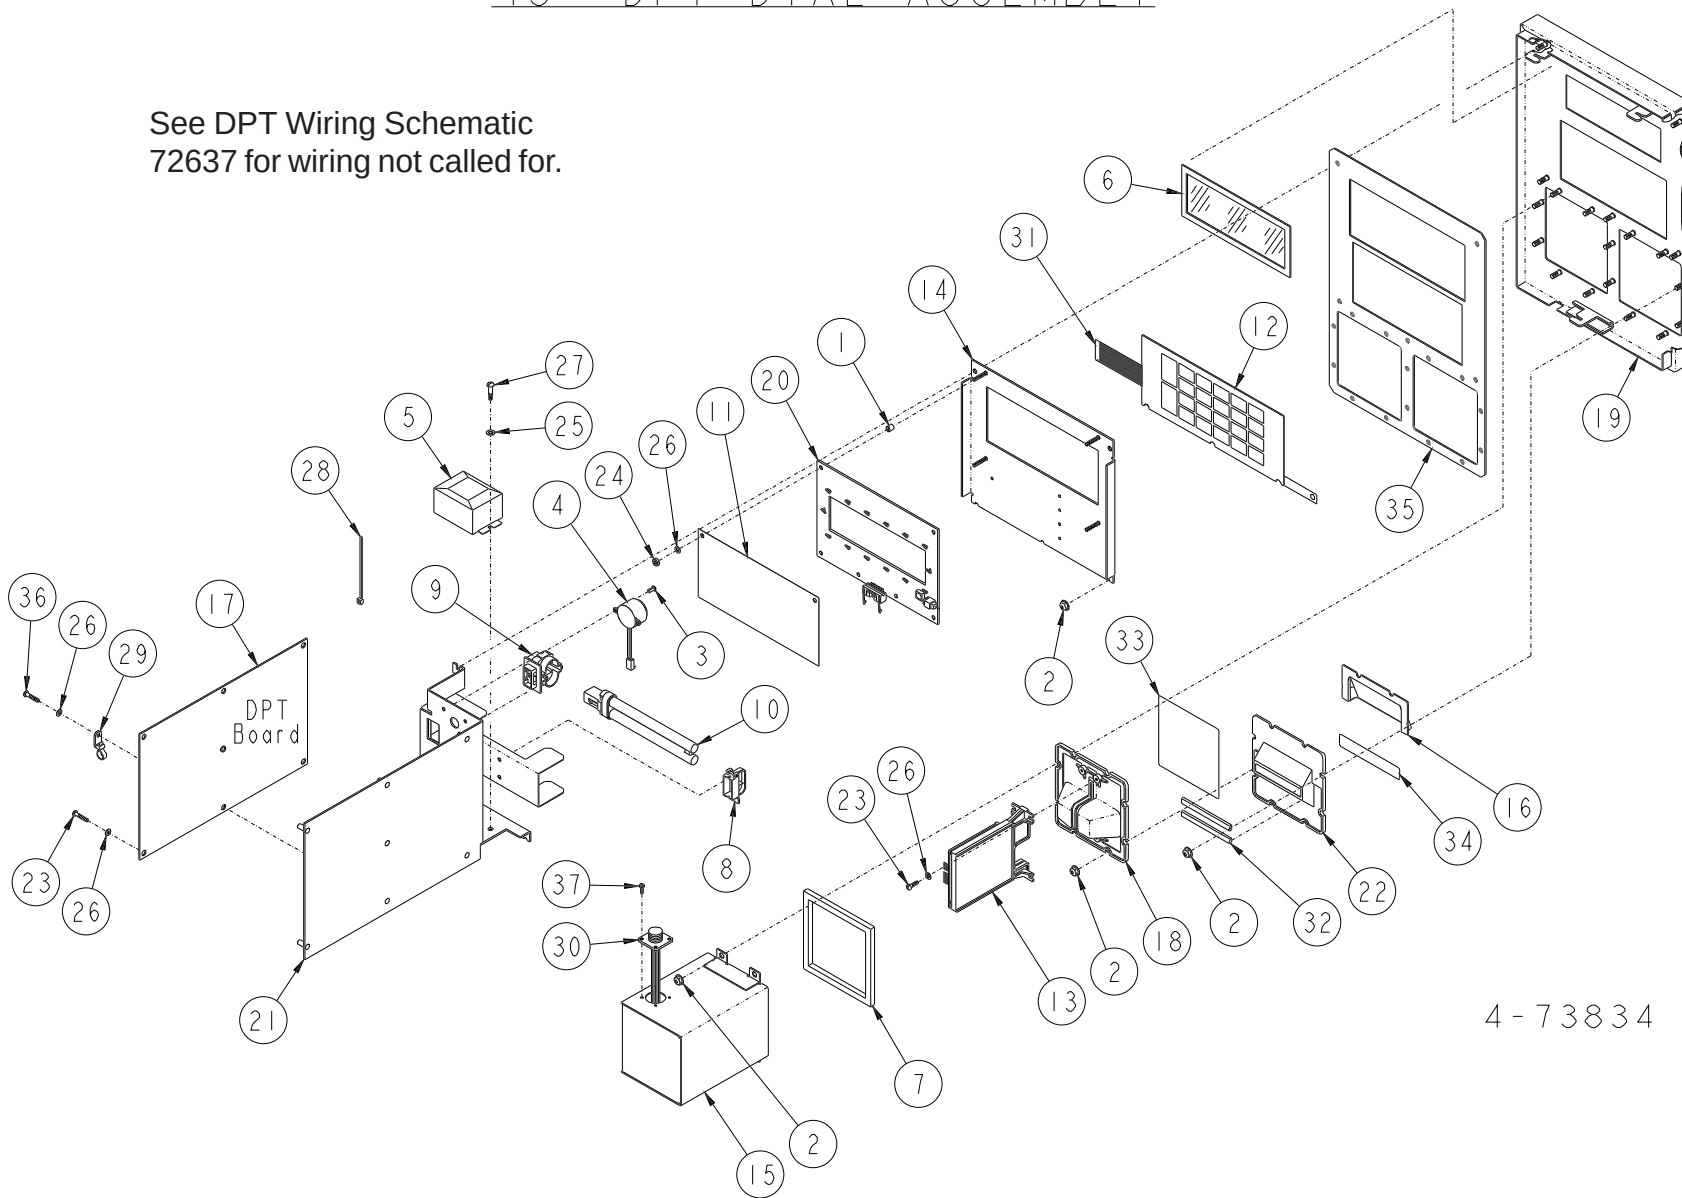

4-73834


45" DPT DIAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	1-132486	Spacer	17	<u>Continued</u>		30	230618-1	Internal Card Reader Harness Assembly
2	1-228671	#8-32 Capped Washer Locknut		420929-2	TCS "A"	31	232163-1	Keypad Harness Assembly
3	1-229652	Plastic Rivet (1st Design See Serial Break List 71144)		420929-3	Paper Cutter (Gasboy)	32	33-317638	Cushion
4	230744-1	Transducer Assembly (Annunciator) (1st Design See Serial Break List 71144)		420929-4	Tear Bar Printer	33	<u>Decal</u>	
5	<u>Ballast</u>		18	1-421073	Card Reader Bezel		1-319471	(Card) Phillips, Texaco, Southland, Marathon, Distributor/CFN, Emro, Total, Distributor
	5-315556	120 Volt	19	<u>Dial Weld Assembly (Painted)</u>			6-319471	(Card) Amoco CDF
	3-315556	240 Volt 50Hz		319487-24	Cash Acceptor & Card Reader		8-319471	(Insert Card) Amoco Std.
	4-315556	240 Volt 60Hz		319487-25	Cash Acceptor Only		11-319471	(Insert Card) Chevron
				319487-26	Card Reader Only	34	<u>Decal</u>	
6	1-231847	Display Panel	20	<u>Display Module</u>			3-319471	(Insert Cash) Emro
7	1-232111	Card Reader Box Gasket		1-421076			4-319471	(Cash) Amoco CDF
8	1-232120	Lamp Holder Support		3-421076	Hebrew		5-319471	(Cash - Bill) Amoco CDF & Std.
9	1-232121	Lamp Holder	21	421080-1	Slide Bracket Weld Assembly		10-319471	(Insert Cash) Amoco Std.
10	1-232122	Light (Phillips)	22	1-421110	Cash Acceptor Bezel	35	1-320484	Cushion
11	1-232130	Diffuser	23	88-50021	#6-32 x 1/4" Long Phillips Round Head Machine Screw	36	20-55392	#4 x 3/8" Long Hex Head Self Tapping Screw
12	<u>See Keypad, Overlay & Decal Assembly 71142</u>		24	03-50212	#6-32 Hex Machine Nut	37	96-50021	#6-32 x 1/2" Long Phillips Head Screw
13	5-319403	Card Reader (Dual Head)	25	22-50761	#8 Shakeproof Lockwasher			
14	319412-1	Keypad Plate Weld Assembly	26	03-50762	#6 Shakeproof Lockwasher			
15	319442-1	Card Reader Box Weld Assembly	27	166-52851	#8-32 x 1/4" Long Hex Head Machine Screw			
16	1-319449	Cash Acceptor Shield	28	1-128725	Cable Tie			
17	<u>DPT Board Assembly</u>		29	3-228918	Cable Clamp			
	420929-1	Paper Cutter						

Reference for Tokheim internal use only:
319487 DPT Dial Assembly

45" DEBIT DPT DIAL ASSEMBLY

See DPT Wiring Schematic
72637 for wiring not called for.

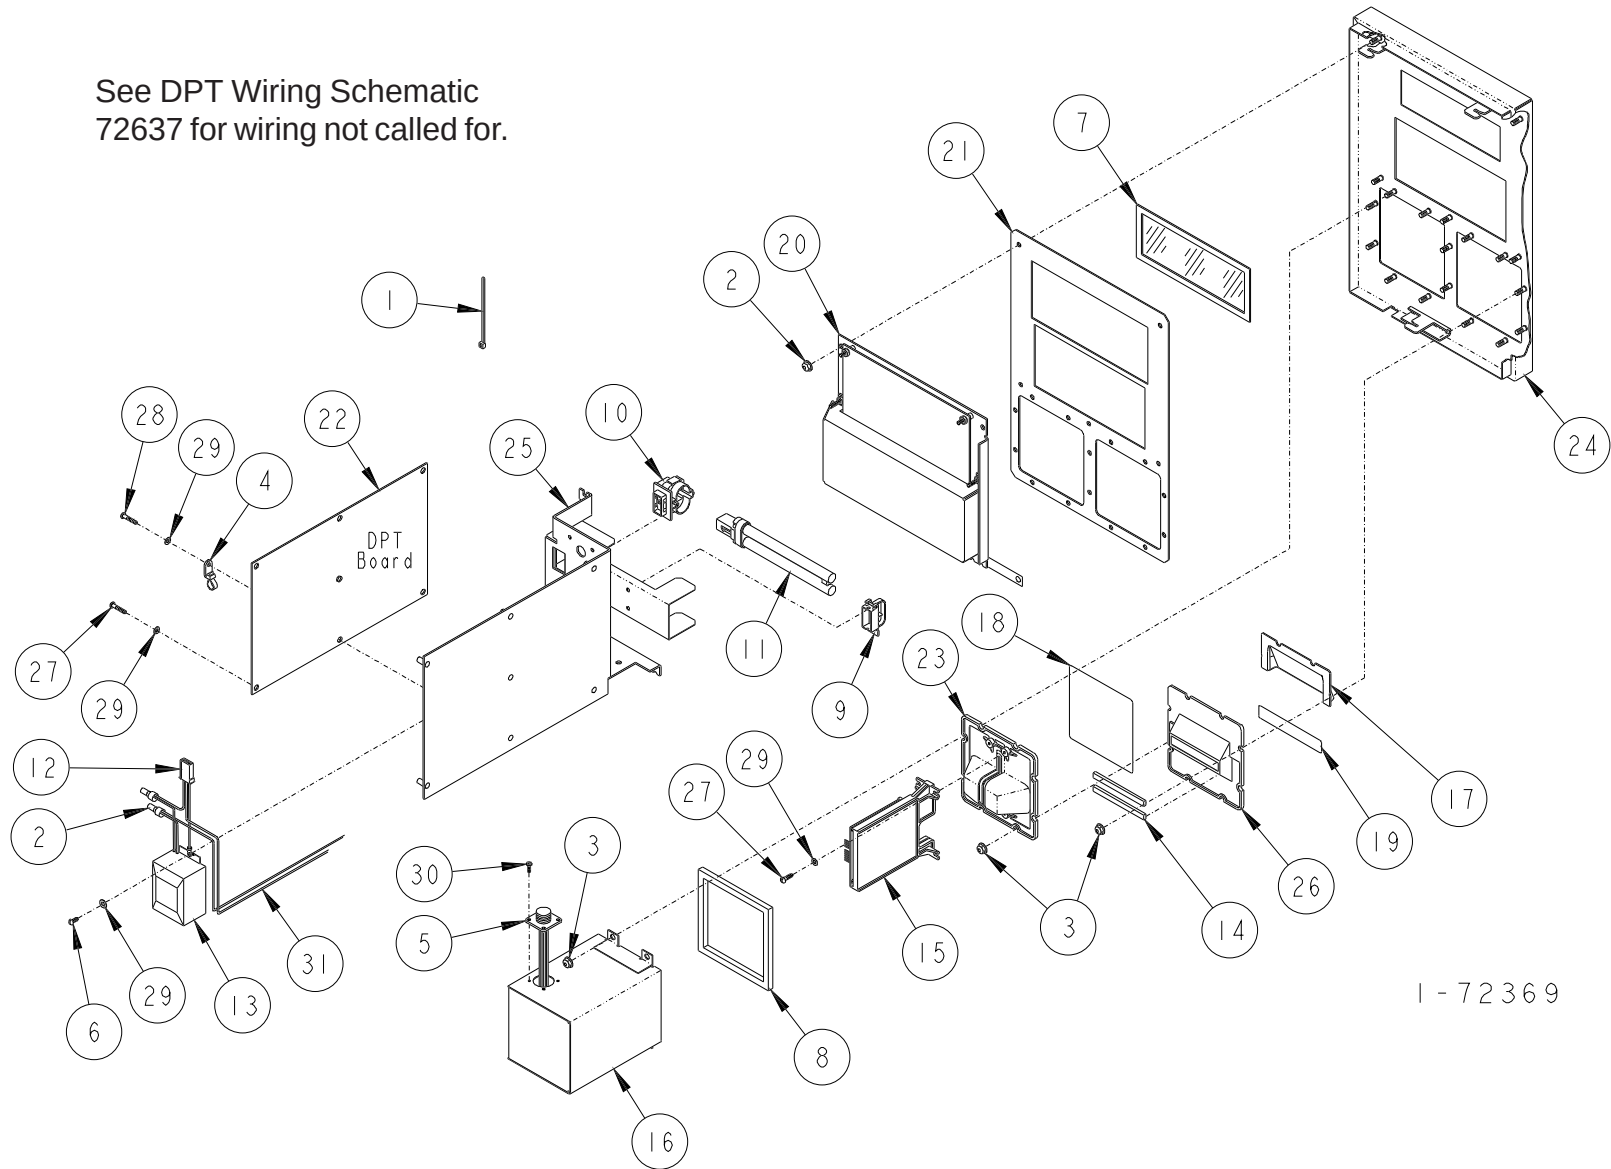


1-72369

45" DEBIT DPT DIAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	1-128725	Cable Tie	18	<u>Decal</u>		24	<u>Dial Weld Assembly (Painted)</u>	
2	1-129223	Wire Connector		1-319471	(Card) Phillips, Texaco, Southland, Marathon, Distributor/CFN, Emro, Total, Distributor		421075-4	Cash Acceptor & Card Reader
3	1-228671	#8-32 Capped Washer Locknut					421075-5	Cash Acceptor Only
4	3-228918	Cable Clamp		6-319471	(Card) Amoco CDF		421075-6	Card Reader Only
5	230618-1	Internal Cardreader Harness Assembly		8-319471	(Insert Card) Amoco Std.	25	421080-1	Slide Bracket Weld Assembly
6	1-230689	#6 x 3/8" Long Phillips Head Self Tapping Screw		11-319471	(Insert Card) Chevron	26	1-421110	Cash Acceptor Bezel
7	1-231847	Display Panel	19	<u>Decal</u>		27	88-50021	#6-32 x 1/4" Long Phillips Round Head Machine Screw
8	1-232111	Card Reader Box Gasket		3-319471	(Insert Cash) Emro			
9	1-232120	Lamp Holder Support		4-319471	(Cash) Amoco CDF	28	96-50021	#6-32 x 1/2" Long Phillips Round Head Machine Screw
10	1-232121	Lamp Holder		5-319471	(Cash - Bill) Amoco CDF & Std.	29	03-50762	#6 Shakeproof Lockwasher
11	1-232122	Light (Phillips)		10-319471	(Insert Cash) Amoco Std.	30	20-55392	#4 x 3/8" Long Hex Head Self Tapping Screw
12	232136-2	Display Adapter Harness Assembly	20	320247	Secure Pin Pad Module (Specify Customer)	31	010-554809-20	Conductor (#18 Gauge Black)
13	<u>Ballast</u>		21	1-320484	Cushion			
	3-315556	240 Volt 50 Cycle	22	<u>DPT Board Assembly</u>				
	4-315556	240 Volt 60 Cycle		421844-1	Paper Cutter			
	5-315556	118 Volt		421844-2	Tear Bar Printer			
14	33-317638	Cushion		662-314950	Eprom (MT Prefixed Software)			
15	5-319403	Card Reader (Dual Head)						
16	319442-1	Card Reader Box Weld Assembly	23	1-421073	Card Reader Bezel			
17	1-319449	Cash Acceptor Shield						

Reference for Tokheim internal use only:
319487 DPT Dial Assembly

45" INSIGHT DIAL ASSEMBLY

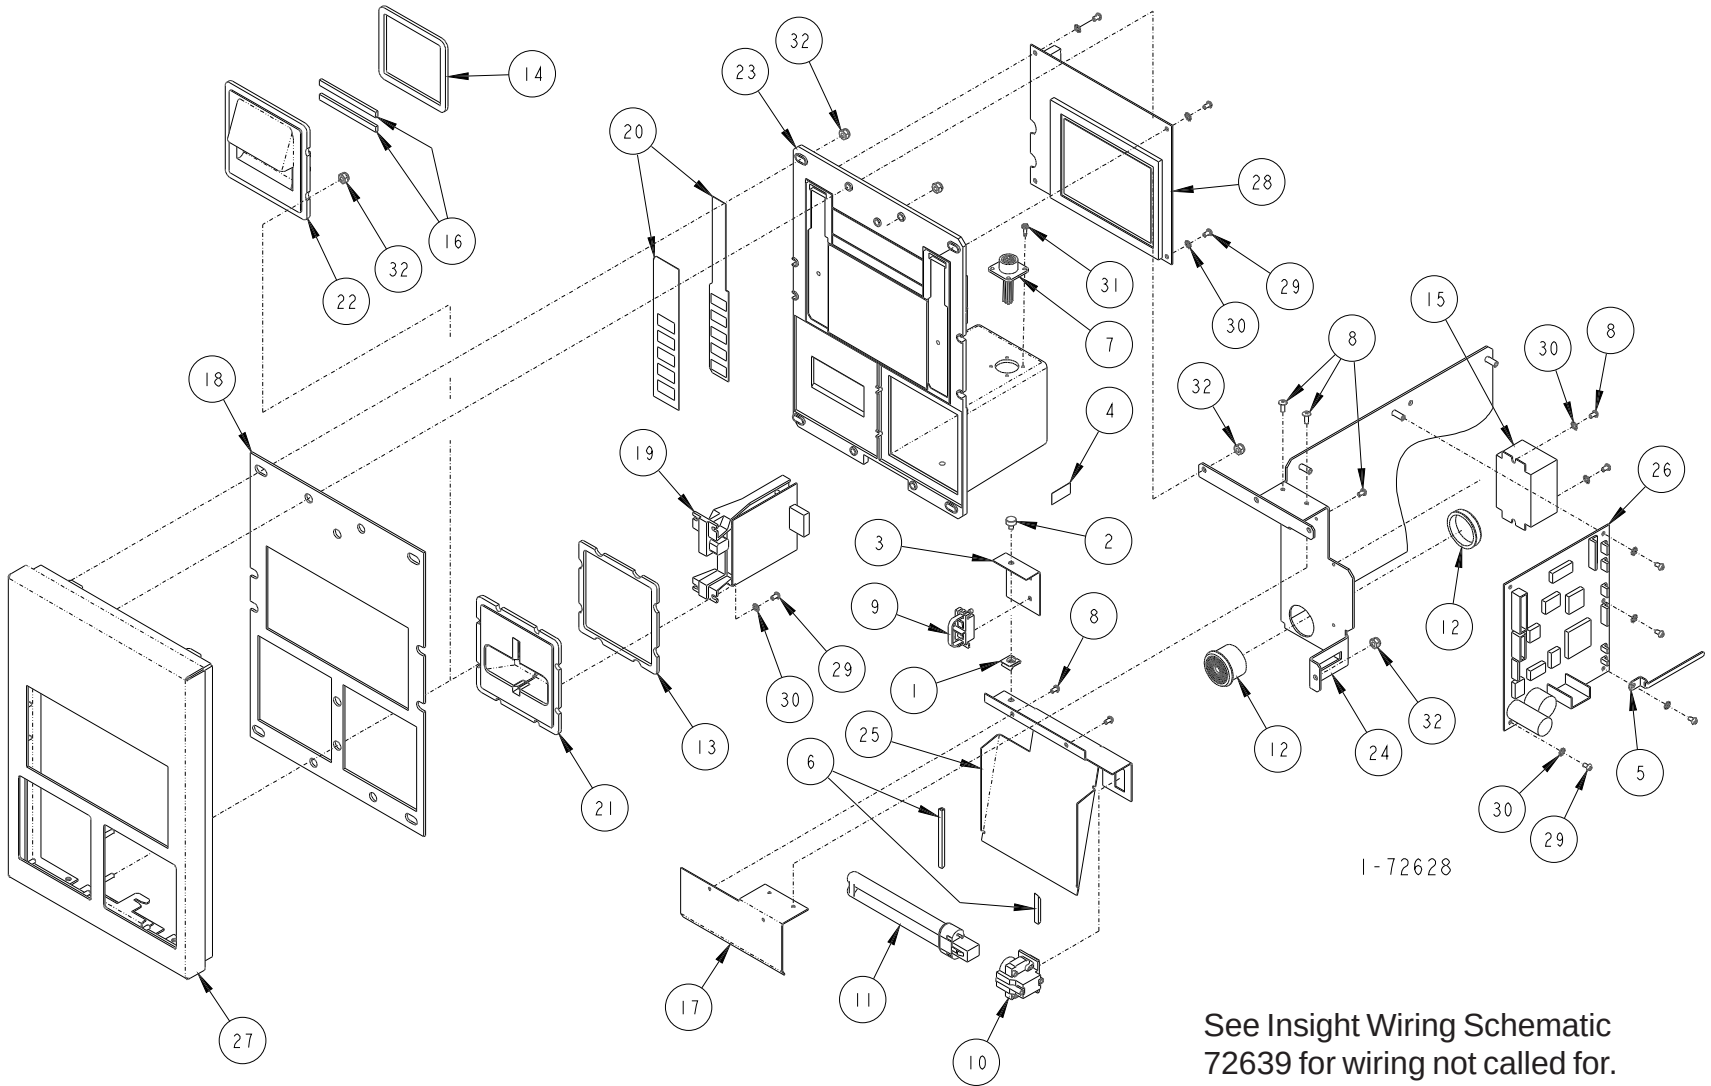

See Insight Wiring Schematic
72639 for wiring not called for.


45" INSIGHT DIAL ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	4-130449	#8-32 "U" Nut	19	<u>Card Reader Kit (Includes Items #13 & 18))</u>		27	<u>Graphic DPT Dial Weld Assembly</u>	
2	1-131110	Thumb Screw				422392-1		Cash/Card
3	1-132849	Backlight Access Bracket	320922-5		Card	422292-2		Card Only
4	1-132947	Product Registration Label	320922-6		Card/Cash			
5	3-228918	Cable Clamp				28	1-422448	Graphic DPT Display
6	5-229425	Edge Protector	20	<u>Softkey Keypad Kit (Includes Item #18)</u>		29	88-50021	#6-32 x 1/4" Long Phillips Round Head Machine Screw
7	230618-1	Internal Card Reader Harness Assembly	320922-3		Card			
8	2-230689	#6 x 3/8" Long Phillips Head Self Tapping Screw	320922-4		Card/Cash	30	03-50762	#6 Shakeproof Lockwasher
9	1-232120	Lampholder Support	21	<u>Card Reader Bezel Kit (Includes Items #13 & 18)</u>		31	20-55392	#4 x 3/8" Long Hex Head Self Tapping Screw
10	1-232121	Lampholder	320922-7		Card	32	04-55531	#8-32 Nylon Insert Locknut
11	1-232122	Light	320922-8		Card/Cash			
12	1-232236	Buzzer						
13	1-233564	Card Reader Cushion	22	320922-9	Cash Acceptor Shield Kit (Includes Items #14 & 18)			
14	1-233565	Cash Shield Cushion						
15	<u>Ballast Assembly</u>		23	<u>Lexan Window Kit (Includes Items #4, 13, 14, 18 & 20)</u>				
	231193-4	120Volt	320922-1		Card			
	231193-5	240 Volt 50 Cycle	320922-2		Card/Cash			
	231193-6	240 Volt 60 Cycle						
16	33-317638	Cushion	24	422309-1	DPT Slide/PCB Bracket Assembly			
17	1-320693	Backlight Support Bracket	25	1-422311	Backlight Lampholder/ Reflector			
18	1-320764	DPT Dial Cushion	26	1-422335	Graphic DPT Board Assembly			

For complete Graphic DPT Dial Assembly order: (Doesn't Include Ballast)

422287-4 Card Only - Upper Right
 422287-5 Card Only - Upper Left
 422287-6 Card - Upper Right, Cash - Lock/Non-Lock
 422287-7 Card - Upper Left, Cash - Lock/Non-Lock

DIAL & PRINTER ASSEMBLY

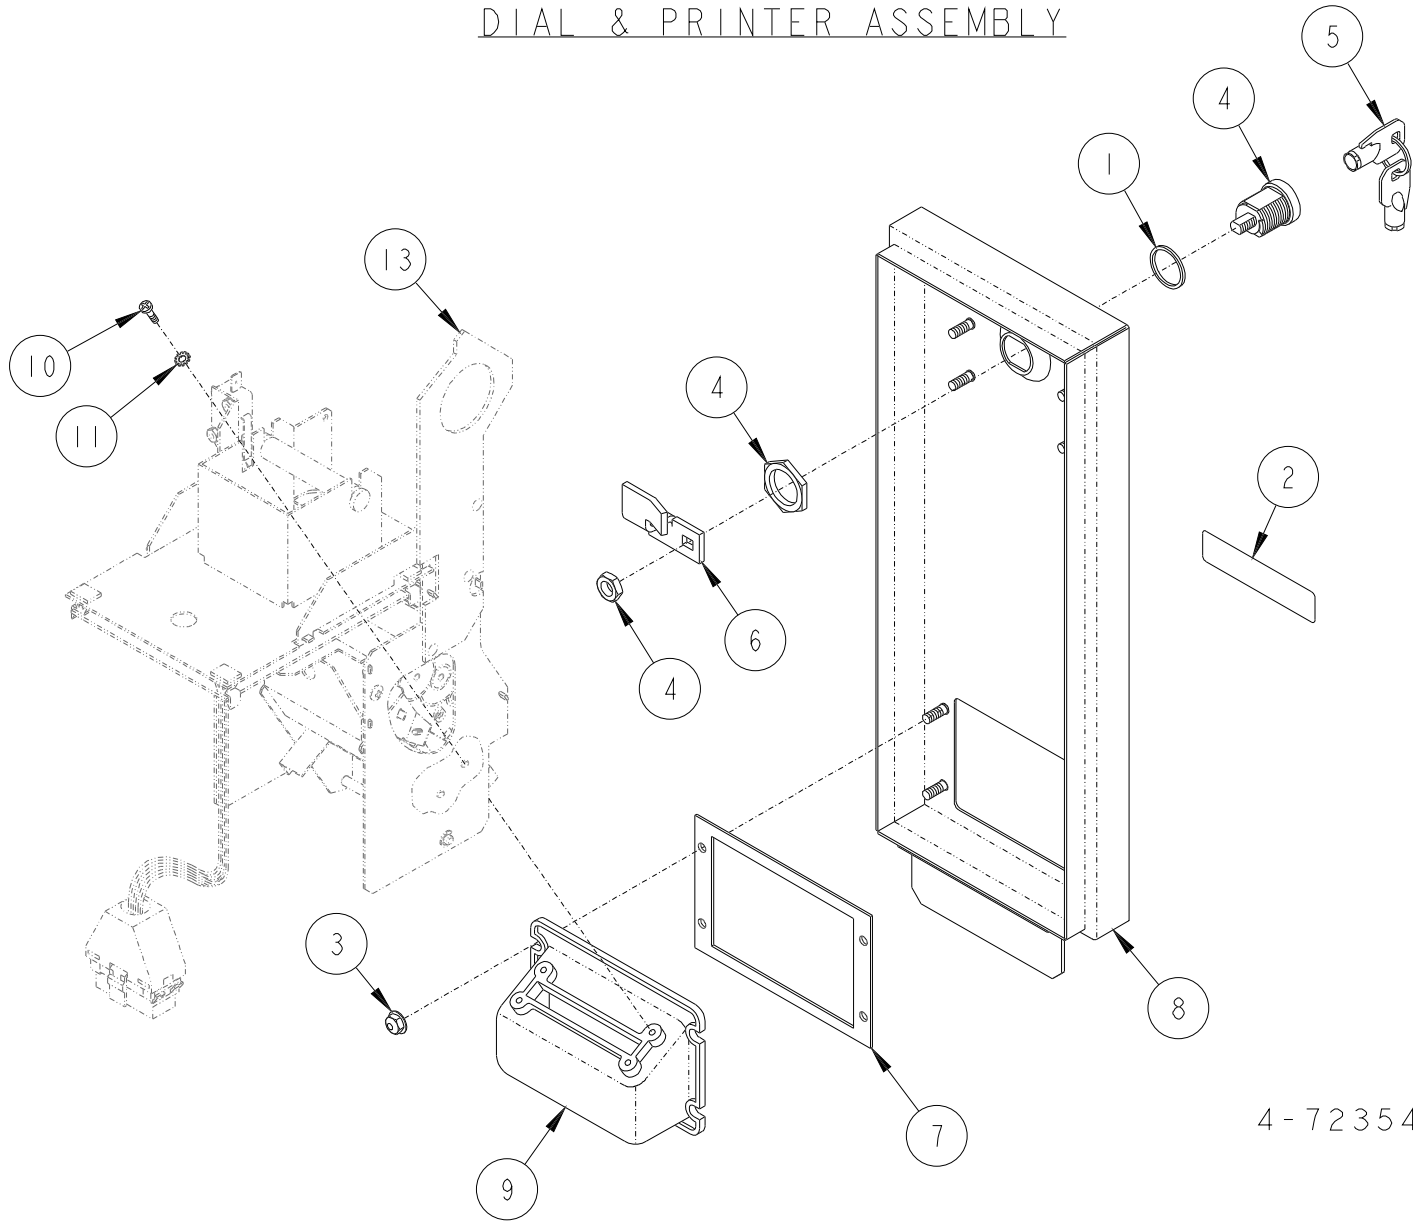

4 - 72354


DIAL PRINTER ASSEMBLY PREMIER & ROW

ITEM NO.	PART NO.	DESCRIPTION
1	2-127656	Lock Gasket
2	1-132808	Decal (Pull Receipt Firmly)
3	1-228671	Capped Washer Lock Nut
4	1-231841	Waterproof Lock (Includes Item #5)
5	2-231841	Tubular Key (TPX 88)
6	1-232108	Lock Cam
7	1-232993	
8	<u>Printer Dial Weld Assembly</u>	
	421101-2	Premier & Euro
	421101-3	TCSA
9	1-421105	Printer Bezel
10	88-50021	#6-32 x 1/4" Long Phillips Head Machine Screw
11	03-50761	#4 Shakeproof Lockwasher

For complete Tear Bar Printer Assembly order:

421850-2 (No Dial)

GRAPHIC PRINTER DIAL ASSEMBLY (KEYPAD & WITHOUT DEBIT)

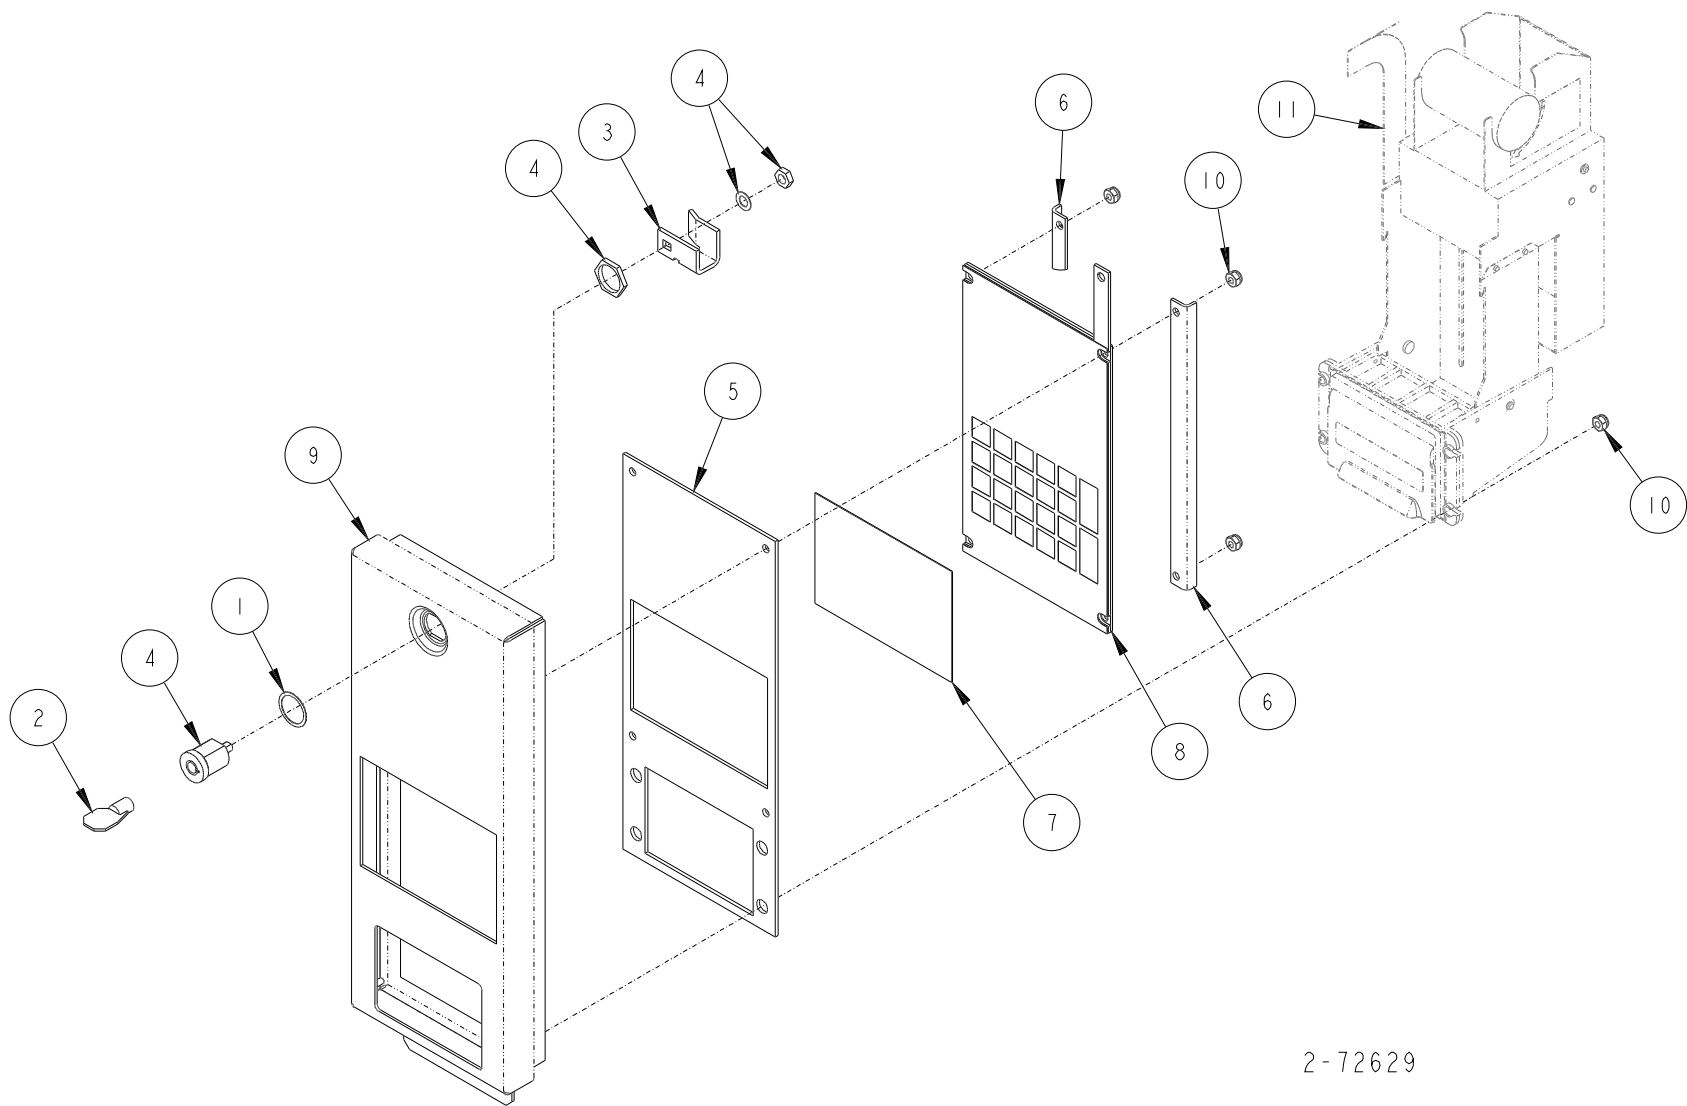


2-72629

GRAPHIC PRINTER DIAL ASSEMBLY (KEYPAD & WITHOUT DEBIT)

ITEM NO.	PART NO.	DESCRIPTION
1	2-127656	Lock Gasket
2	2-231841	Waterproof Lock Key
3	1-232959	Lock Cam
4	232962-2	Lock Assembly (Includes Items 1, 2 & 3)
5	3-233042	Printer Dial Cushion
6	1-233540	Keypad Plate Brace
7	1-233613	Printer Keypad Decal (Converting to graphics no keypad)
8	320922-12	Non Debit Keypad Overlay Kit
9	422238-3	Graphic Printer Dial Weld Assembly
10	04-55531	#8-32 Nylon Insert Lock Nut
11	<u>For parts callout of Printer Assembly see Printer Manual Form 5121 Drawing # 72631.</u>	

For complete Graphic Printer Dial Assembly order: 320529-2

GRAPHIC PRINTER DIAL ASSEMBLY
(DEBIT)

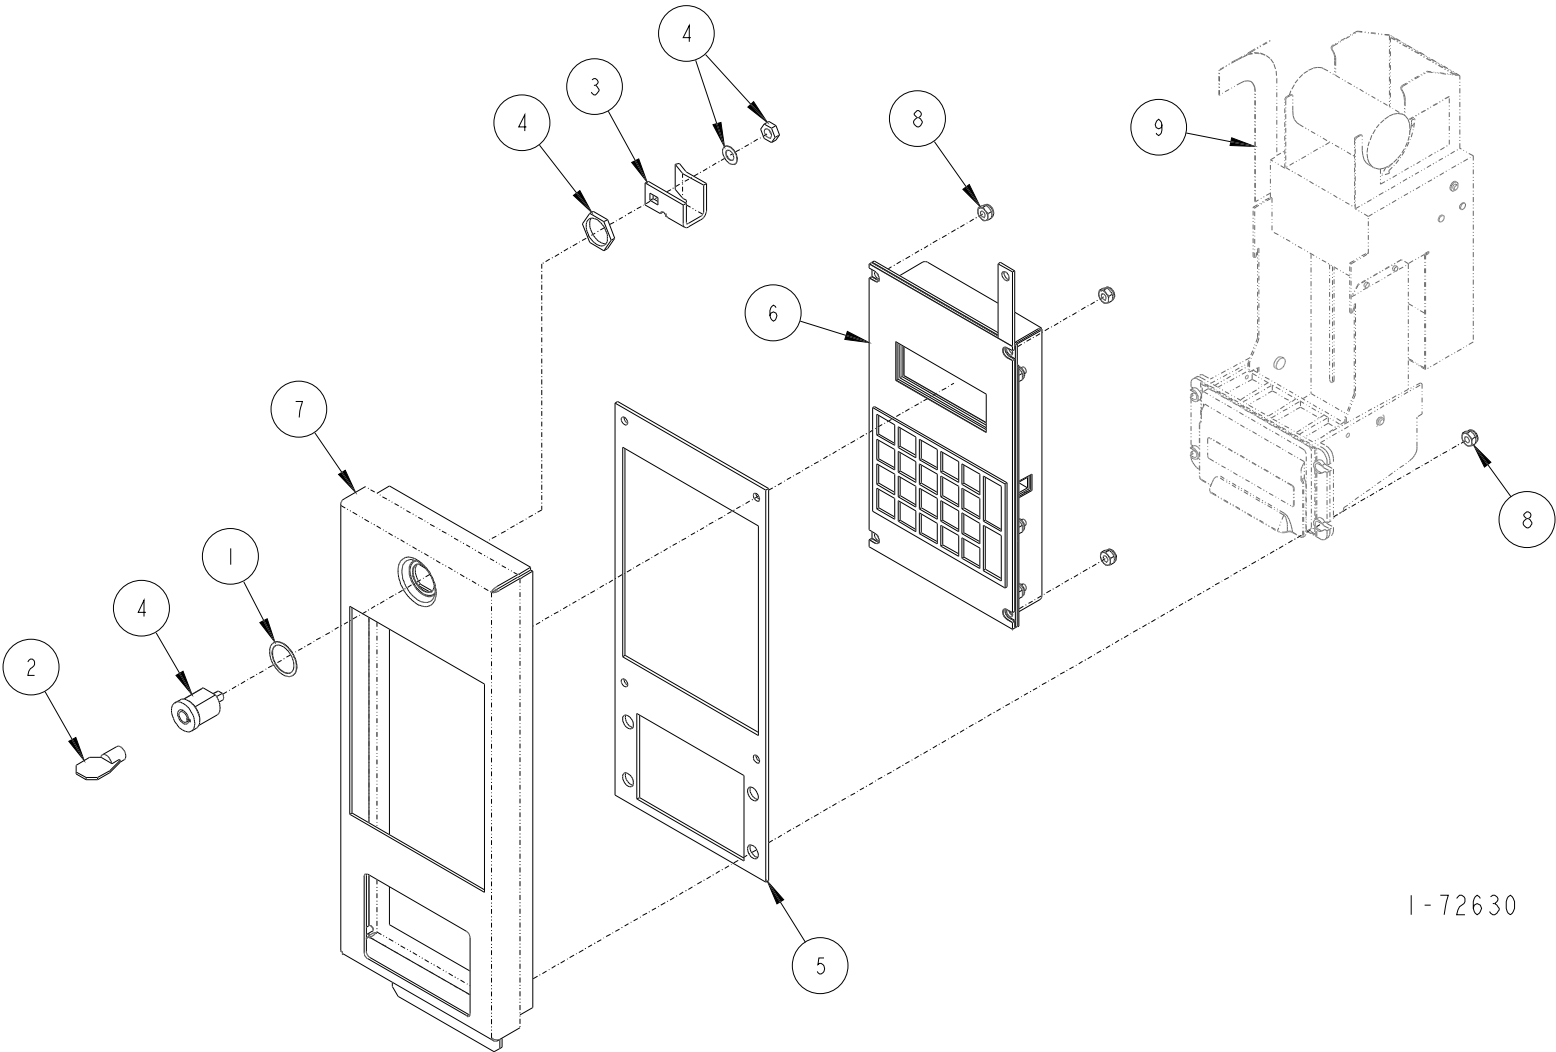


1-72630

GRAPHIC PRINTER DIAL ASSEMBLY (DEBIT)

ITEM NO.	PART NO.	DESCRIPTION
1	2-127656	Lock Gasket
2	2-231841	Waterproof Lock Key
3	1-232959	Lock Cam
4	232962-2	Lock Assembly (Includes Items 1, 2 & 3)
5	<u>Printer Dial Cushion</u>	
	1-233042	Keypad & Printer Opening
	2-233042	Printer Opening
6	320528-1	Debit Assembly
7	<u>Graphic Printer Dial Weld Assembly</u>	
	422238-1	Keypad & Printer
	422238-2	Printer Only
8	04-55531	#8-32 Nylon Insert Lock Nut
9	<u>For parts callout of Printer Assembly see Printer Manual Form 5121 Dwg. 72631.</u>	
	<u>For complete Graphic Printer Dial Assembly order 320529-1.</u>	

30" DPT BOARD SUPPORT ASSEMBLY

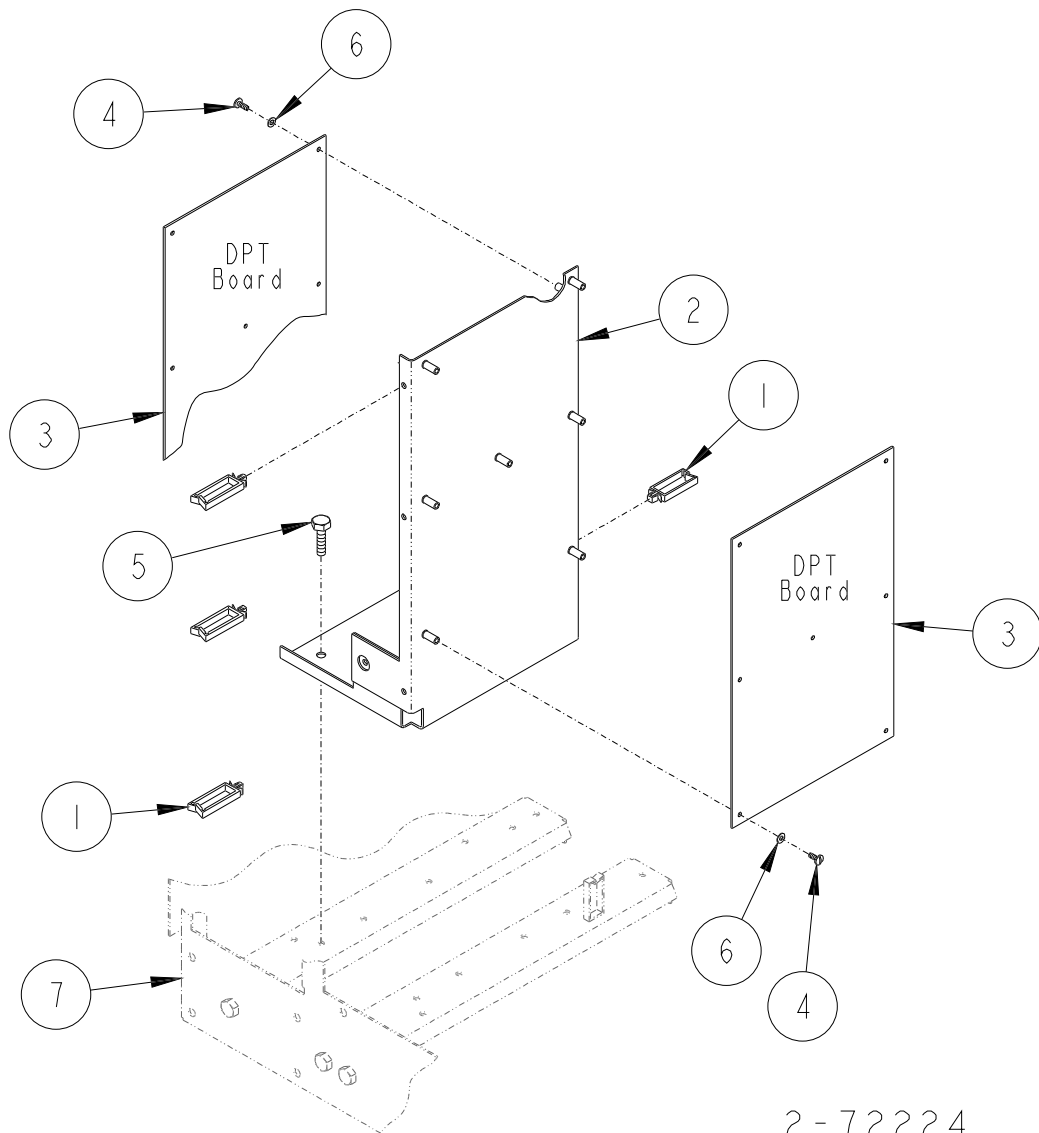


2-72224

30" DPT BOARD SUPPORT ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION
1	1-132718	Cable Retainer
2	319627-1	DPT Board Support Assembly
3	<u>DPT Board Assembly</u>	
	420929-1	Paper Cutter
	420929-2	TCS "A"
	420929-3	Paper Cutter (Gasboy)
	420929-4	Tear Bar Printer
	420929-5	Tear Bar Printer (Gasboy)
	420929-8	Hebrew
	550-314950	Eprom (JP Prefixed Software)
	421844-1	Paper Cutter (Debit)
	421844-2	Tear Bar Printer (Debit)
	662-314950	Eprom (MT Prefixed Software)
	1-422335	InSight
4	92-50021	#6-32 x 3/8" Long Phillips Round Head Screw
5	69-55392	1/4 x 1/2" Long P-K Self Tapping Screw
6	03-50761	#6 Shakeproof Lockwasher
7	<u>For parts call out of Head Assembly see 73870.</u>	
<u>Reference for Tokheim internal use only:</u>		
	319630	Head Assembly (Premier)
	421912	Head Assembly (TCSA)

45" DPT SLIDE SUPPORT ASSEMBLY (NOT USED WITH CASH ACCEPTOR)

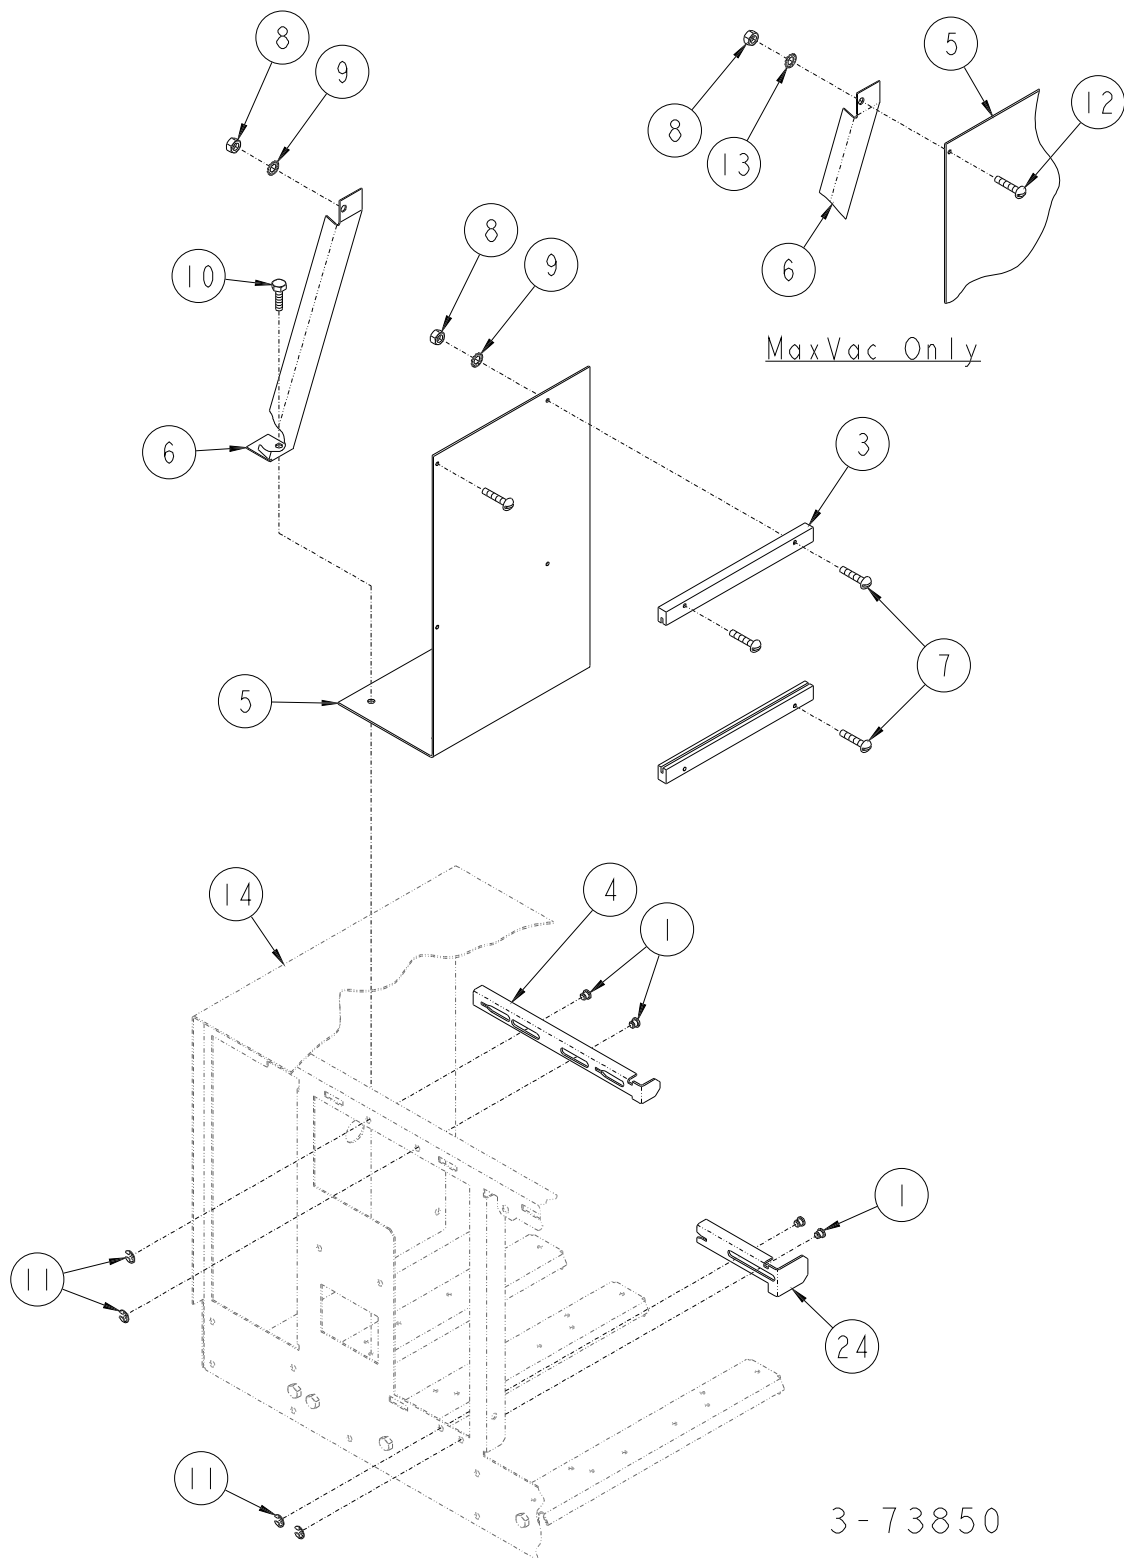

3-73850

45" DPT SLIDE SUPPORT ASSEMBLY

ITEM NO.	PART NO.	DESCRIPTION
1	2-130330	Pivot Pin
2	1-231850	DPT Latch Bracket (Bottom)
3	1-231873	Vault Slide Retainer
4	1-319414	DPT Latch Bracket (Top)
5	1-319499	Slide Support
6	1-421192	Slide Support Brace
7	100-50001	#6-32 x 3/4" Long Round Head Machine Screw
8	03-50211	#6-32 Hex Nut
9	21-50761	#6 Shakeproof Lockwasher
10	10-51491	#14 x 1/2" Long Hex Head P.K. Self Tapping Screw
11	06-52482	Retaining Ring
12	96-50001	#6-32 x 1/2" Long Round Head Machine Screw
13	03-50762	#6 Shakeproof Lockwasher
14	<u>For parts call out of Head Assembly see 73829.</u>	

Reference for Tokheim internal use only:

319504	Slide Support Assembly
319393	Head Assembly

1 X 5 KEYPAD OVERLAY

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
<u>Arco</u>		<u>Exxon</u>	
67-132753	H422B	64-132753	H426B
<u>Canada</u>		65-132753	H426B
9-132753	H422B "Obsolete"	<u>Goode Omega</u>	
12-132753	H322B-RB3 (Use 14-132753)	26-132753	H422B-R
14-132753	H322B-RB3 (Use 3-132830)	<u>Kocolene</u>	
3-132830	H322B-RB3	61-132753	H424B & H322B-RB5 Side "A"
<u>Chevron</u>		62-132753	H424B & H322B-RB5 Side "B"
20-132753	H422B	<u>Latin America</u>	
23-132753	H426B	69-132753	H322B-RB3 (Terpel)
24-132753	H422B	<u>Love's Market</u>	
35-132753	H426B (Jobbers) "Obsolete"	27-132753	H422B
<u>Clark Oil</u>		28-132753	H322B-RB5
29-132753	H422B & H322B-RB3	<u>Marathon</u>	
<u>Coastal Mart</u>		6-132753	H422B (Use 51-132753)
14-132753	H422B (Use 3-132830)	7-132753	H422B (Use 52-132753)
3-132830	H422B	42-132753	H424B Side "A" (Use 53-132753)
<u>Conoco</u>		43-132753	H424B Side "B" (Use 54-132753)
10-132753	H422B (Use 5-132830)	51-132753	H422B Side "A"
5-132830	H422B	52-132753	H422B Side "B"
<u>Curts Oil</u>		53-132753	H424B Side "A"
66-132753	H322B-RB5	54-132753	H424B Side "B"
<u>Emro</u>		70-132753	H426B
8-132753	H422B		

1 X 5 KEYPAD OVERLAY

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
<u>Phillips</u>		<u>Super America (Continued)</u>	
3-132753	H422B (Use 15-132753)	58-132753	H422B (87-89-92 Octane)
15-132753	H422B	59-132753	H422B (87-90-93 Octane)
<u>Pilot Oil</u>		9-132830	H422B (93-89-87 Octane)
11-132753	H422B (Use 6-132830)	<u>Terpel (Colombia)</u>	
25-132753	H422B	69-132753	H322B-RB3
6-132830	H422B	<u>Texaco</u>	
<u>Shell</u>		5-132753	H422B (Use 21-132753 or 22-132753)
40-132753	H426B	21-132753	H422B Side "A"
41-132753	H422B	22-132753	H422B Side "B"
55-132753	H424B Side "A"	7-132830	H424B Side "A"
56-132753	H424B Side "B"	8-132830	H424B Side "B"
<u>Sunoco</u>		<u>Thornton Oil</u>	
18-132753	H322B-RB5	36-132753	H422B
<u>Super America</u>		37-132753	H424B
19-132753	H422B (Use 50-132753)	44-132753	H424B
30-132753	H322B (K-1) (Use 48-132753)	<u>Tokheim Corporation</u>	
31-132753	H322B (Diesel) (Use 49-132753)	2-132753	H422B
34-132753	H422B (Use 50-132753)	4-132753	H422B (Use 17-132753)
48-132753	H322B K1	13-132753	H322B-RB5
49-132753	H322B (Diesel)	16-132753	H322B-RB5 (Use 4-132830)
50-132753	H422B (87-89-93 Octane)	17-132753	H422B (Use 2-132830)
57-132753	H422B (87-90-92 Octane)		


1 X 5 KEYPAD OVERLAY

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
<u>Tokheim Corporation (Continued)</u>			
32-132753	H428B (Use 60-132753 or 63-132753)		
33-132753	H311B		
60-132753	H428B Side "A"		
63-132753	H428B Side "B"		
2-132830	H422B		
4-132830	H322B-RB5		
<u>Total Petroleum</u>			
38-132753	H424B (Use 46-132753 or 47-132753)		
39-132753	H422B (Use 45-132753)		
45-132753	H322B		
46-132753	H424B		
47-132753	H424B		
<u>W.B. Goode</u>			
26-132753	H422B		

1-71145

 For your notes!

KEYPAD, OVERLAY & DECAL ASSEMBLY

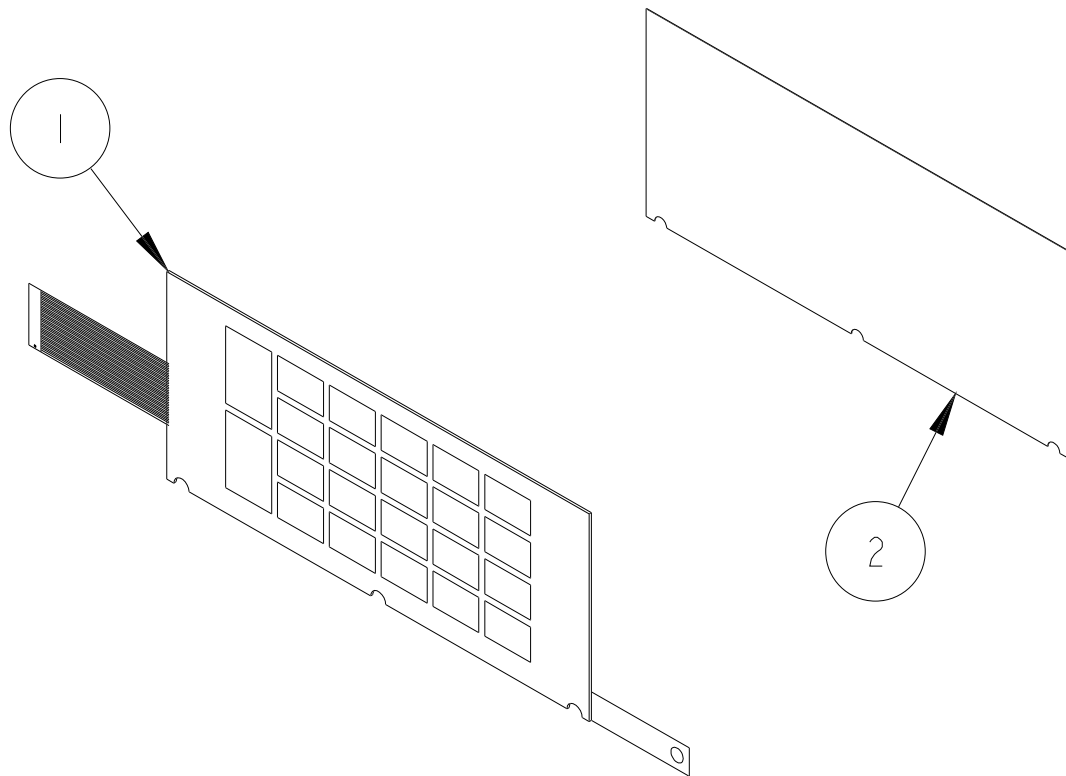

4 - 7 1 1 4 2

DPT KEYPAD OVERLAY

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
1		<u>Amoco (Continued)</u>	
320131-3	Options Keypad & Cushion Assembly	11-232840	Single/Dual Price/DPT Cash/Card (CDF)
		20-232840	Single/Dual Price
2		21-232840	Single/Dual Price/DPT Card/Cash Acceptor
<u>Abu Dhabi</u>		59-232840	Single/Dual Price/Speaker
78-232104	Use 51-232840	60-232840	Single/Dual Price/DPT Card/Speaker
51-232840	Single Price/Preset	61-232840	Single/Dual Price/DPT Card/Cash Acceptor/Speaker
<u>Amerada Hess</u>		62-232840	Single/Dual Price/DPT Cash Acceptor/Speaker
55-232860	DPT	63-232840	Single/Dual Price/DPT Cash Acceptor
<u>Amoco</u>		87-232840	Single/Dual Price/DPT Card/Speaker/Pump Stop
2-232104	Use 11-232840	34-232860	Single/Dual Price/DPT Card
21-232104	Use 20-232840	39-232860	Single/Dual Price/DPT Card (New Jersey)
22-232104	Use 4-232840	<u>Arco</u>	
23-232104	Use 21-232840	33-232383	Use 93-232840
24-232104	Dual Price/DPT Cash/Card "Obsolete"	5-232795	Debit, DPT
45-232104	Use 21-232104	93-232840	Single Price/DPT Card/Speaker
80-232104	Use 59-232840		
81-232104	Use 60-232840		
82-232104	Use 61-232840		
83-232104	Use 62-232840		
84-232104	Use 63-232840		
21-232383	Use 87-232840		
4-232840	Single/Dual Price/DPT Card		

DPT KEYPAD OVERLAY

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
<u>Army/Airforce</u>		<u>Chevron (Continued)</u>	
05-232104	Single Price "Obsolete"	67-232840	Single Price/DPT
62-232104	Use 33-232383	<u>Citgo</u>	
33-232383	Use 93-232840	94-232104	Use 77-232840
93-232840	Single Price/DPT Card/ Speaker	95-232104	Use 78-232840
<u>Brazil</u>		32-232840	Single Price/Speaker
16-232383	Use 74-232840	77-232840	H426B (Single Price/ DPT/Speaker)
74-232840	Single Price/Preset	78-232840	H422B (Single Price/ DPT/Speaker)
<u>British Petroleum</u>		<u>Coastal Mart</u>	
30-232383	Use 91-232840	48-232104	Use 34-232840
91-232840	Single Price/DPT/Speaker	63-232104	Use 38-232840
<u>Brookshire/Pump Masters</u>		64-232104	Use 39-232840
20-232860	DPT	65-232104	Use 40-232840
<u>Canada</u>		68-232104	Use 43-232840
59-232104	Single Price/Preset/ Speaker "Obsolete"	69-232104	Use 44-232840
<u>Chevron</u>		34-232840	H426B (Single Price/ Speaker)
44-232104	Use 6-232840	38-232840	H426B (Single Price/ DPT/Speaker)
79-232104	Use 58-232840	39-232840	H422B (Single Price/ Speaker)
88-232104	Use 67-232840	40-232840	H422B (Single Price/ DPT/Speaker)
89-232104	Single Price/DPT Yes/No "Obsolete"	43-232840	H422B (Single Price/ Preset)
90-232104	Single Price/DPT Yes/ No/Speaker "Obsolete"	44-232840	H422B (Single Price/ Preset/Speaker)
6-232840	Single Price		
58-232840	Single Price/DPT		

DPT KEYPAD OVERLAY

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
<u>Conoco</u>		<u>Emro (Continued)</u>	
17-232860	DPT/Cash Acceptor/DPT Unattended Location	47-232104	H426B (Single Price/DPT Cash/Speaker) “Not Released”
23-232860	H422B & H424B-RB3 (3+1)(Single Price/DPT/Speaker)	53-232104	Use 99-232104
24-232860	H426B (Single Price/DPT/Speaker)	56-232104	Use 97-232104
Diamond Shamrock		96-232104	Use 79-232840
25-232383	Use 89-232840	97-232104	Use 80-232840
3-232795	Single Price/DPT Card Debit/Speaker	98-232104	Use 81-232840
89-232840	Single Price/DPT Card/Speaker	99-232104	H422B (Dual Price/DPT Card/Cash/Speaker)
<u>Distributor</u>		28-232840	H322B, H422B & H426B (Single Price/Speaker)
18-232104	Use 17-232840	29-232840	H426B (Single Price/Speaker)
61-232104	Use 37-232840	79-232840	H426B (Single Price/DPT Card/Speaker)
17-232840	Dual Price/DPT Card/Speaker	80-232840	H426B (Dual Price/DPT Card/Cash/Speaker)
37-232840	Dual Price/DPT Card CFN	81-232840	H322B, H422B & H426B (Single Price/DPT/Speaker)
<u>Emro</u>		<u>Evergreen Oil</u>	
36-232104	Use 28-232840	18-232840	DPT/Speaker
37-232104	Use 98-232104	53-232840	DPT/Without Car Wash Application
38-232104	Use 29-232840	54-232840	DPT/With Car Wash Application
39-232104	Use 96-232104		
46-232104	H422B (Single Price/DPT Cash/Speaker) “Not Released”		

DPT KEYPAD OVERLAY

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
<u>Exxon</u>		<u>Kocolene</u>	
2-232795	DPT Card Debit/Cash	15-232860	Single Price/DPT/ Speaker
<u>Getty Oil</u>		<u>Kuwait</u>	
68-232840	DPT/Speaker	8-232383	Use 69-232840
<u>Giant Industries</u>		12-232383	Use 72-232840
9-232795	Des	69-232840	Single Price
<u>Graham C-Stores (Badger Oil)</u>		72-232840	Single Price/Preset
13-232383	Use 73-232840	<u>Latin America</u>	
73-232840	Single Price/DPT Card/ Speaker	70-232104	Use 3-232840
<u>Gulf Oil</u>		71-232104	Use 45-232840
43-232860	Single Price/Dpt/Speaker	72-232104	Use 46-232840
<u>Holiday Oil</u>		73-232104	Use 47-232840
13-232860	DPT/Speaker	74-232104	Use 48-232840
<u>Israel</u>		3-232840	Single Price/Preset
<u>Alon Oil (Trigon)</u>		45-232840	Single Price
7-232840	Single Price/DPT Cash/ Card	46-232840	Dual Price/Preset/ Speaker
<u>(Paz Oil)</u>		47-232840	Single Price/Preset/ Speaker
93-232104	Use 76-232840	48-232840	Dual Price/Preset
40-232383	Use 1-232860	<u>Loaf N' Jug (J-8 Equipment Co.)</u>	
76-232840	Dual Price/Dpt Card	27-232860	DPT For Car Wash
1-232860	No DPT	33-232860	DPT Without Car Wash Application
<u>J-8 Equipment Co.</u>		<u>Love's Country Store</u>	
25-232860	DPT/Speaker	18-232104	Use 17-232840

DPT KEYPAD OVERLAY

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
<u>Love's Country Store (Continued)</u>		<u>Marathon (Continued)</u>	
44-232104	Use 6-232840	21-232860	H426B (Single Price/ DPT/Speaker)
6-232840	Single Price		
17-232840	Single Price/DPT Card/ Speaker	<u>Merit Oil</u>	
<u>Marathon</u>		58-232104	Use 36-232840
29-232104	Use 26-232840	65-232104	Use 40-232840
30-232104	Use 98-232104	29-232383	Single Price/DPT Card
31-232104	Use 27-232840	9-232840	H426B (Single Price/ DPT/Speaker)
32-232104	Use 96-232104	36-232840	H426B (Single Price)
96-232104	Use 79-232840	40-232840	H422B (Single Price/ DPT Card/Speaker)
98-232104	Use 81-232840	37-232860	H426B (Single Price/ DPT/Speaker)
1-232383	Use 52-232840	42-232860	H426B (Single Price/ DPT/Speaker)
2-232383	Use 3-232383		
3-232383	Use 53-232840	<u>Mobil</u>	
26-232840	H422B (Single Price/ Speaker)	33-232104	Single Price/Speaker
27-232840	H426B (Single Price/ Speaker)	34-232104	Single Price/DPT Card/ Speaker
52-232840	H422B (Single Price/DPT Card)	35-232104	Single Price/DPT Cash/ Card/Speaker
53-232840	H422B (Single Price/DPT Card/Speaker)	9-232383	Use 9-232840
65-232840	Use 21-232860	57-232840	Single Price/Preset "Portugal"
79-232840	H426B (Single Price/DPT Card/Speaker)	<u>Nigeria</u>	
81-232840	H422B (Single Price/DPT Card/Speaker)	4-232383	Use 54-232840
		54-232840	Single Price/Preset

DPT KEYPAD OVERLAY

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
<u>Pakistan</u>		<u>S-M Petroleum/Quick Pay</u>	
18-232383	Use 84-232840	52-232860	DPT
84-232840	Single Price/Preset	<u>Seigle Oil</u>	
<u>Philippines</u>		46-232860	Dual Price/DPT/Speaker
66-232104	Use 41-232840	<u>Shell</u>	
41-232840	Single Price	11-232383	Use 71-232840
<u>Phillips</u>		20-232383	Use 86-232840
12-232104	Use 8-232840	22-232383	Use 4-232975
13-232104	Use 13-232840	34-232383	Use 94-232840
75-232104	Use 49-232840	35-232383	Use 95-232840
8-232840	H422B (Single Price/DPT Card/Speaker)	36-232383	Use 96-232840
13-232840	H426B (Single Price/DPT Card)	37-232383	Use 97-232840
14-232840	H426B (For Use With Verifone)	38-232383	Use 98-232840
16-232840	H422B (For Use With Verifone)	39-232383	Use 99-232840
49-232840	H422B (Single Price/DPT Card/Speaker)	4-232795	Single Price/DPT Debit/Speaker
<u>Pilot Oil</u>		28-232840	Single Price/Speaker
5-232840	DPT	71-232840	Single Price/DPT/Speaker
<u>Rebel Oil</u>		86-232840	Single Price/Preset "Kenya"
35-232860	H322B & H422B (DPT)	94-232840	DPT Card/Preset "Brazil"
36-232860	H426B (DPT)	95-232840	DPT Card/Preset "Latin America"
<u>Rich Oil</u>		96-232840	DPT "Latin America"
12-232860	Single Price		

DPT KEYPAD OVERLAY

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
<u>Shell (Continued)</u>		<u>Sunoco (Continued)</u>	
97-232840	DPT Cash/Card/Preset/ Speaker "Latin America"	28-232383	Use 90-232840
98-232840	DPT Card/Preset/ Speaker "Latin America"	90-232840	Single Price/DPT/ Speaker
99-232840	DPT Cash/Card/Preset/ Speaker "Latin America"	<u>Superamerica</u>	
<u>Sinclair Oil</u>		54-232104	Use 5-232840
35-232860	Single Price/DPT	14-232383	Use 10-232840
<u>Skyhaus</u>		5-232840	Single Price/DPT Card/ Speaker
9-232860	Dual Price/DPT/Speaker	10-232840	Single Price/Max Vac
<u>South Africa</u>		12-232840	Single Price
85-232104	Use 64-232840	<u>Swiftly</u>	
64-232840	Single Price/Preset/ Speaker	61-232104	37-232840
<u>Southland</u>		37-232840	Dual Price/DPT
25-232104	Use 22-232840	<u>Syria</u>	
26-232104	Use 23-232840	87-232104	Use 66-232840
55-232104	Use 35-232840	17-232383	Use 83-232840
22-232840	H422B (Single Price/ DPT/Speaker)	66-232840	Single Price/Preset
23-232840	H426B (Single Price/ DPT/Speaker)	83-232840	Single Price/Last Sale/ Preset
35-232840	Single Price/Speaker	<u>Terrible Herbst</u>	
<u>Stop-N-Save</u>		22-232860	Single Price/DPT/ Speaker
26-232860	DPT	<u>Texaco</u>	
<u>Sunoco</u>		15-232104	Use 14-232840
77-232104	Use 28-232383	16-232104	Use 15-232840
		17-232104	Use 16-232840

DPT KEYPAD OVERLAY

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
<u>Texaco (Continued)</u>		<u>Tokheim Corporation</u>	
18-232104	Use 17-232840	6-232104	H426B (Dual Price/DPT Cash/Card/Speaker) "Obsolete"
19-232104	Use 18-232840	27-232104	Use 24-232840
20-232104	Use 19-232840	28-232104	Use 25-232840
14-232840	H426B & H428B (Single Price/DPT/Speaker)	40-232104	Use 30-232840
15-232840	H426B & H428B (Dual Price/DPT/Speaker)	41-232104	Use 31-232840
16-232840	H426B (Single Price/DPT/Speaker)	42-232104	Use 32-232840
17-232840	H426B (Dual Price/DPT/Speaker)	43-232104	Use 33-232840
18-232840	H426B & H428B (Cash Only)	44-232104	Use 6-232840
19-232840	H426B & H428B (Cash/Credit)	60-232104	Use 2-232840
<u>Thailand</u>		61-232104	Use 37-232840
14-232104	Use 57-232104	67-232104	Use 42-232840
57-232104	Use 19-232383	91-232104	Use 68-232840
5-232383	Use 19-232383	92-232104	Use 75-232840
19-232383	Use 85-232840	6-232383	Use 55-232840
85-232840	Single Price	7-232383	Use 56-232840
<u>Thornton Oil</u>		24-232383	Use 88-232840
15-232104	Use 14-232840	2-232840	H426B (Single Price)
17-232104	Use 16-232840	6-232840	H422B (Single Price)
14-232840	H426B (Single Price/DPT/Speaker)	24-232840	H426B (Dual Price/Preset)
16-232840	H422B & H426B (Single Price/DPT/Speaker)	25-232840	H426B (Single Price/Preset)
		30-232840	H426B (Dual Price/Preset/Speaker)

DPT KEYPAD OVERLAY

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
<u>Tokheim Corporation (Continued)</u>		<u>Total (Continued)</u>	
31-232840	H426B (Single Price/ Preset/Speaker)	26-232383	Use 43-232383
32-232840	H426B (Single Price/ Speaker)	27-232383	Use 42-232383
33-232840	H426B (Dual Price/ Speaker)	42-232383	Use 2-232860
37-232840	H426B (Dual Price)	43-232383	Use 3-232860
42-232840	H422B (Single Price/ Speaker)	26-232840	H422B (Single Price/ Speaker)
44-232840	H422B (Single Price/ Preset/Speaker)	27-232840	H426B (Single Price/ Speaker)
55-232840	H426B (Single Price/ DPT/Speaker)	32-232840	H426B (Single Price/ Speaker)
56-232840	H422B (Single Price/ DPT/Speaker)	42-232840	H422B & H424B (Single Price/Speaker)
68-232840	H422B (Dual Price/DPT/ Speaker)	2-232860	H422B & H424B (Single Price/DPT/ Speaker)
75-232840	H426B (Dual Price/DPT/ Speaker)	3-232860	H422B (Single Price/ DPT/Speaker)
88-232840	H422B (Single Price/ Preset)	41-232860	H426B (Single Price/ DPT/Speaker)
3-232860	H422B (Single Price/ DPT/Speaker)	<u>Turkey</u>	
41-232860	H426B (Single Price/ DPT/Speaker)	76-232104	Use 50-232840
<u>Total</u>		50-232840	Dual Price/Preset
29-232104	Use 26-232840	<u>Turkey Hill</u>	
31-232104	Use 27-232840	86-232104	Use 65-232840
50-232104	Use 27-232383	10-232795	Use 12-232795
		12-232795	
		65-232840	Dual Price/DPT/Speaker

DPT KEYPAD OVERLAY

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
<u>United Dairy Farmers</u>			
44-232383	Use 4-232860		
4-232860	Single Price/DPT/ Speaker		
<u>Unocal</u>			
32-232383	Use 92-232840		
11-232795			
92-232840	H426B (Single Price/ Speaker)		
29-232860	H422B & H424B (Single Price/Speaker)		
30-232860	H426B (Single Price/ Speaker)		
31-232860	H426B (Single Price)		
32-232860	H426B (Single Price/ DPT/Speaker)		
<u>Unover</u>			
5-232860	Single Price/DPT		
6-232860	Single Price		
7-232860	Single Price/Speaker		
8-232860	Single Price/DPT/ Speaker		
10-232860	Single Price/DPT/ Emergency Stop		
11-232860	Single Price/DPT/ Emergency Stop		
4-71142			