

IMPORTANT: OPW products should be used in compliance with applicable federal, state, provincial, and local laws and regulations. Product selection should be based on physical specifications and limitations and compatibility with the environment and materials to be handled. OPW MAKES NO WARRANTY OF FITNESS FOR A PARTICULAR USE. All illustrations and specifications in this literature are based on the latest product information available at the time of publication. OPW reserves the right to make changes at any time in prices, materials, specifications and models and to discontinue models without notice or obligation.



OPW 12VW Vacuum-Assist Nozzle (12VW)



12VW With Vapor Valve Designed For The Following Vacuum-Assist Systems:

- Dresser/Wayne Wayne®Vac
- Gilbarco® VaporVac®

Table of Contents:

1. Features
2. Certifications and Listings
3. Ordering Specifications
4. Repair and Replacement Parts
5. OPW 6 Newgard™ Two-Piece Hand Insulator
6. Instruction Sheets
7. How to Use Nozzle Guide

8. Troubleshoot Nozzle

Features

- Available and easy-to-change replacement parts.
- Feel and ease-of-use similar to conventional nozzles.
- One hand operation - easy to locate and use hold-open clip.
- Self-serve prepay feature.
- Vapor Escape Guard (VEG) for improved vapor collection.
- Nozzle weight 3.1 lbs.
- Popular two-piece hand insulator design.

Construction/Design

- Aluminum coaxial spout with stainless ferrule tip with UL required shear groove.
- Cast aluminum body UL listed to 50 PSI (3.45 bar) pressure.
- Internal vapor path.
- Low product and vapor path pressure drop.
- Main poppet opens against the product flow for added safety.
- Lever-activated vapor valve.
- 100% Factory Tested.
- Directly interchangeable with 11VAI-69.

Certifications and Listings

Certifications and Listings	Dresser/Wayne Wayne®Vac	Gilbarco® VaporVac®
CARB initial certification date	April 2000	July 2000
CARB certification number	G-70-153*	G-70-150*
	G-70-199**	G-70-199**
UL Listing	MH1942	MH1942

* Latest version.

** Approval for 350ml liquid retention requirement.

Ordering Specifications

Hand Insulator Color	12VW New Unleaded
	with hold-open rack
Green	0100
Silver	0200
Red	0300
Black	0400
Blue	0500
Gold	0750
Yellow	0900
Bare	0000
Bright Red	3300


Note: For other colors, contact customer service. Minimum lot sizes and extended lead times may be applicable.

Note: The hold-open rack is easily removed for self-service applications.

Ordering: For complete ordering information, use both the product number and the 4-digit code number shown above.

Example: OPW 12VW-0500 blue hand insulator, unleaded, hold-open rack.

Typical Installation

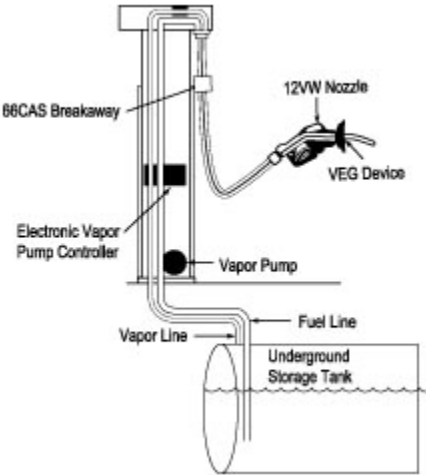

Repair and Replacement Parts

Product	Description	Part #
Spout Kit	Replacement aluminum unleaded spout with VEG	5VW-2000
VEG Kit	Replacement VEG and hardware	3VW-0450
Hand Insulators	Replacement hand insulators and instructions	See OPW 6 Newgard Tab

OPW 6 Newgard Two-Piece Hand Insulator



2nd Piece



Ordering Specifications

Hand Insulator Color	12VW New Unleaded, with Hold-open Rack
----------------------	--

Green 6AG-5100

Silver 6AS-5200

Red 6AR-5300

Black 6ABL-5400

Blue 6AB-5500

Gold 6AGL-5750

Yellow 6AY-5900

Bright Red 6ARC-5330

Instruction Sheet - English/French

[H15890PAF.pdf](#)

Instruction Sheet- English/Spanish

[H15890PAE.pdf](#)

How to Guide - English

[HowH15893PAE.pdf](#)

How to Guide - French

[H15893PAF.pdf](#)

How to Guide - Spanish

[H15893PAS.pdf](#)

Troubleshooting Guide - English

[Tr_ShtH15892PAE.pdf](#)

Troubleshooting Guide - French

[H15892PAF.pdf](#)

Troubleshooting Guide - Spanish

[H15892PAS.pdf](#)

